
SMARTEYE ***NETWORK READER*** ***PRODUCTS***

S-netx - Single Reader
T-netx - Dual Reader
Multi-netx - 8 Readers

Standard Ethernet or
Power over Ethernet Interface
802.3af (48v)

USER MANUAL

Revision 8



related documents:

SMARTEYE Sender/Receiver Reader User Manual

The material in this manual is for informational purposes and is subject to change without notice. Smarteye Corporation assumes no responsibility for any errors which may appear in this manual.

© Smarteye Corporation

SMARTEYE is a registered trademark of Smarteye Corporation.

BELDEN is a registered trademark of Belden CDT Inc.

Printed in U.S.A.

SMARTEYE contact information:

SMARTEYE Corporation
2637 Bond Street
Rochester Hills, MI 48309
Phone: (248) 853-4495 Fax: (248) 853-8539
www.smarteyecorporation.com
Email: support@smarteyecorporation.com

TABLE OF CONTENTS

1.0 Introduction..... 1

2.0 Smarteye Netx Control Unit Features 3

3.0 Smarteye Netx Products Ports and Indicator Lights 3

 3.1 SNETX Ports and Indicator Lights 3

 3.2 TNETX and MULTI-NETX Ports and Indicator Lights 4

4.0 Smarteye Netx Product Installation..... 6

5.0 Power/Wiring 7

 5.1 Power/Wiring for Power over Ethernet 802.3af (48v) – S-netx and T-netx only 7

 5.2 Power/Wiring for T-netx Model SP4051/04..... 7

 5.3 Power/Wiring for Multi-netx Model SP4061/04 and SP4062/02 7

6.0 Communication Line Wiring..... 8

7.0 Reader Wiring and Mounting 8

 7.1 Reader Wiring..... 8

 7.2 Local Reader Mounting (S-netx only)..... 8

 7.3 Remote Reader Mounting (S-netx, T-netx and Multi-netx) 9

8.0 Smarteye Netx Control Units CPU Configuration 9

 8.1 Configuration Legend 9

 8.2 S-netx Switch and Jumper Diagram..... 10

 8.2.1 S-netx Jumper Block J1 – Shield Termination Select..... 11

 8.2.2 S-netx Switches SW1 and SW2 – Auxiliary Port & Control Port Configuration 11

 8.2.3 S-netx Switches SW3, SW4 and SW5 – Not Used 12

 8.2.4 S-netx Switch SW6 – Control Port Configuration - Receiver Select 12

 8.3 T-netx Switch and Jumper Diagram 12

 8.3.1 T-netx Jumper Block J1 – Drain Termination 13

 8.3.2 T-netx Switch SW2 – Control Port Configuration 13

 8.3.3 T-netx Switch SW6 – Control Port Configuration - Receiver Select 14

 8.3.4 T-netx Power Select..... 14

 8.3.5 T-netx Jumper Block 2 14

 8.4 Multi-netx Switch and Jumper Diagram..... 15

 8.4.1 Multi-netx Switch SW2 – Control Port Configuration..... 15

 8.4.2 Multi-netx Switch SW6 – Control Port Configuration - Receiver Select..... 16

 8.4.3 Multi-netx Jumper Block J1 – Port Ground Select..... 16

 8.4.4 Multi-netx Jumper Block J2 17

 8.5 RS485 Line Termination SW2..... 17

 8.6 Terminating RS485 Point-To-Point (Handshake Mode) 17

 8.7 Terminating RS485 Multi-drop (Poll Mode) 18

 8.8 Shield (Drain) Terminations (J1) 19

9.0 Software Configuration 19

9.1 Software Configuration Using the Network Port..... 20

9.1.1 Pre-Assignment of IP address..... 21

9.1.2 DHCP Automatic Assignment of IP address..... 21

9.1.3 Manual Assignment of IP address Using Smarteye Netx Setup Utility Program..... 21

9.1.4 Manual Assignment of IP address using a Web Browser..... 28

9.2 Software Configuration Using the Auxiliary Port 32

9.2.1 Serial configuration Commands 33

9.2.1.1 General Configuration Example..... 34

9.2.1.2 Network Port Configuration Example..... 35

9.2.1.3 Control Port Configuration Example 35

9.2.1.4 Auxiliary Port Configuration Example 36

9.3 Smarteye Netx Control Unit Configuration Parameters 36

9.3.1 Smarteye Netx Control Unit Configuration Parameters - General Configuration 36

Smarteye Netx Control Unit Configuration Parameters - Network Control Port 38

9.3.2 Smarteye Netx Control Unit Configuration Parameters - Serial Control Port..... 40

9.3.3 Smarteye Netx Control Unit Configuration Parameters - Auxiliary Port..... 40

10.0 Monitoring..... 40

10.1 Monitor Commands: 41

10.1.1 HELP – ‘h<cr>’ 42

10.1.2 MONITOR – ‘m<cr>’ 42

10.1.3 INPUT – ‘i<cr>’ 43

10.1.4 OUTPUT – ‘o<cr>’ 43

10.1.5 BOTH – ‘b<cr>’ 43

10.1.6 TIMESTAMP – ‘t<cr>’ 44

10.1.7 PHOTOEYES – ‘p<cr>’ 44

10.1.8 LABEL – ‘l<cr>’ 44

10.1.9 ERROR – ‘e<cr>’ 44

10.1.10 DIAGNOSTIC – ‘d<cr>’ 44

10.1.11 SHOW – ‘s<cr>’ 45

10.1.12 VERSION – ‘v<cr>’ 45

10.1.13 RUNTIME – ‘r<cr>’ 45

10.1.14 EXIT – ‘exit<cr>’ 45

11.0 Smarteye Netx Control Unit Web Pages..... 46

11.1.1 Configuration webpage..... 47

12.0 Power-Up 50

13.0 Communication..... 51

13.1 Ethernet Control Port Operation 51

13.2 Auxiliary Port Operation 51

13.3 Message Protocols Classic (Original) & Full ASCII 51

13.4 Message Conventions for Classic Protocol..... 52

13.4.1 Received Poll 54

13.4.2 Received Commands 54

13.4.3 Messages Transmitted By The Smarteye Netx Control Unit..... 55

13.4.3.1 Online Idle Message..... 55

13.4.3.2 Offline Message 55

13.4.3.3	Label Message.....	56
13.4.3.4	Error Message	56
13.4.3.5	Diagnostic Message	56
13.4.4	Poll Mode	56
13.4.4.1	Summary Of Responses - Poll Mode	57
13.4.5	Handshake Mode	57
13.4.5.1	Summary of Responses - Handshake Mode.....	58
13.4.5.2	Example #1 - Handshake Mode - Normal Operation.....	59
13.4.5.3	Example #2 - Handshake Mode - Abnormal Operation.....	60
13.5	Message Conventions for Full ASCII.....	61
13.5.1	Checksum Calculation Example.....	62
13.5.2	Received Poll.....	63
13.5.3	Received Commands	63
13.5.4	Messages Transmitted By The Smarteye Netx Control Unit.....	64
13.5.4.1	Online Idle Message.....	64
13.5.4.2	Offline Message	64
13.5.4.3	Label Message.....	65
13.5.4.4	Error Message	65
13.5.4.5	Diagnostic Message	65
13.5.5	Poll Mode	65
13.5.5.1	Summary Of Responses - Poll Mode	66
13.5.6	Handshake Mode	66
13.5.6.1	Summary Of Responses - Handshake Mode.....	67
13.5.6.2	Example #1 - Handshake Mode - Normal Operation.....	68
13.5.6.3	Example #2 - Handshake Mode - Abnormal Operation.....	69
14.0	Diagnostic Enable	70
15.0	Error Messages	70
Appendix A	S-netx SP4002 Drawings.....	A-1
A.1	Sender/Receiver Cable Details for Local Mounting Applications – SP1054/01-417.....	A-2
A.2	Sender/Receiver Cable Details for Remote Mount Applications –SP1054/01-418.....	A-3
A.3	S-netx Installation Details No-Power over Ethernet– SP4002/01-420.....	A-4
A.4	S-netx Connection Wiring Details No-Power over Ethernet– SP4002/01-410.....	A-5
A.5	S-netx Installation Details Power over Ethernet – SP4002/02-420.....	A-6
A.6	S-netx Connection Wiring Details Power over Ethernet – SP4002/02-410.....	A-7
A.7	S-netx Auxiliary and Communication Port Wiring Details – SP4002/01-411.....	A-8
Appendix B	T-netx SP4050 Series Drawings.....	B-1
B.1	Sender/Receiver Cable Details – SP1054/01-419.....	B-2
B.2	T-netx Installation Details – SP4050/01-420.....	B-3
B.3	T-netx Connection Wiring Details No-Power over Ethernet– SP4050/01-410.....	B-4
B.4	T-netx Connection Wiring Details Power over Ethernet – SP4050/02-410.....	B-5
B.5	T-netx NEMA-12 Installation Details – SP4051/01-420.....	B-6
B.6	T-netx NEMA-12 Connection Wiring Details 110/220 VAC Power – SP4051/04-410.....	B-7

B.7 T-netx Auxiliary and Communication Port Wiring Details – SP4050/01-411 B-8

Appendix C Multi-netx SP4060 Series Drawings C-1

C.1 Sender/Receiver Cable Details – SP1054/01-424..... C-2

C.2 Multi-netx Installation Details – SP4060/01-420 C-3

C.3 Multi-netx Connection Wiring Details 24VDC– SP4060/01-410 C-4

C.4 Multi-netx NEMA-12 Installation Details 24VDC– SP4061/01-420..... C-5

C.5 Multi-netx NEMA-12 Connection Wiring Details 24VDC– SP4061/01-410 C-6

C.6 Multi-netx NEMA-12 Installation Details 110/220VAC – SP4061/04-420..... C-7

C.7 Multi-netx NEMA-12 Connection Wiring Details 110/220VAC – SP4061/04-410..... C-8

C.8 Multi-netx Auxiliary and Communication Port Wiring Details – SP4060/01-411..... C-9

C.9 Multi-netx Upgrade Kit Installation Details – SP4062/02-201 C-10

1.0 Introduction

Netx platform controller products are Smarteye's latest, RoHS-compliant, reader interface units used to interpret the patented Smarteye label pattern and direct the decoded data to central host control systems or local PLC controllers. Although these new platform control units fully support the RS-485 serial interface mechanism, the primary focus of this product platform is to provide control connectivity over an Ethernet network. There are three offerings in Smarteye Netx product line-up; the S-netx which is a single-reader control unit, the T-netx which provides dual-reader capability, and the Multi-netx which supports up to 8 readers. To the system control engineer, all three units function identically, the only difference being the number of Smarteye readers supported and the corresponding physical footprint of the hardware. Besides the physical mounting difference, only the S-netx and T-netx can support the 802.3af Power-over-Ethernet option at this time due to power limitations,

Wiring costs for Smarteye's Netx Control Units are expected to be substantially less since most plants now have their network infrastructure already in place. Utilizing power over Ethernet further reduces the installation cost by eliminating the need for separate power wiring.

Reader(s) interface to Smarteye Netx Control Units through the reader port(s). The reader senses a pattern of coded bars in the Smarteye label. As a label passes in front of a reader, the coded information is passed along to the Smarteye Netx Control Unit. The Smarteye Netx Control Unit then deciphers the coded information and makes the information available to the control system(s). A typical control system would be a device such as a programmable controller or computer.

Smarteye labels are typically constructed of 12-gauge steel and come in a variety of lengths to suit specific application requirements.

The following is a list of Controller models covered by this manual:

- SP4002/01 – S-netx standard Ethernet interface, 24VDC power
- SP4002/02 – S-netx 802.3af compliant, power over Ethernet interface
- SP4050/01 – T-netx standard Ethernet interface, 24VDC power
- SP4150/01 – T-netx standard Ethernet interface, 24VDC power, SGS 710172, UL 60950-1, CSA C22.2 No. 60950-1
- SP4050/02 – T-netx 802.3af compliant, power over Ethernet interface
- SP4051/01 – T-netx standard Ethernet interface, 24VDC power, NEMA-12
- SP4051/02 – T-netx 802.3af compliant, power over Ethernet interface, NEMA-12
- SP4051/04 – T-netx standard Ethernet interface, 110/220VAC power, NEMA-12
- SP4060/01 – Muti-netx standard Ethernet interface, 24VDC power
- SP4160/01 – Muti-netx standard Ethernet interface, 24VDC power, SGS 710172, UL 60950-1, CSA C22.2 No. 60950-1
- SP4061/01 – Muti-netx standard Ethernet interface, 24VDC power, NEMA-12
- SP4061/04 – Muti-netx standard Ethernet interface, 110/220VAC power, NEMA-12

- SP4062/02 – Muti -netx SEA-8 Upgrade Kit, 110/220VAC power

2.0 Smarteye Netx Control Unit Features

For ease of installation the S-netx is designed to be mounted along with the Smarteye reader assembly and can easily be mounted on the same bracket.


In general, Smarteye network products include the following major features:

- CPU circuit card with power indicators, two serial communication ports, and reader interface circuitry. Cage or spring clamp connectors are provided for connection to reader field wiring and the serial control port. A 9-pin DB-type connector is provided for the auxiliary port.
- Panel Mount or NEMA-12 enclosures (S-netx available in NEMA-12 version only)
- RJ45 connector for Ethernet communication with link and activity LEDs
- Available in power over Ethernet 802.3af (48VDC) (S-netx and T-netx only)

3.0 Smarteye Netx Products Ports and Indicator Lights

3.1 SNETX Ports and Indicator Lights




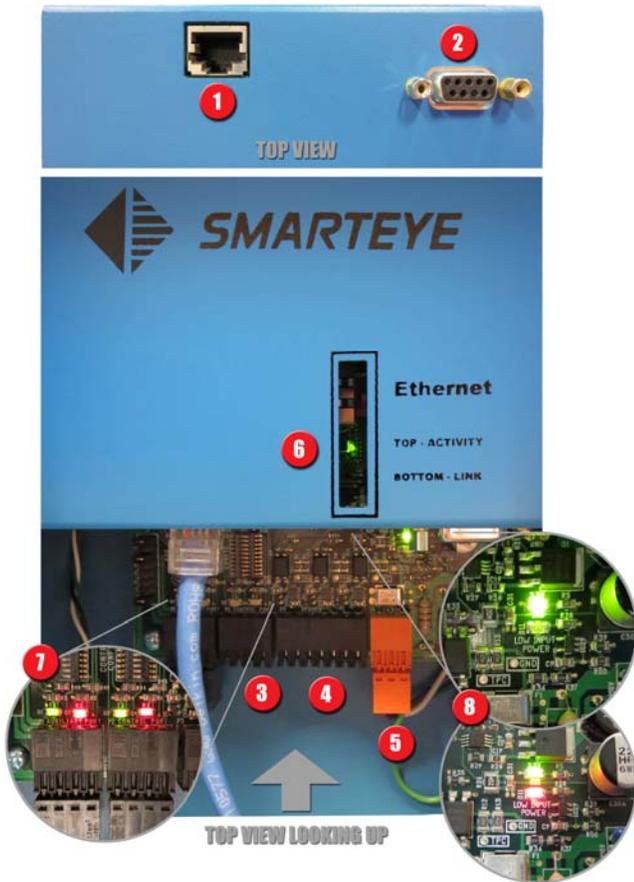

1. Ethernet Port – TCP/IP 10mb half duplex.
2. Auxiliary Port – RS232, 8 bit, 1 stop bit, no parity, 57600 baud (default settings)
3. Control Port – RS232/485 user selectable.
4. Reader Port.
5. Power Port – 24v dc. Not used for power over Ethernet version (POE).
6. Stacked Ethernet indicator lights. Top is activity light, bottom is link light. The activity light flashes whenever data is present on the network. The link light illuminates when the Ethernet port is physically connected to a network.
7. Auxiliary and Control port activity lights. Green transmit lights on left, red receive lights on right for each port.
8. Power lights. The top light indicates 3.3v power ok; bottom light indicates 24v input power ok/low. Green is ok, top picture. Red is low, bottom picture (less than 11.5v).

3.2 TNETX and MULTI-NETX Ports and Indicator Lights



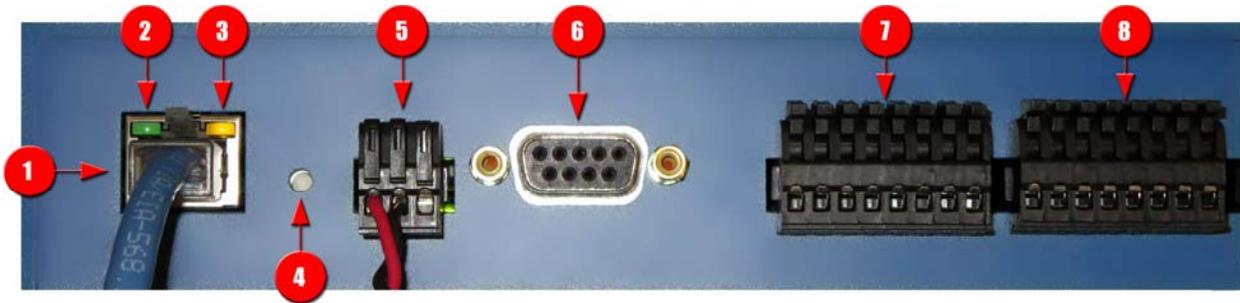

The Tnetx and Multi-netx have almost identical ports and indicator lights. The only difference is the number of readers supported. The Tnetx supports 2 readers and therefore has two reader ports while The Multi-netx supports 8 readers and has eight reader ports.

1. Ethernet Port – TCP/IP 10mb half duplex.
2. Ethernet Activity light. The green activity light indicator flashes whenever data is present on the network. As network traffic increases, this light will flash more frequently. If this light is on solid it may indicate that your network is over saturated and needs to be segregated.
3. Ethernet Link light. The amber link light indicator serves three functions:
 - Illuminates when the Ethernet port is physically connected to a network.
 - Indicates the Netx unit is operating normally when rapidly flickering and that a problem exists when on solid.
 - Indicates the utilization of the CPU in the Netx unit. When flashing rapidly the CPU is idle, when flashing slowly the CPU is processing.
4. Reset Button. If the unit is not operating normally, you can try restarting it by pushing the reset button.
5. Power Port. Both the Tnetx and Multi-netx require 24v dc power to be supplied to this port. The terminal definition (left to right) is +24v, 24v ground and chassis ground.
6. Auxiliary Port – RS232, Default settings are: 8 bit, 1 stop bit, no parity, 57600 baud.
7. Control Port – RS232/485 user selectable and configurable. Default settings are: 8 bit, 1 stop bit, no parity, 9600 baud.
8. Reader Port. The terminal definition (left to right) is: +, -, A, B, C, shield, shield, shield.



1. Power Indicator Light 1 (24v dc). When illuminated indicates the 24v input power is adequate. When off indicates the 24v input power is below the required specification (Approximately 23.3 v). The 24v input power supplies power to all connected Smarteye readers and the Netx internal electronics.
2. Power Indicator Light 2 (3.3v dc). When illuminated indicates the 3.3v power converter is functioning within specifications. When off indicates a problem with the 3.3v power converter. 3.3v dc powers the internal Netx CPU.
3. Auxiliary Port Activity Lights. The RX light will flash red whenever data is received on the auxiliary port. The TX light will flash green whenever data is transmitted on the auxiliary port. RX is an input to the Netx unit while TX is an output from the Netx unit.
4. Control Port Activity Lights. The RX light will flash red whenever data is received on the control port. The TX light will flash green whenever data is transmitted on the control port. RX is an input to the Netx unit while TX is an output from the Netx unit.

4.0 Smarteye Netx Product Installation

The Smarteye Netx Control Units are designed to function in the environment found in most industrial facilities. Smarteye Netx Control Units will operate properly in the same environment as a programmable controller. They are rated for operation at temperatures from **0 to 60° C**, non-condensing.

Use of the specified cables for equipment interconnections with proper shield termination and equipment grounding are recommended to minimize electromagnetic interference on signal lines.

Smarteye Netx Control Units should be mounted in such a way to allow complete access to the unit. Adequate space must be left to insure that the covers can be opened for maintenance.

Mounting dimensions for each of the network products enclosures can be found in the appendix.

5.0 Power/Wiring

All Smarteye Netx Control Units operate on an input voltage of 24VDC. The S-netx uses 6 watts, the T-netx uses 9 watts, and the Multi-netx requires 28 watts of power. A polyswitch (self-resetting) fuse link is used to protect the electronics on all models. See the appendix for detailed drawings.

Note: These units should not be powered up without the cover in place.

Smarteye Netx Control Units have been designed to be as tolerant to power fluctuations as is practical. However, like most electronic equipment, they can be susceptible to 'brownouts' and severe voltage 'spikes'. The AC line which drives the power supply for the Smarteye Netx Control Units can supply other similar electronic equipment such as programmable controllers, but should be isolated from any heavy industrial equipment that causes excessive line fluctuations such as motors, motor starters, welders, variable frequency drives, etc.

All applicable codes and ordinances should be observed for wiring power and ground, particularly the National Electrical Code published by the National Fire Protection Association of Boston, Massachusetts.

5.1 Power/Wiring for Power over Ethernet 802.3af (48v) – S-netx and T-netx only.

The S-netx and T-netx both offer an optional power input module, which meets the 48VDC Ethernet 802.3af specification. With this option, these units may be powered via an 802.3af compliant power source through the Ethernet communication cable. This provides power for both the CPU circuit card and the reader(s) connected to the unit. An RJ45 connector is provided on the S-netx and T-netx for delivering both power and data. See the appendix for detailed drawings.

5.2 Power/Wiring for T-netx Model SP4051/04

The T-netx SP4051/04 unit is designed to be powered from 110 to 240 VAC 50-60 Hz. This unit includes an AC circuit breaker and internal 24VDC power supply. See the appendix for detailed drawings.

5.3 Power/Wiring for Multi-netx Model SP4061/04 and SP4062/02

The Multi-netx SP4061/04 and SP4062/02 are designed to be powered from 110 to 240 VAC 50-60 Hz. These units include an AC circuit breaker and internal 24VDC power supply. See the appendix for detailed drawings.

6.0 Communication Line Wiring

All Smarteye network products have three communication ports: the Ethernet control port, the serial control port, and the auxiliary port. The S-netx is supplied with an RJ45 connector on the inside of the box and a single-hole Ethernet cable grommet on the outside of the box. The T-netx and Multi-netx have an RJ45 connector on the outside of the unit. The RJ45 connector provides communication for all products and optional power connections for the S-netx and T-netx. Diagrams of the Ethernet connection can be found in the appendix.

The serial control port connector for an S-netx is a cage clamp type and is located at the bottom of the CPU circuit card. The T-netx and Multi-netx use a spring clamp connector for the serial control port that protrudes through the bottom of the case. On all Netx products the auxiliary port connection is a 9-pin DB connector. The auxiliary port is factory configured for RS232 communications (57600 baud, 8 data bits, parity none, 1 stop bit, flow control none).

Belden 8723 or equivalent (2 shielded pairs, 22 gauge) is recommended for RS232 connections. A detailed wiring drawing can be found in the appendix.

7.0 Reader Wiring and Mounting

7.1 Reader Wiring

A Smarteye reader features a six-foot cable pre-wired to each of its three receiver photoeyes and a twenty-five foot cable pre-wired to the sender. The photoeye cables typically terminate at a remote field junction box near the reader assembly. The three receiver cables are labeled A, B, or C respectively. The sender photoeye has a single unlabeled cable.

The S-netx provides a cage clamp connector for the reader connection. The T-netx and Multi-netx provide spring clamp connectors for the reader connection.

Note:

1. Readers are delivered with the white signal wires of the receivers terminated to the reader connector. The black signal wires are not used.
2. All references to + and - refer to 24VDC supplied via the reader port.

7.2 Local Reader Mounting (S-netx only)

Due to its intended use focusing on highly distributed control systems, the Smarteye reader is typically wired for local mounting to the S-netx (no junction box required) and is shipped pre-wired unless requested otherwise. The three receiver photoeyes and the sender photoeye are routed through the four-hole reader cable grommet and terminated on the cage clamp connector. Please note that the grommet nut can be slipped over the connector for ease of assembly. Connection details can be found in the appendix.

7.3 Remote Reader Mounting (S-netx, T-netx and Multi-netx)

The Smarteye reader can also be remotely mounted from the network control unit (S-netx, T-netx or Multi-netx). A remote field junction box must be located within six cable feet from the receiver assembly. This remote junction box should have eight terminals labeled: +, +, -, -, A, B, C, and SH (shield).

Belden 9773 (3 shielded pairs, 18 gauge) is recommended for connecting the network control unit to the remote junction box. For the S-netx, a remotely mounted reader will also need the four-hole reader cable grommet replaced with a single-hole grommet, which is shipped with each unit. Maximum remote mounting distance is 1500 feet.

The shield (drain) wires of the Belden 9773 cable are normally connected to 24V ground at the network control unit via jumper block J1 on the network control unit circuit card. This is the standard factory configuration. If the environment is electrically noisy, then it may be necessary to connect the shield to 24V ground at the remote reader's junction box. This can be accomplished by installing a jumper wire from the 'SH' terminal to the '-' terminal in the remote junction box. Do not connect the shield at both ends of the cable. Remove the jumper block from J1 at the network control unit, if the jumper wire is used at the remote junction box. Smarteye Corporation does not recommend that this shield ever be connected to chassis ground.

An optional junction box for the sender can be used if extra cable length is required. This junction box should provide two terminals labeled: +, -. Cabling details can be found in the appendix.

8.0 Smarteye Netx Control Units CPU Configuration

The intelligence of the Smarteye Netx Control Units is contained in the Smarteye CPU circuit card. The following features are included in the CPU circuit card hardware:


- Interface to inputs from Smarteye reader(s)
- Interface to an Ethernet communication network (Ethernet control port)
- Interface to a serial auxiliary port (monitor line)
- Interface to a serial RS232 or RS485 control port (Serial control port)
- Switches to set the serial control port's communication type – RS232 or RS485.
- Jumper blocks to modify shield terminations

The diagrams on the following pages describe the function of the various jumper blocks and switches. Prior to shipment, the switches and jumpers are set to match the factory defaults and anticipated customer environment.

8.1 Configuration Legend



8.2 S-netx Switch and Jumper Diagram

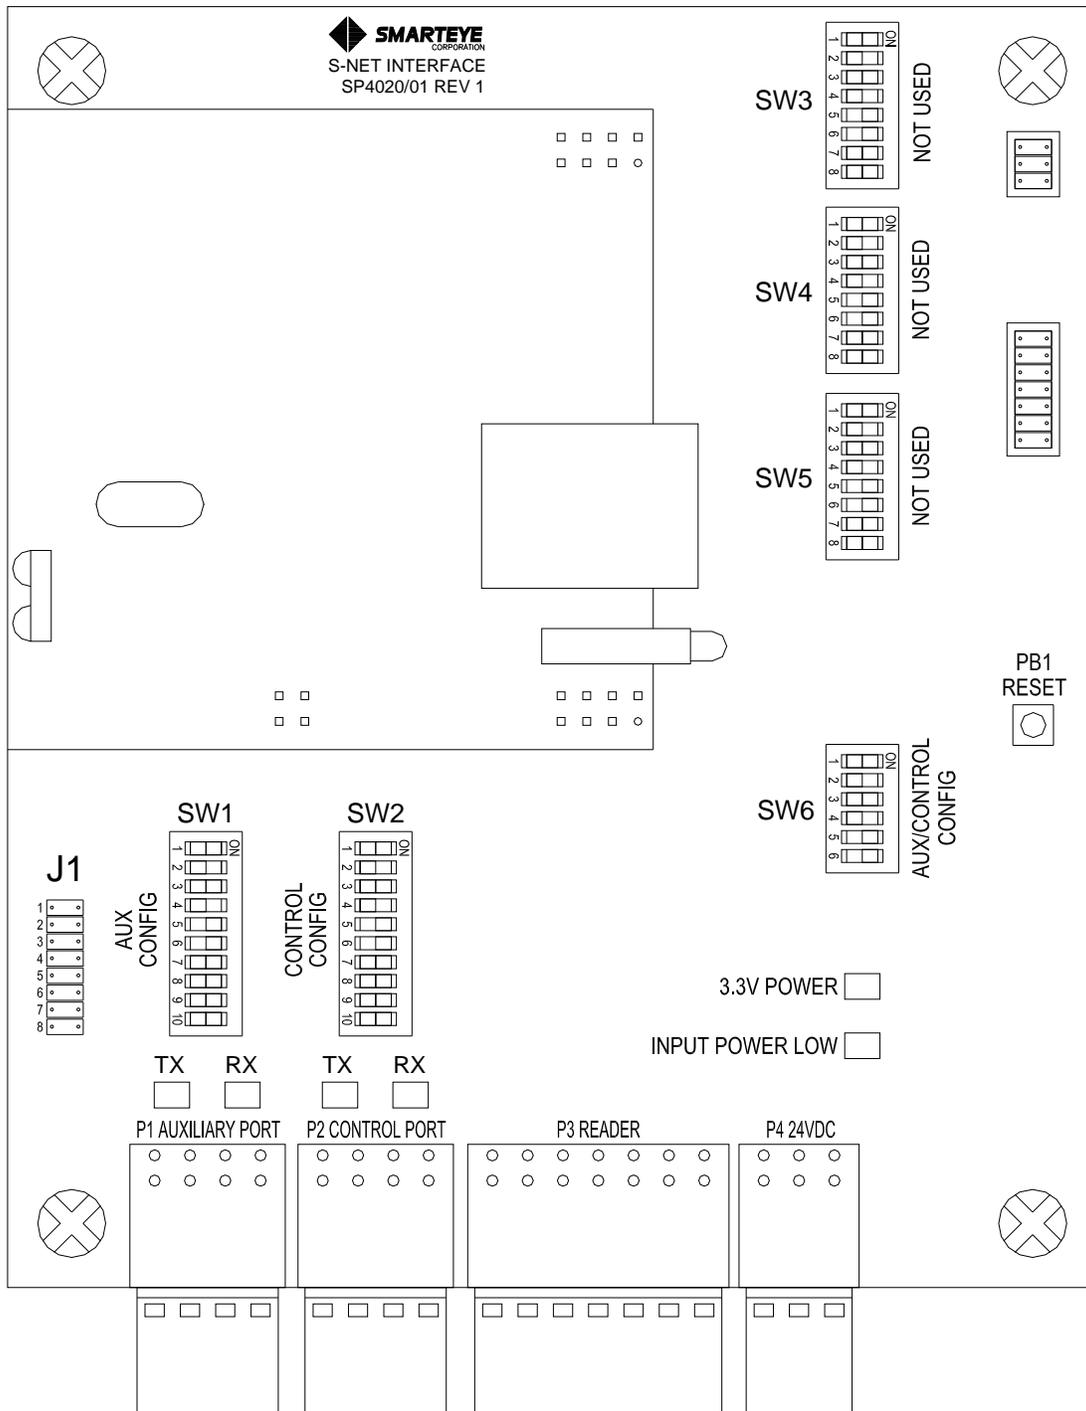




8.2.1 S-netx Jumper Block J1 – Shield Termination Select

Jumper block J1 is used to select the shield termination for the reader port, control port and auxiliary port. Jumper block J1 is located near the bottom left-hand side of the S-netx CPU/Reader interface board. The default settings are as shown.

J1	
1	 Factory set - Jumper installed for 1 meg CPUs
2	 Factory set - Jumper installed for 8 meg CPUs
3	 Auxiliary port shield terminal to chassis ground
4	 Auxiliary port shield terminal to 3.3v ground
5	 Control port shield terminal to chassis ground
6	 Control port shield terminal to 3.3v ground
7	 Reader port shield terminals to chassis ground
8	 Reader port shield terminals to 24v ground

8.2.2 S-netx Switches SW1 and SW2 – Auxiliary Port & Control Port Configuration

Switch blocks SW1 and SW2 are located near the bottom left-hand side of the S-netx CPU/Reader interface board. Switch block SW1 controls the setup for the Auxiliary Port. Switch block SW2 controls the setup for the Control Port. The setup selection for SW1 is factory set and must not be changed. Switch SW2 is used to select the communication type for the serial control port. The diagram on the right below shows the function for each of the 10 individual switches for SW2. The factory default settings for both ports are as shown.

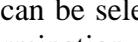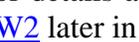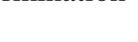SW1		SW2	
1	 off	1	 off RS485 (4 wire) Receiver Select
2	 off	2	 off RS485 (4 wire) Receiver Passive Bias 120 ohm Terminator
3	 off	3	 off RS485 (4 wire) Receiver Passive Bias 402 ohm Pull-up
4	 off	4	 off RS485 (4 wire) Receiver Passive Bias 402 ohm Pull-down
5	 off	5	 off RS485 (2 & 4 wire) Rec/Xmt Select
6	 off	6	 off RS485 (2 & 4 wire) Rec/Xmt Passive Bias 120 ohm Terminator
7	 off	7	 off RS485 (2 & 4 wire) Rec/Xmt Passive Bias 402 ohm Pull-up
8	 off	8	 off RS485 (2 & 4 wire) Rec/Xmt Passive Bias 402 ohm Pull-down
9	 on	9	 on RS232 Transmitter Select
10	 on	10	 on RS232 Receiver Select


Note: SW2 - RS232 or RS485 can be selected but not both. Switch SW6 must be set to match. For details about RS485 line termination and passive biasing, refer to [RS485 Line Termination SW2](#) later in this section.

8.2.3 S-netx Switches SW3, SW4 and SW5 – Not Used

These switches are set through software configuration only. Their settings on the board are not recognized.


8.2.4 S-netx Switch SW6 – Control Port Configuration - Receiver Select

Switch block SW6 is located near the right side, just below the centerline of the S-netx CPU/Reader Interface board. Switch block SW6 must be set to match the settings of Switch block SW2. The diagram below shows the function for the individual switches and the factory default setting.

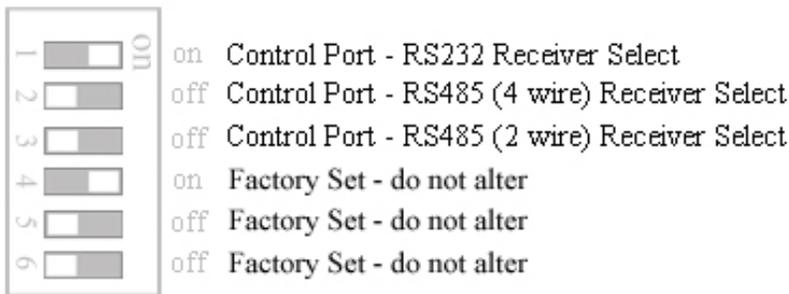

Note: RS232 or RS485 can be selected but not both. Switch SW2 must be set to match

8.3 T-netx Switch and Jumper Diagram

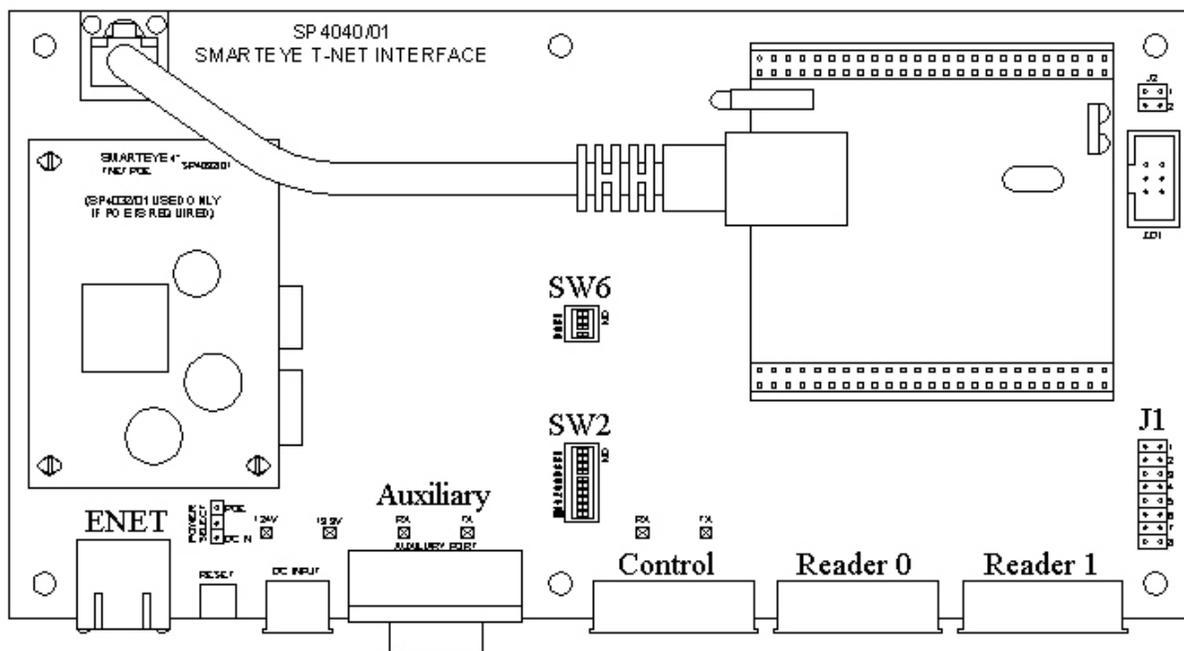

8.3.1 T-netx Jumper Block J1 – Drain Termination

Jumper block J1 is located in the lower right-hand corner of the T-netx CPU/Reader Interface board. This jumper block is used to select how the shield is terminated for each of the four ports (two reader ports and two serial ports). The factory defaults are shown.

J1		
1		Reader 1 - Shield Terminals to 24v Ground
2		Reader 1 - Shield Terminals to Chassis Ground
3		Reader 0 - Shield Terminals to 24v Ground
4		Reader 0 - Shield Terminals to Chassis Ground
5		Control Port - Shield Terminal to 3.3v Ground
6		Control Port - Shield Terminal to Chassis Ground
7		Auxiliary Port - Shield Terminal to 3.3v Ground
8		Auxiliary Port - Shield Terminal to Chassis Ground

8.3.2 T-netx Switch SW2 – Control Port Configuration

Switch block SW2 is located in the center of the T-netx CPU/Reader Interface board, near the bottom. The diagram below shows the function for the individual switches and the factory default settings for the Control Port.

1		off	RS485 (4 wire) Receiver Select
2		off	RS485 (4 wire) Receiver Passive Bias 120 ohm Terminator
3		off	RS485 (4 wire) Receiver Passive Bias 402 ohm Pull-up
4		off	RS485 (4 wire) Receiver Passive Bias 402 ohm Pull-down
5		off	RS485 (2 & 4 wire) Rec/Xmt Select
6		off	RS485 (2 & 4 wire) Rec/Xmt Passive Bias 120 ohm Terminator
7		off	RS485 (2 & 4 wire) Rec/Xmt Passive Bias 402 ohm Pull-up
8		off	RS485 (2 & 4 wire) Rec/Xmt Passive Bias 402 ohm Pull-down
9		on	RS232 Transmitter Select
10		on	RS232 Receiver Select

Note: RS232 or RS485 can be selected but not both. Switch SW6 must be set to match. For details about RS485 line termination and passive biasing, refer to [RS485 Line Termination SW2](#) later in this section.

8.3.3 T-netx Switch SW6 – Control Port Configuration - Receiver Select

Switch block SW6 is located in the center of the T-netx CPU/Reader Interface board. Switch block SW6 must be set to match the settings of Switch block SW2. The diagram below shows the function for the individual switches and the factory default setting.



Note: RS232 or RS485 can be selected but not both. Switch SW2 must be set to match

8.3.4 T-netx Power Select

The power select jumper is located on the lower left-hand side of the T-netx CPU/Reader interface board. The power select jumper is factory set for the specific T-netx model. Do not change the factory setting.


8.3.5 T-netx Jumper Block 2

Jumper Block J2 is located in the upper right-hand corner of the T-netx CPU/Reader interface board. This block is factory set and should not be altered.

For 1 megabyte flash CPUs, the top jumper is installed and the bottom jumper is removed.


For 8 megabyte flash CPUs, the top jumper is removed and the bottom jumper is installed.

8.4 Multi-netx Switch and Jumper Diagram

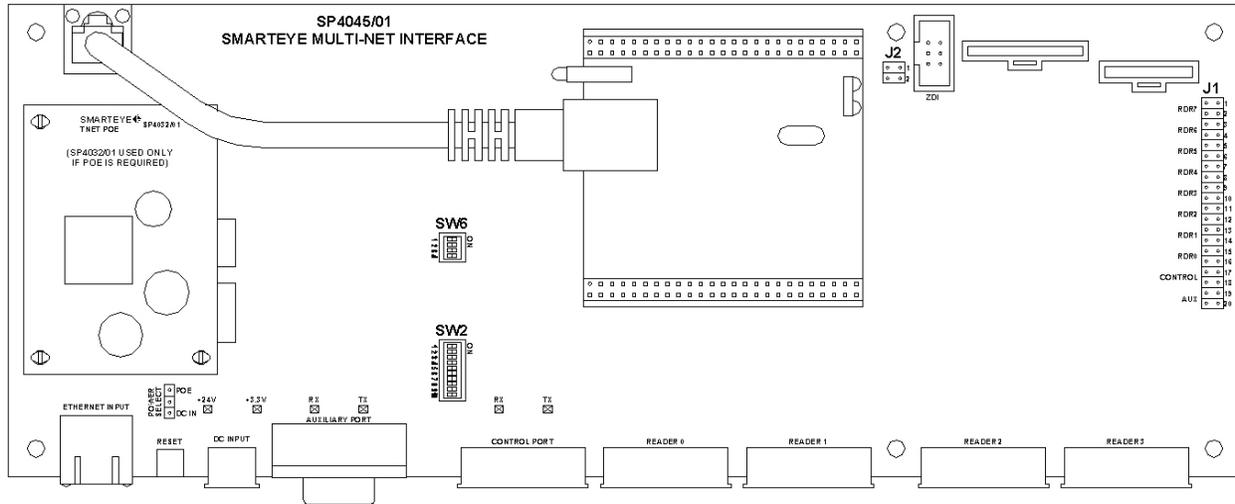

8.4.1 Multi-netx Switch SW2 – Control Port Configuration


Switch block SW2 is located just left of center, near the bottom of the Multi-netx CPU/Reader Interface board. The diagram below shows the function for the individual switches and the factory default settings for the Control Port.

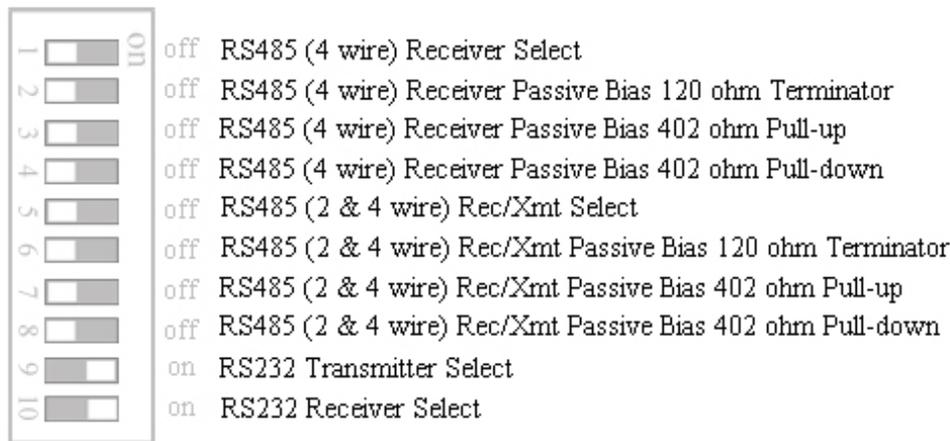

Note: RS232 or RS485 can be selected but not both. Switch SW6 must be set to match. For details about RS485 line termination and passive biasing, refer to [RS485 Line Termination SW2](#) later in this section.

8.4.2 Multi-netx Switch SW6 – Control Port Configuration - Receiver Select


Switch block SW6 is located just left of center, near the middle of the Multi-netx CPU/Reader Interface board. Switch block SW6 must be set to match the settings of Switch block SW2. The diagram below shows the function for the individual switches and the factory default setting.

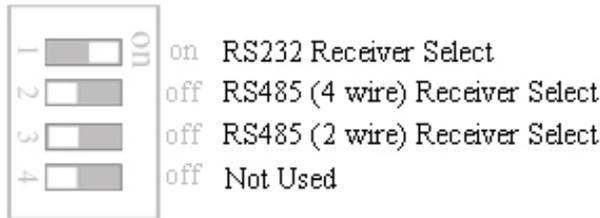

Note: RS232 or RS485 can be selected but not both. Switch SW2 must be set to match

8.4.3 Multi-netx Jumper Block J1 – Port Ground Select

Jumper block J1 is located on the right-hand side of the Multi-netx CPU/Reader Interface board. This jumper block is used to select how the shield is terminated for each of the reader ports and the control and auxiliary ports. The factory defaults are shown.

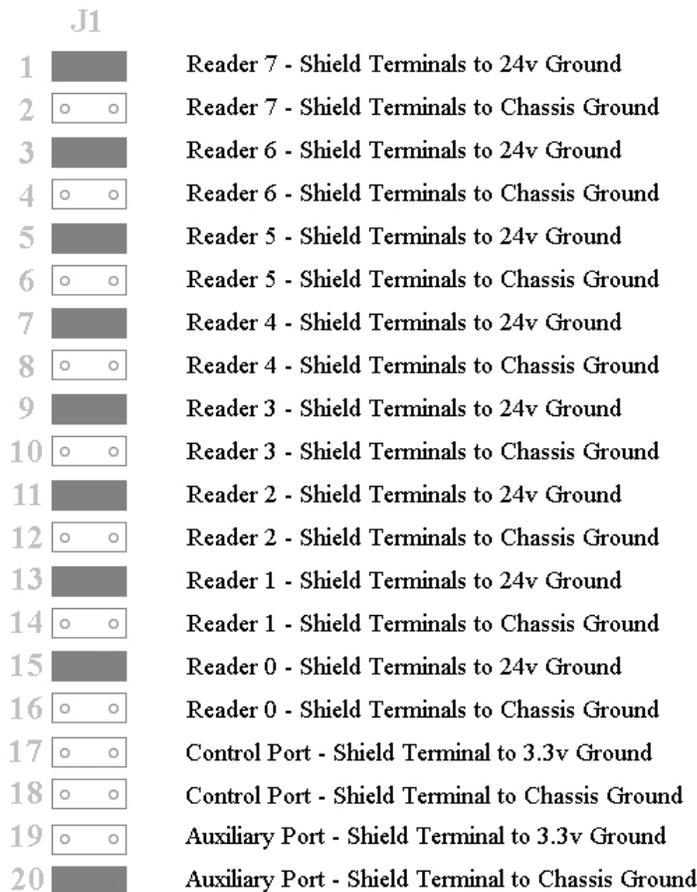

8.4.4 Multi-netx Jumper Block J2

Jumper Block J2 is located near the top midway between center and the right side of the Multi-netx CPU/Reader interface board. This block is factory set and should not be altered.

For 1 megabyte flash CPUs, the top jumper is installed and the bottom jumper is removed.

For 8 megabyte flash CPUs, the top jumper is removed and the bottom jumper is installed.

8.5 RS485 Line Termination SW2

All Netx products come standard with a serial RS485 control port. This port can be used instead of or concurrently with the network control port. Switch SW2 is used to select the line termination for this port. Switch SW2 has 10 individual switches that we will designate as switches 2.1 through 2.10. Switches 2.2, 2.3, 2.4 and 2.6 are provided to allow proper termination of the communication line. The type of termination required for a specific application depends on whether the communication line is a point-to-point line or a multi-dropped (polled) line, and whether the transmitters on the line are ever 'tri-stated'. Tri-state is a high impedance state assumed by an idle RS485 transmitter so that another transmitter can drive the same line.

Switch 2.2 - Places a 120-ohm resistor across the input to the RS485 receiver for simple termination or passive biasing.

Switch 2.3 - Ties the non-inverting input of the RS485 receiver to 3.3 volts through a 402-ohm resistor for passive biasing.

Switch 2.4 - Ties the inverting input of the RS485 receiver to ground through a 402-ohm resistor for passive biasing.

Switch 2.6 - Places a 120-ohm resistor across the output of the RS485 driver for simple termination.

8.6 Terminating RS485 Point-To-Point (Handshake Mode)

In point-to-point communication, the network products RS485 transmitter is always in an active, low impedance state. This usually insures a stable line and eliminates the need for special termination at the host's receiver inputs.

Likewise, most host transmitters will hold the line stable, eliminating the need for special termination of the network products receiver.

The addition of a shunting termination impedance reduces the reflected signal at the receiver and diminishes ringing and overshoot. The negative aspect of termination is that it reduces the magnitude of the received signal. Termination is more likely to be required in applications where the line length is very long and the transmission speed is greater than that used for Smarteye applications.

However, in the event that line termination is desired, 120-ohm terminating resistors have been provided on both the transmitter and receiver lines (switches 2.6 and 2.2). 120 ohms significantly reduces signal overshoot and ringing, reasonably matches the recommended cable (Belden 9730), which has a characteristic impedance of 100 ohms, and satisfies RS485 specifications, which require a minimum receiver impedance of 90 ohms.

8.7 Terminating RS485 Multi-drop (Poll Mode)

A number of Smarteye Netx products may be connected to a common host on a single transmission line. In this multi-drop configuration, the transmitters of all of the Netx devices are connected in parallel to the host's receiver. Similarly, the Netx's receivers are connected in parallel to the host's transmitter.

The following restrictions must be observed in this multi-drop configuration:

1. To eliminate the possibility of two Netxs attempting to transmit at the same time, the master device (host) repeatedly polls slave devices (Netxs) for data messages. The communication mode of the Netxs must be poll mode.
2. The transmitter of each Netx must tri-state when it is not transmitting.
3. The parallel combination of impedances of the Netx's receivers must be high enough so that the line is not overloaded.

The second and third of these restrictions are considered here.

Because the Netx's transmitters are tri-stated, there are times when all the transmitters are in a high impedance state; i.e., the state of the line is determined by conditions at the host receiver. To insure that the state of the line is predictable in this circumstance, the host receiver should include a passive biasing network. A passive biasing network consists of three resistances: one between +3.3VDC and the non-inverting input, one across the inputs, and the third connected from the inverting input to DC ground (switches 2.2, 2.3, 2.4).

Very often, an RS485 receiver will include a built-in passive biasing network (fail-safe circuitry). If the host receiver does not include this network, then an external network should be provided to insure reliable communication. In this case, the resistor across the inputs is 120 ohms; the other two are 402 ohms.

The impedance of a built-in passive biasing network will probably be relatively high so that even if one exists, it may be desirable to lower the line impedance. The network described above will accomplish this. (Note that a simple termination resistor across the inputs of a receiver which has built-in passive biasing will lower the receiver input voltage when the line is idle, probably to a value for which the output is indeterminate. This would cause communication errors. The passive biasing network is much safer.)

The receiver of a Smarteye Netx product may include a simple terminating resistor or a passive biasing network. Since all multi-dropped Netxs' receivers are in parallel, only **one** receiver may be terminated with either the simple resistor or passive biasing. Otherwise, the line load will exceed tolerance levels.

8.8 Shield (Drain) Terminations (J1)

The jumper block J1 is provided to allow shield wire terminations of the serial communication cables and the reader cables. Never connect a shield wire at both ends of a communication line.

The control port communication cable's shield wire is typically connected to chassis ground at the control system because the control system side normally has a better ground. If a good chassis ground is not available at the control system, then jumpers can be installed at the Smarteye Netx Control Unit to properly terminate the shield wires.

Jumpers are also provided to allow termination of the reader cable's shield wires. The shield wires of the reader cable (Belden 9773) are normally connected to 24V ground at the Smarteye Netx Control Unit. This is the standard factory configuration.

Refer to the section labeled 'Jumper Block J1 – Port Ground Select' earlier in this section for the individual jumpers that need to be installed for proper shield termination for each of the Netx products.

9.0 Software Configuration

Before the Smarteye Netx Control Unit can become operational, it must first be configured. Smarteye Netx Control Units are shipped with a factory default configuration. The factory default configuration has both the network and serial control ports disabled.

All Smarteye Netx Control Units have two serial ports, a network port, and one to eight reader ports. The two serial ports are labeled "Auxiliary" and "Control". The auxiliary port is used for monitoring, configuration and optionally a Bluetooth data access port. The control port is used to connect serially to a control system. A control system typically would be either a computer or PLC. The network port is used for

- Connecting to a host computer or PLC for real time control
- Smarteye Netx Control Unit configuration
- Viewing Smarteye Netx Control Unit status and historical data
- Smarteye Netx Control Unit discovery
- Smarteye Netx Control Unit real time monitoring
- Smarteye Netx Control Unit software updates and optional features activation.

The network control port, when configured as a server, can have multiple clients connected.

There are four ways to configure a Smarteye Netx Control Unit. Three of the ways utilize the network port while the fourth way uses the auxiliary port.

- Network Port Configuration Method
 1. Using Smarteye's Setup Utility program running on a windows PC
 2. Using a web browser running on a windows PC
 3. Using a telnet session running on a windows PC
- Auxiliary Port Configuration Method
 1. Configuration through the auxiliary port requires a cable as shown in the drawing titled "Auxiliary Port Wiring Details" in the appendix. The auxiliary port of the Smarteye Netx Control Unit must be connected to a terminal or a COM port on a PC that has a terminal emulator software package installed such as 'Hyper Terminal'.

9.1 Software Configuration Using the Network Port

Before connecting the Smarteye Netx Control Unit to the network, make sure to write down the MAC address for the unit. The MAC address is printed on a sticker located on the Smarteye Netx Control Unit. The MAC address is also printed on the paperwork that accompanies the unit. The MAC address is six two digit hexadecimal numbers separated by dashes. An example of a Smarteye Netx Control Unit's MAC address is as follows: 00-50-C2-2C-20-00.

Configuration through the network port requires the Smarteye Netx Control Unit to be connected to a network through a switch or hub using a standard Ethernet cable (RJ45 connectors) as shown in the drawing titled "Ethernet Port Wiring Details" in the appendix.

The Smarteye Netx Control Unit can also be configured by directly connecting it to a computer's network adapter using a standard Ethernet crossover cable.

The first item that has to be configured on the Smarteye Netx Control Unit is the **IP address**. The IP address must be set first in order to access the unit over the network. Unless provided with specific network IP addresses from the customer, Smarteye network readers are shipped with a default IP address of 192.168.22.243 and DHCP turned off.

In order for the control system to make decisions based upon the information it receives from a Smarteye reader, it must know the physical location of that reader. The location can be identified by the IP address for readers that have a fixed IP address (static IP) or for readers that have a dynamic IP address (DHCP assigned) the reader number can be used. If the reader number is to be used to identify the location, then each Smarteye reader in the system must be assigned a unique reader address.

The Netx IP address can be set using one of the available methods listed below.

- Pre-assigned by Smarteye before shipment (list of addresses provided by customer)
- DHCP server available on the network – IP address gets assigned automatically (provided DHCP is enabled)
- Use Smarteye's Netx Setup Utility program to set the IP address. Netx unit must first be connected to the network
- Use a web-browser to set the IP address after the unit has been connected to a computer using a crossover cable or standard cable and hub.

9.1.1 Pre-Assignment of IP address

If the IP addresses of the control units have been pre-assigned by Smarteye, then nothing more needs to be done. The units can be installed and the remainder of this section can be skipped.

9.1.2 DHCP Automatic Assignment of IP address

If the Smarteye Netx Control Unit is configured to use DHCP and a DHCP server is available on the network, the unit will automatically be assigned an IP address. If a DHCP server cannot be found then the unit will use the default IP of 192.168.22.243.

Normally when requested, a DHCP server will assign an arbitrary IP address from a pool of available addresses. A DHCP server can however be configured to assign fixed IP addresses for specific MAC addresses. The network administrator, given the list of Smarteye Netx Control Unit MAC addresses, can make the IP assignments on the DHCP server. This should be done prior to installing the units on the network. This technique is known as IP reservation.

Without IP reservation, we cannot determine the IP address that was assigned to the unit by DHCP because the DHCP server assigns an arbitrary IP address. In order to use a web-browser or telnet to configure the unit, we must know its IP address. If IP reservation is not used then the Smarteye Netx Setup Utility program must be used to discover and configure the control unit. The Smarteye Netx Setup Utility program sends out a broadcast message on the network that only Smarteye Netx Control Units respond to. The response has specific information about the control unit such as unit description, MAC and IP address.

9.1.3 Manual Assignment of IP address Using Smarteye Netx Setup Utility Program

The Smarteye Netx Setup Utility program provided with every Smarteye Netx Control Unit purchased can be used to quickly and easily configure the control unit to reside on the customer's network. If you cannot locate the CD that has the utility program, you can download a copy of the most recent version from:

http://www.smarteyecorporation.com/downloads/general/NETx_Setup_UTILITY.exe


Unless provided with specific network IP address from the customer, Smarteye Netx control units are shipped with a default IP address of 192.168.22.243 and DHCP turned off.

In order to configure the Netx control units, a list of available unused IP address must be obtained from the network administrator. Each Netx unit must be assigned one of these IP addresses. The Netx's MAC address along with its assigned IP should be recorded for future reference.


The unique 12 digit hexadecimal MAC address for the Smarteye Netx Control Unit is displayed on a sticker located on the unit. Once the units have been connected to the network, the configuration can begin.

The Smarteye Netx Setup Utility program can be run directly off the provided CD or copied onto and run from a computer that is connected to the same network as the Netx control unit(s).

Execute the program by double clicking the "Netx_Setup_UTILITY.exe" file. The window shown below should appear.

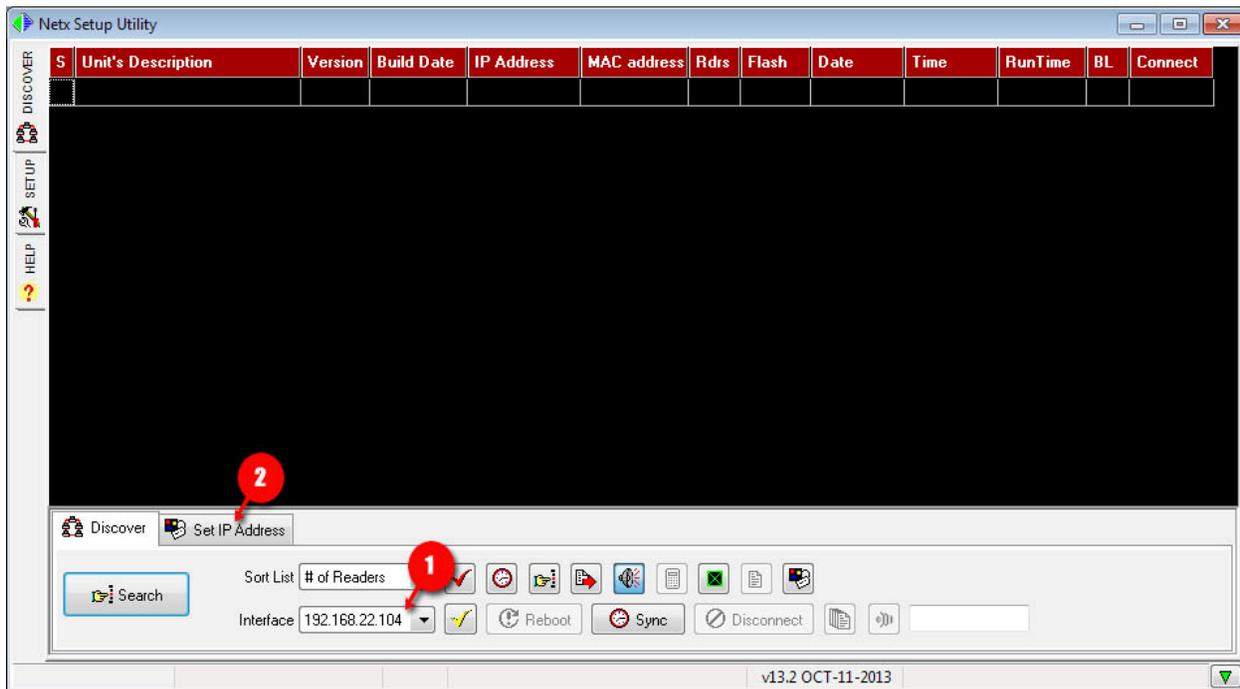


1. Shown here is a list of network interface cards available on this computer. Select the one that connects to the Netx control unit you want to set the IP address on. Most laptop computers will have two choices, the wired and the wireless.
2. Click on the "Set IP Address" tab located near the lower left corner to display the parameters needed for setting the IP address. The form on the next page will be displayed

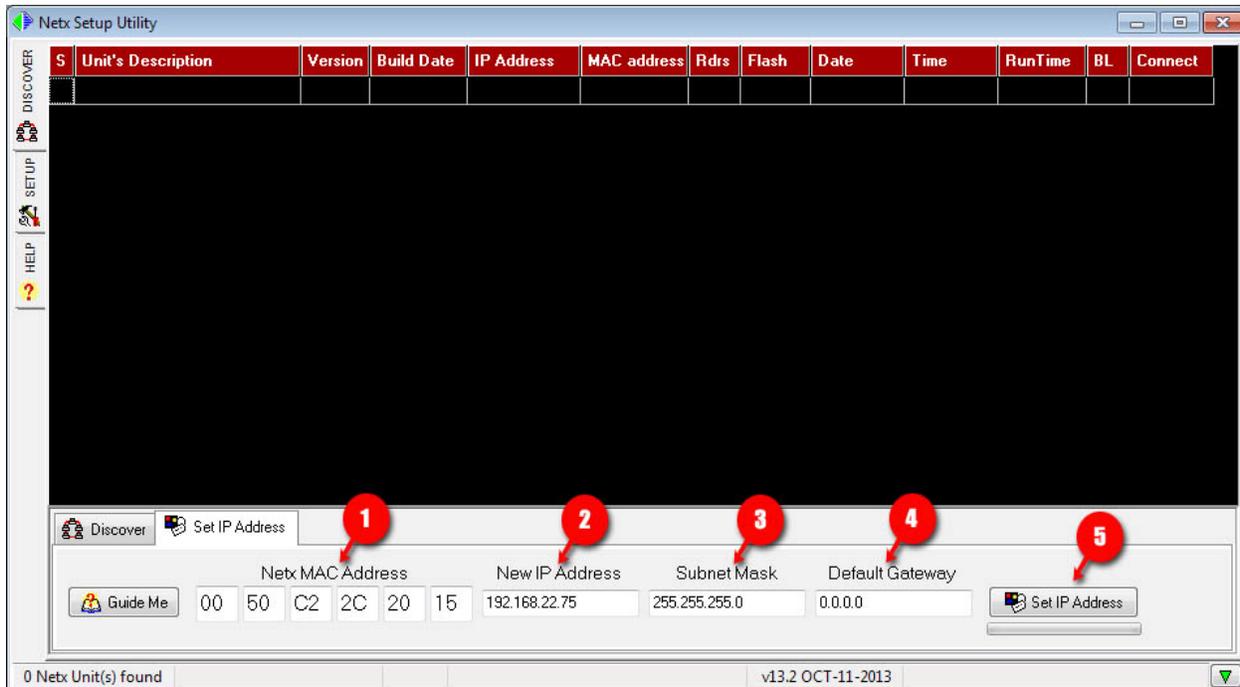

1. In the MAC Address field, type in the 12 digit MAC address for the unit to be configured.
2. Enter the assigned IP address for this unit into the “New IP Address” field.
3. Enter a valid subnet mask for your network if it is different from the default.
4. Enter the default gateway address if required otherwise set to 0.0.0.0
5. Then click the “Set IP Address” button to complete the assignment.


In the example illustrated above, a Smarteye Netx Control unit with MAC address 0050C22C2015 is assigned an IP address of 192.168.22.75 with a mask of 255.255.255.0 and no default gateway (0.0.0.0). If your system require a gateway then set this field to the IP address of the gateway.

If the IP assignment is successful, the units information will be displayed in the grid and a message will pop-up indicating success (see next page). If you don't see a success message after 10 seconds, verify that the unit to be initialized is connected to the same network as this computer, the MAC address is correct and the interface selected is correct then repeat this procedure. If you still have trouble cycle power on the Netx unit. If the utility has "auto-discover on startup" enabled, turn this feature off and restart the utility. Do not click the discover search button before setting the IP. Go directly to the "Set IP Address" tab and enter the network information then click the "Set IP Address" button.

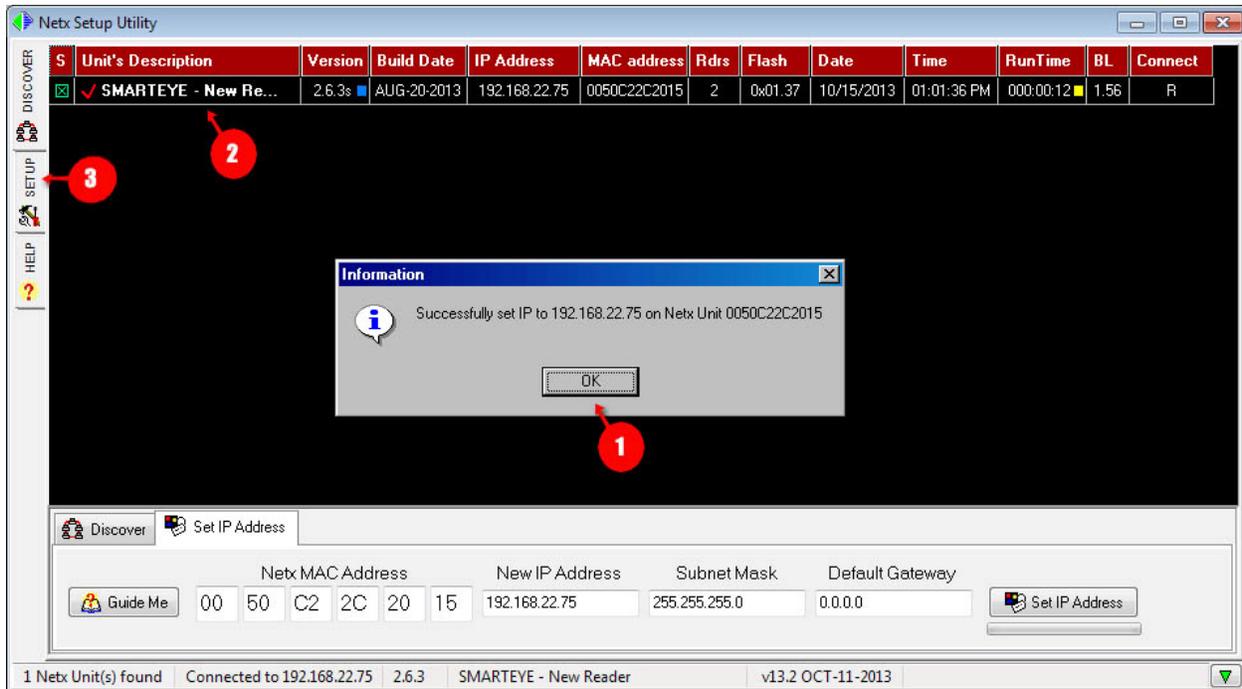


1. Click the “OK” button to get rid of the successfully set IP message box.
2. Then click on the description field to connect to the Smarteye Netx unit. A red check mark is displayed when a connection is established with the unit. Now that a connection has been made, we can proceed to the setup page to complete the configuration.
3. Click on the “Setup” tab located near the top left under the ‘Discover’ tab.

This brings up the setup page as shown below. Refer to the ‘Configuration Parameters’ section for a list and description of each field starting on page 24.

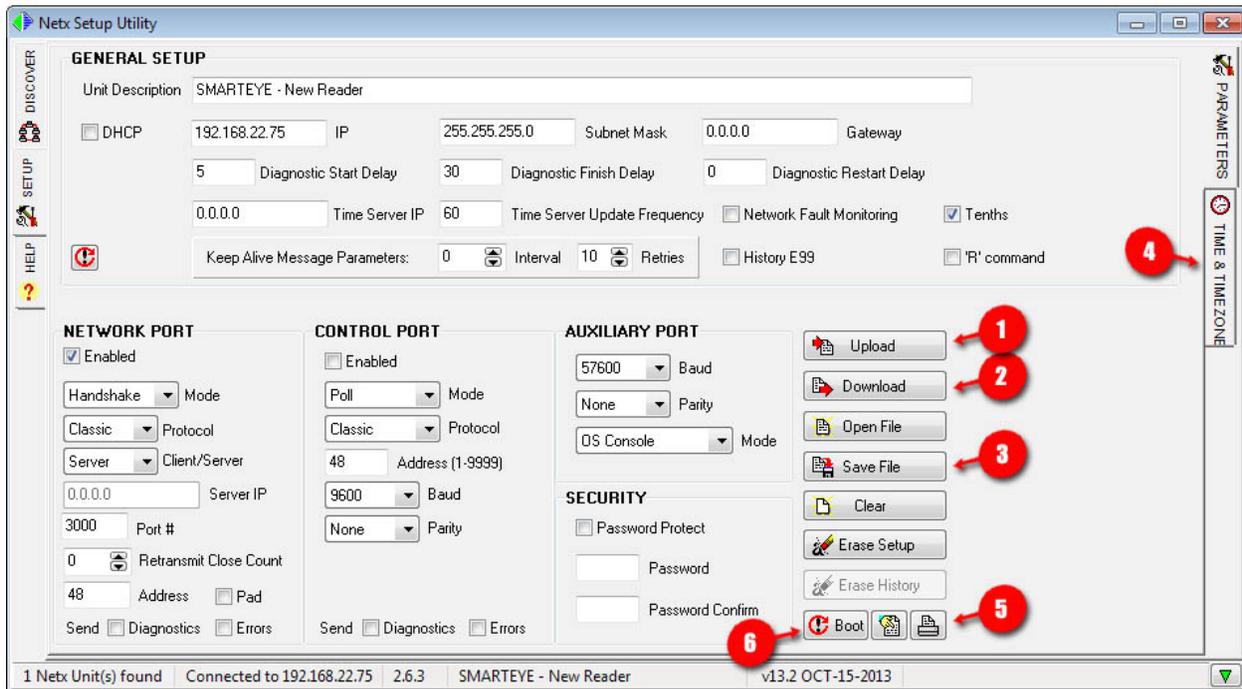


1. Click the Upload button to read the setup data from the Netx control unit. The setup form shown above will be filled in with the current configuration values. Depending on the preferences for the Utility programs, the form values might be updated as soon as the setup tab is accessed. In this case there would be no need to click the upload button.
2. After the unit has been configured, click the “Download” button to save the configuration in flash memory. The configuration file will be retained even after power is removed from the unit. Note: the default settings have both the network and control ports disabled.
3. If you would like to keep an electronic copy of the configuration file, click the “Save File” button. The extension for the saved configuration file is .netx.
4. If a timeserver is not present on the network, then the date and time can be manually configured by clicking on the “Time & Time Zone” tab located under the parameters tab on the right side. See below for an illustration on setting the time and time zone.
5. If you would like a hard copy of the configuration file, click either the print  or print with preview  button.
6. Click the “Boot” button to apply the changes. This will reboot the Netx control unit.

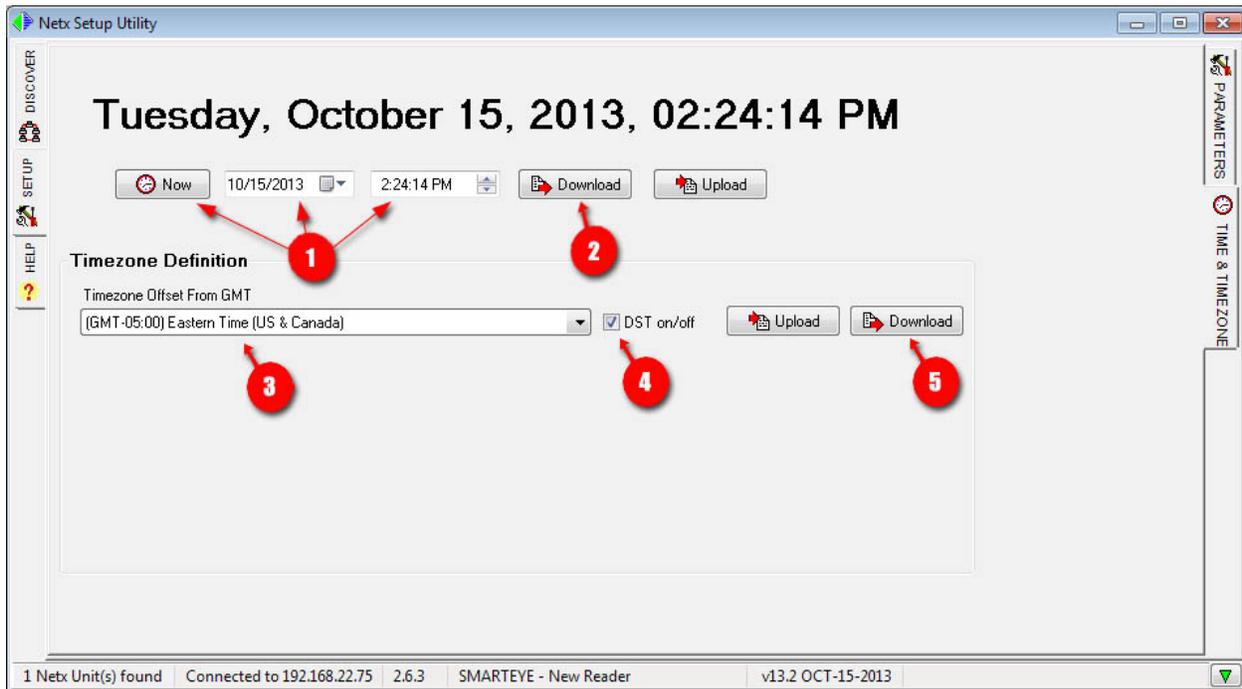

1. Set the date and time as desired. Clicking the 'Now' button will automatically fill in the date and time with the current date and time from the PC or you can manually set the date and time by clicking on the date and time edit boxes individually.
2. Click the 'Download' button to write the date and time to the Netx control unit.
3. The time zone can also be configured from this screen. Use the drop down box to select the correct time zone for your area.
4. Check the DST box to observe day light savings time.
5. Click the "Download" button to write the time zone to the Netx control unit.

The Smarteye Netx Control Unit has now been successfully configured. Repeat this step for each Netx control unit present on the network.

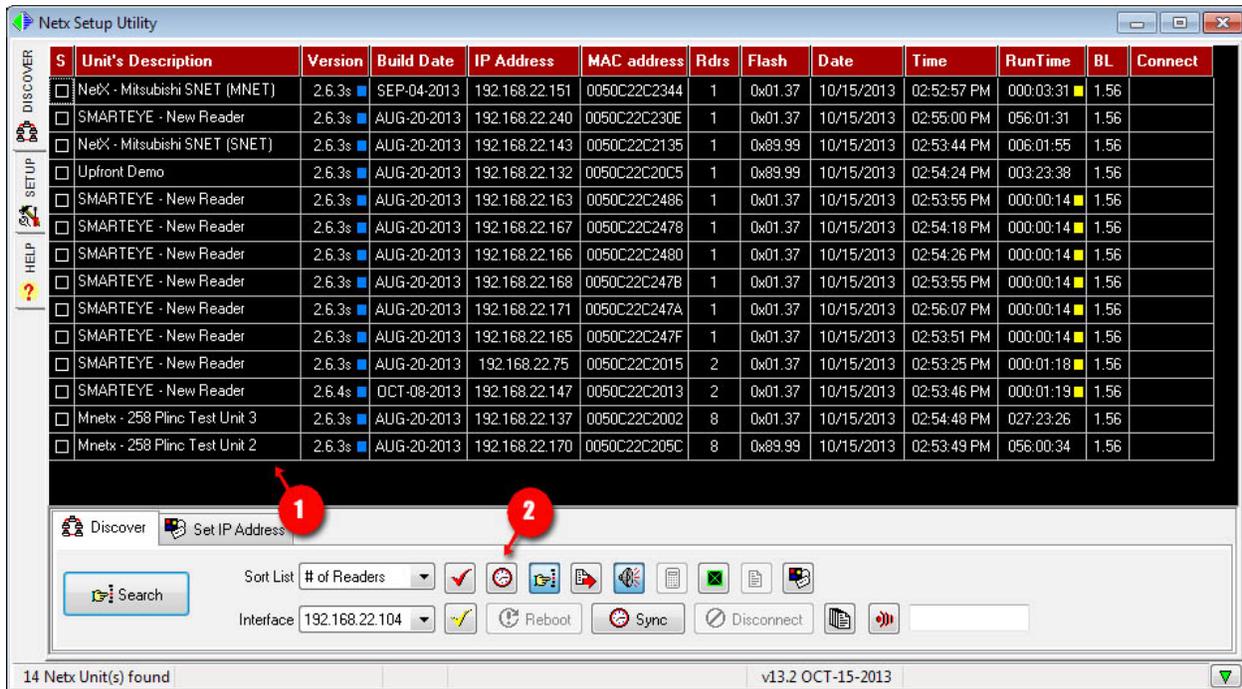

1. After a unit has been configured, it will show up each time the search button is clicked on the discover tab.
2. The clock symbol enables the time sync function of the discovery process. When this button is in the detent state, the current date and time of the PC is sent to every discovered Netx Control Unit. When a Netx unit detects this date/time data packet in the discovery message, it synchronizes its internal clock to match. This feature is useful in systems that do not have an automatic timeserver on the network.

9.1.4 Manual Assignment of IP address using a Web Browser

A list of available static IP addresses will need to be acquired from the network administrator (one per Smarteye Netx Control Unit). Once these are obtained, the control unit’s IP addresses can be assigned using a standard web-browser.

The Smarteye Netx Control Unit is shipped with an IP address of 192.168.22.243. This address can be used to make a direct connection from a PC to the control unit using a crossover cable or a standard cable with a hub.

The computers network properties must be altered to match the control unit’s default IP address. For example, the network card in the PC would need to be given a static IP of 192.168.22.1 in order to communicate with the control unit. An example of how to do this on a PC running windows 2000 as the operation system is shown below.

Begin by right clicking on the “Start” button in the lower left hand corner and selecting “Settings”. Then click on “Network and Dial-up Connections”

(Figure 1).

This will bring up the “Network and Dial-up Connections” window as shown in figure 2. Double click on the active LAN connection.

This will then display the LAN status window as shown in figure 3.

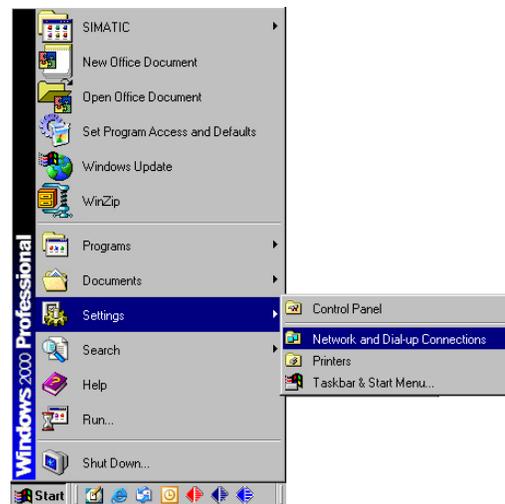


Figure 1

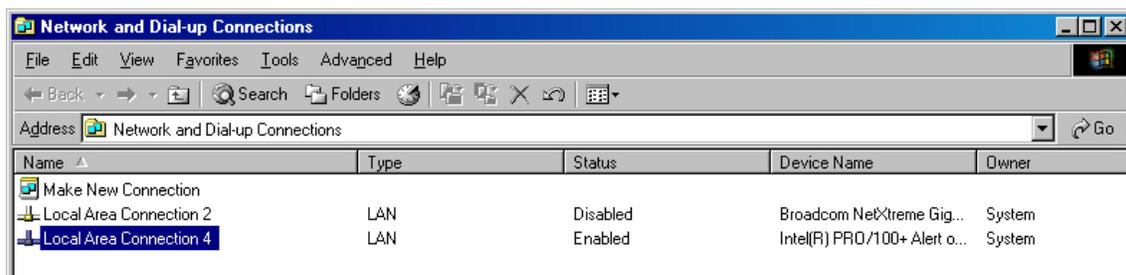


Figure 2

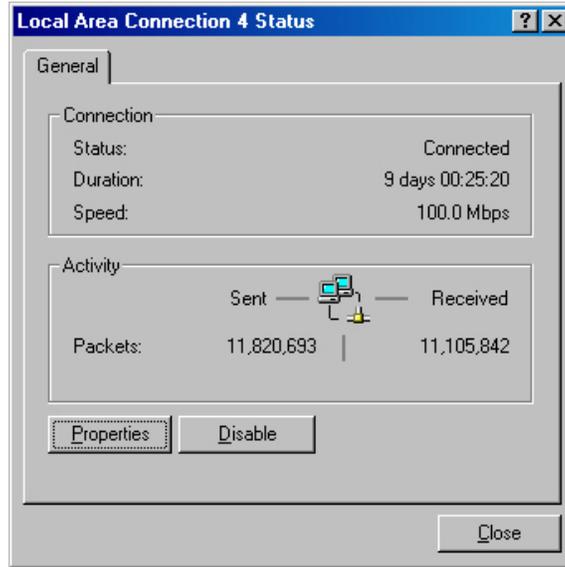


Figure 3

Now, click the “Properties” button to bring up the LAN properties window as shown in figure 4. Next, select the “Internet Protocol (TCP/IP)” item and click the “Properties” button. This will bring up the Internet Protocol dialog box shown in figure 5.

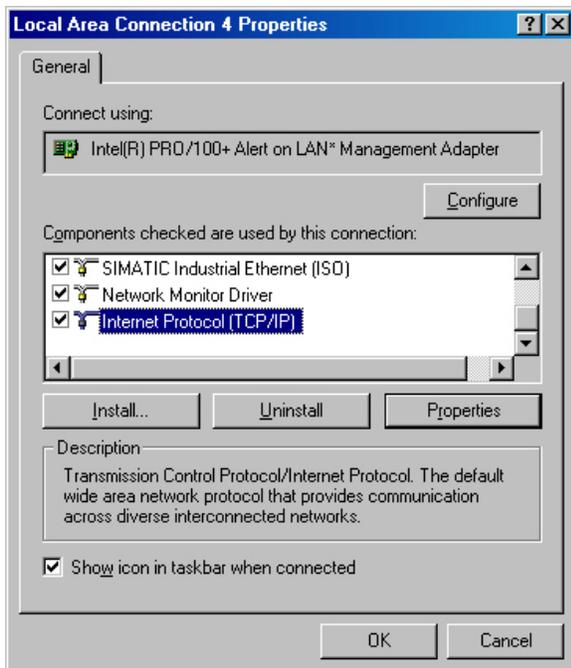


Figure 4

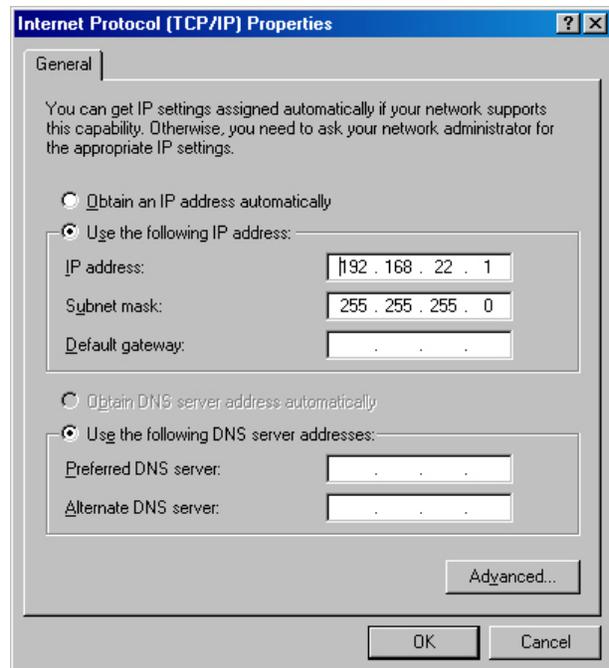


Figure 5

Select “Use the following IP address” item and enter an IP address, Subnet mask and leave the default gateway blank as illustrated in figure 5.

Now we are ready to set the IP address and configure the Smarteye Netx Control Unit. Open up a web browser and enter the network address “192.168.22.243” as shown in figure 6.


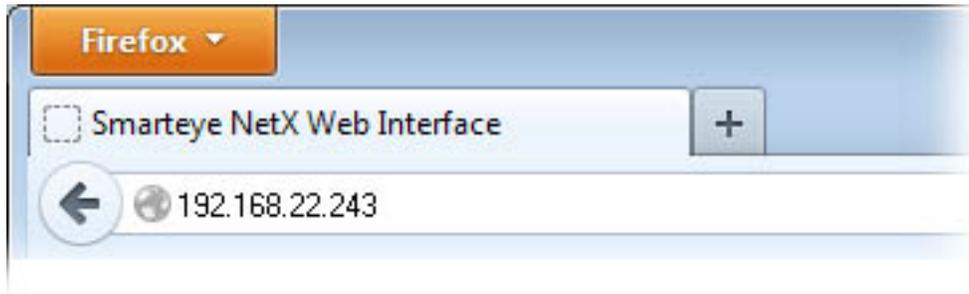


Figure 6

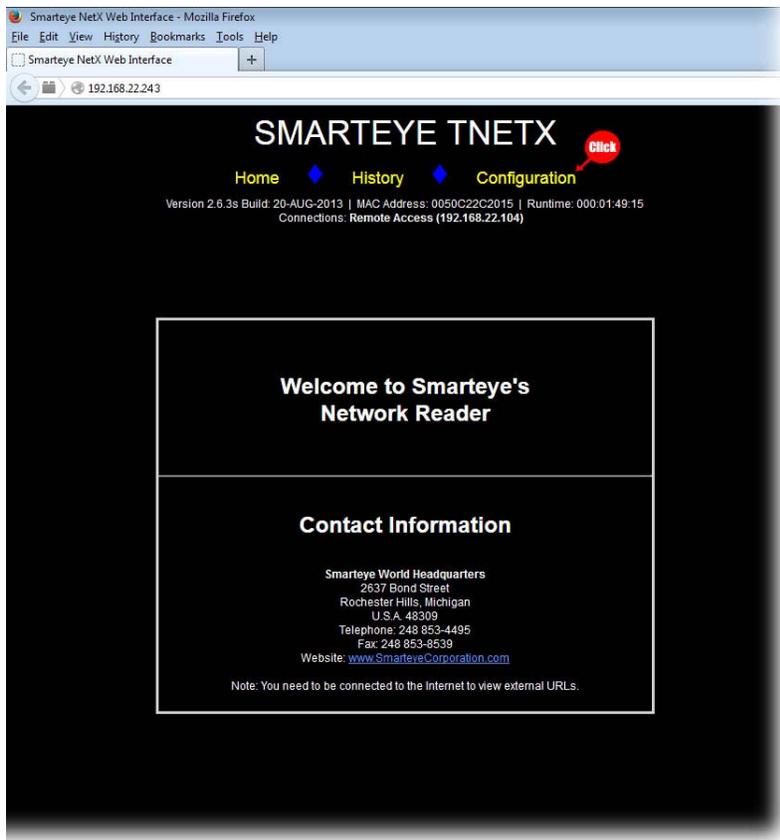

This will cause the Smarteye Netx Control Unit’s home page to be displayed as shown in figure 7.

Click on the “CONFIGURATION” link to bring up the control unit’s setup page as shown in figure 8.

Figure 7

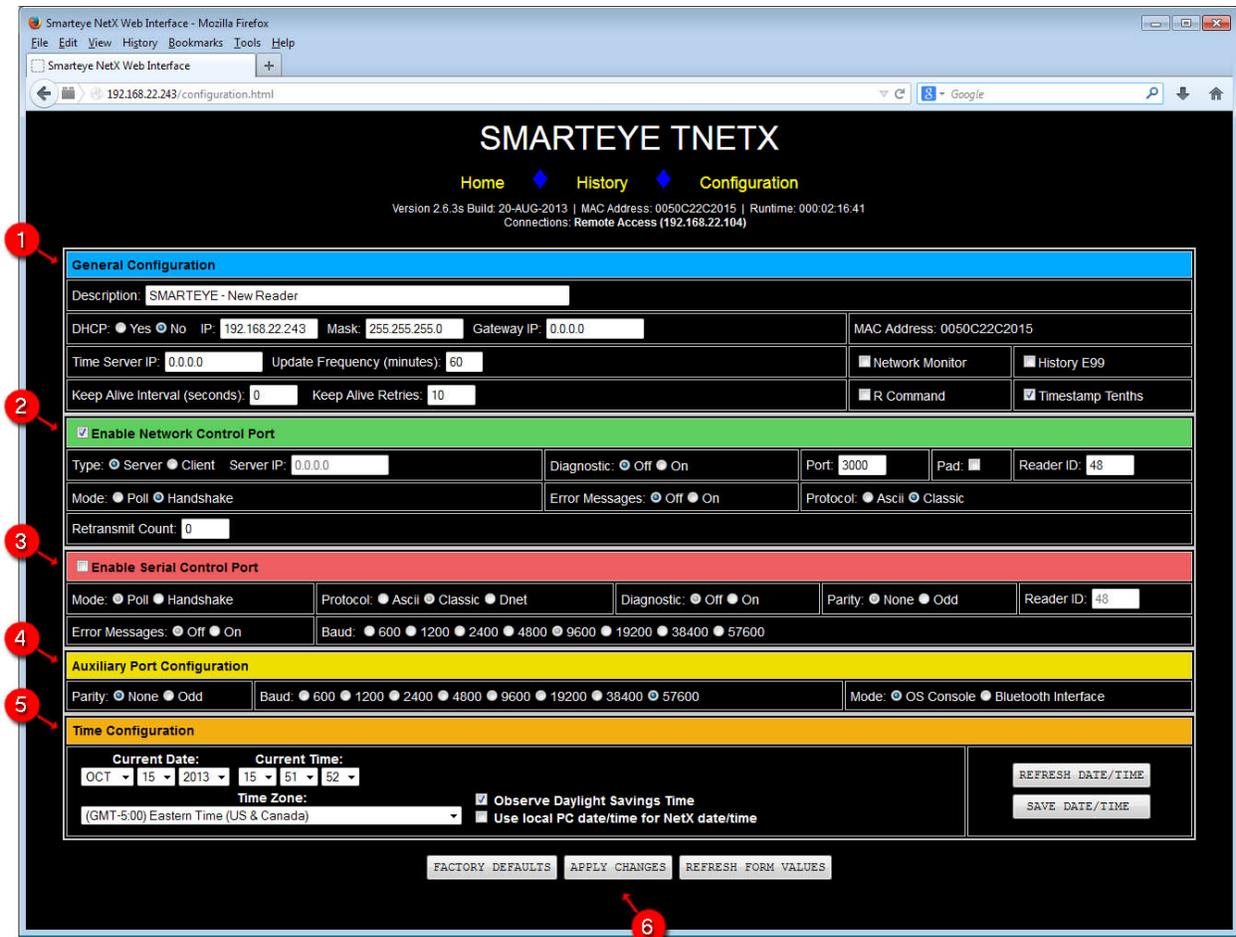


Figure 8

The Smarteye Netx Control Unit can now be configured.

1. General Configuration. If not DHCP then Set the IP address, mask and gateway.
2. Network Control Port. If the network TCP/IP port is to be utilized then enable this group and configure its parameters.
3. Serial Control Port. If the Serial control port is to be utilized then enable this group and configure its parameters.
4. Auxiliary Port Configuration. Generally the auxiliary port parameters should be left in their default state unless the unit has the Bluetooth option.
5. Time Configuration. If a timeserver is not present on the network then select the desired date, time, time zone and DST and click the ‘Save Date/Time’ button to set the internal clock of the Smarteye Netx Control Unit.
6. In order to make the changes permanent you must click the ‘Apply Changes’ button. This will store the settings in non-volatile flash memory.

The configuration file will be retained even after power is removed from the unit. After the settings are applied, the control unit will reboot with the new IP address. After rebooting you will not be able to web page to the control unit because the assigned IP no longer matches the PC's network. The Smarteye Netx Control Unit can now be installed on the plant's network. Repeat this process for each Smarteye Netx Control Unit that needs to be configured.

9.2 Software Configuration Using the Auxiliary Port

The Smarteye Netx Control Unit should be connected serially to either a terminal or a COM port on a computer using a serial cable. For the auxiliary port interconnection diagram, refer to the Auxiliary Port Wiring Details in the appendix. The control unit does not need to be connected to the network for Auxiliary Port configuration.

If connected to a computer, then a terminal emulator program such as Hyper Terminal will be required. The terminal settings should be 57600-baud, eight data bits, no parity, and one stop bit. Once the control unit is physically connected to a terminal or PC, it can be powered up.

Provided the Smarteye Netx Control Unit is not in Bluetooth data mode, the following information will be displayed on your terminal or PC through the COM port when the unit is first powered up. Based on the software version, the listed items below may vary.

SMARTEYE Version 2.6.2s Build: 07-FEB-2013

Boot Loader Version 1.56

Using setup parameters saved in flash

Configuration

Description:	Smarteye - New Reader
MAC Address:	0050C22C2015
DHCP:	No
IP:	192.168.22.243
Mask:	255.255.255.0
Gateway IP:	192.168.22.1
Time Zone:	-5:00
Time Server IP:	0.0.0.0
Time Server Freq:	60
Watchdog Enabled:	Yes
Password Protect:	No
Diag Start Delay:	5
Diag End Time:	30
Diag Reset Time:	0
Network Monitor:	No
E99 Logging:	No
KeepAlive Interval:	0
KeepAlive Retries:	10

Network Configuration

Active:	Yes
Type:	Server
Server IP:	0.0.0.0

Reader Address: 48
Diagnostics: On
Port: 3000
Retrans Count: 0
Pad: No
Comm Mode: Handshake
Comm Protocol: Classic
Error Messages: No

Control Port Configuration

Active: Yes
Baud Rate: 9600
Parity: None
Comm Mode: Poll
Diagnostics: On
Comm Protocol: Classic
Reader Address: 48
Error Messages: No

Auxiliary Port Configuration

Baud Rate: 57600
Parity: None
Mode: OS Console

ZiLOG TCP/IP Software Suite v2.3.2
Copyright (C) 2004, 2005 ZiLOG Inc.
All Rights Reserved 2cb5-87e6-d58c-7382-7128-65

MAC address: 00:50:c2:2c:20:15
IP address: 192.168.22.243

Starting control serial port communication process
Starting network server communication process
No Time Server Specified - Set date manually
Local Time is 26-MAR-2013 13:11:47
Watch Dog Timer Enabled
Starting remote discovery process
Starting network access port
RELEASE version
Network Cable Connected
Aux Port BlueTooth Option Off
[SMARTEYE]>

9.2.1 Serial configuration Commands

Typing the 'conf' command puts the control unit into configuration mode. Here operating parameters for the unit can be configured. Note: on older systems the command is 'aux conf'.

[SMARTEYE]>conf

COMMANDS:

1 = General Configuration
2 = Configure Network Control Port
3 = Configure Serial Control Port
4 = Configure Auxiliary Port
d = Default Configuration
e = Erase Flash Configuration
s = Save & prompt for Restart
r = Restart (reboot this unit)
q = Exit and return to OS shell
exit = Exit Configuration and return to OS shell
type <esc> then <enter> to exit submenus 1-4
conf%

Pressing the enter key without input, displays the available commands as shown above.

The control unit's configuration parameters are divided into four groups.

- General Configuration
- Network Control Port Configuration
- Serial Control Port Configuration
- Auxiliary Port Configuration

For a list and definition of every configuration parameter, see the next section.

The General Configuration group is where the Netx control unit's IP, Subnet Mask and Default Gateway parameters are set. Once changes have been made, use the 's' command to save and restart the unit.

To make configuration changes, enter the number of the group to be edited at the "conf%" prompt. For example typing a '1' at the "conf %" prompt will enter the General Configuration menu. Once in the menu, simply type your choice at the '?' prompt.

9.2.1.1 General Configuration Example

COMMANDS:

1 = General Configuration
2 = Configure Network Control Port
3 = Configure Serial Control Port
4 = Configure Auxiliary Port
d = Default Configuration
e = Erase Flash Configuration
s = Save & prompt for Restart
r = Restart (reboot this unit)
q = Exit and return to OS shell
exit = Exit Configuration and return to OS shell
type <esc> then <enter> to exit submenus 1-4
conf%1

Configuration

Description: [Smarteye - New Reader] ?

DHCP: 1=No 2=Yes [1] ?
 IP Address: [192.168.22.243] ?
 Mask: [255.255.255.0] ?
 Gateway IP: [192.168.22.1] ?

 Time Server IP: [0.0.0.0] ?
 Time Server Update Frequency: [60] ?
 Time Zone (hours:minutes from GMT): [-5:00] ?
 Date & Time: [26-MAR-2013 13:23:19] ?
 Watchdog Enable: 1=No 2=Yes [2] ?
 Watchdog Reset at priority 31: 1=No 2=Yes [1] ?
 Password Protect: 1=No 2=Yes [1] ?
 Diagnostic Start Delay (tenths of seconds): [5] ?
 Diagnostic Finish Delay (tenths of seconds): [30] ?
 Diagnostic Restart Delay (tenths of seconds) Zero to Disable: [0] ?
 Network Fault Monitoring: 1=No 2=Yes [1] ?
 Log E99 to History: 1=No 2=Yes [1] ?
 Message timestamp is in tenths of seconds: 1=No 2=Yes [2] ?
 Restart command 'R' is required: 1=No 2=Yes [1] ?
 Keep Alive Interval (0 secs = disabled): [0] ?

9.2.1.2 Network Port Configuration Example

COMMANDS:

1 = General Configuration
 2 = Configure Network Control Port
 3 = Configure Serial Control Port
 4 = Configure Auxiliary Port
 d = Default Configuration
 e = Erase Flash Configuration
 s = Save & prompt for Restart
 r = Restart (reboot this unit)
 exit = Exit Configuration and return to OS shell
 conf%2

Network Configuration
 Active: 1=No 2=Yes [2] ?
 Type: 1=Server 2=Client [1] ?
 Port: [3000] ?
 Comm Mode: 1=Poll 2=Handshake [2] ?
 Comm Protocol: 1=ASCII 2=Classic [2] ?
 Network Reader Address: [48] ?
 Diagnostics: 1=Off 2=On [2] ?
 Retransmit count before socket closes (0 = disabled - never close): [0] ?
 Pad: 1=No 2=Yes [1] ?
 Error Messages: 1=No 2=Yes [2] ?

9.2.1.3 Control Port Configuration Example

COMMANDS:

1 = General Configuration
 2 = Configure Network Control Port

3 = Configure Serial Control Port
 4 = Configure Auxiliary Port
 d = Default Configuration
 e = Erase Flash Configuration
 s = Save & prompt for Restart
 r = Restart (reboot this unit)
 exit = Exit Configuration and return to OS shell
 conf %3

Control Port Configuration
 Active: 1=No 2=Yes [2] ?
 Comm Mode: 1=Poll 2=Handshake [1] ?
 Comm Protocol: 1=ASCII 2=Classic 3=DeviceNet [2] ?
 Serial Reader Address: [48] ?
 Baud Rate: 1=600 2=1200 3=2400 4=4800
 5=9600 6=19200 7=38400 8=57600 [5] ?
 Parity: 1=None 2=Odd [1] ?
 Diagnostics: 1=Off 2=On [2] ?
 Error Messages: 1=No 2=Yes [2] ?

9.2.1.4 Auxiliary Port Configuration Example

COMMANDS:
 1 = General Configuration
 2 = Configure Network Control Port
 3 = Configure Serial Control Port
 4 = Configure Auxiliary Port
 d = Default Configuration
 e = Erase Flash Configuration
 s = Save & prompt for Restart
 r = Restart (reboot this unit)
 exit = Exit Configuration and return to OS shell
 conf %4

Auxiliary Port Configuration
 Baud Rate: 1=600 2=1200 3=2400 4=4800
 5=9600 6=19200 7=38400 8=57600 [8] ?
 Parity: 1=None 2=Odd [1] ?

9.3 Smarteye Netx Control Unit Configuration Parameters

Configuration parameters can be set using the Utility program, a web browser, a telnet session or through a serial connection to the auxiliary port. Refer to the “Software Configuration” section starting on page 9.

9.3.1 Smarteye Netx Control Unit Configuration Parameters - General Configuration

Parameter	Description
Description:	The Reader description field can be up to 63 ASCII characters. These characters can be 1-9, A-Z, a-z, ., -, _, @, *, or <sp>.

DHCP:	DHCP can be enabled or disabled. See: Software Configuration page 19
IP:	The unit's IP address. If DHCP is disabled, these values must be appropriate for your network
Mask:	The unit's IP net mask - typically 255.255.255.0
Gateway IP:	If your installation consists of two or more networks, which will be joined by a gateway node, then enter the IP address of the gateway here.
Time-Sever IP:	The IP address of a master time sever residing on the network. The Netx control unit supports both SNTP on port 123 and TIMEP on port 37. On power up, the Netx control unit determines the server type by first looking for an SNTP server and if not found, then looks for a TIMEP server.
Time-Server Frequency:	This parameter sets the time interval in minutes between time-server update requests. The default value is 60 minutes.
Time Zone:	For Eastern standard time a "-5:00" would need to be entered (-5 hours from GMT)
Date & Time:	Set the current date and time in the format shown
Watchdog:	The systems watchdog timer can be enabled or disabled.
Watchdog Reset at Priority 31:	The systems watchdog timer can be set to reset at priority 31 instead of the factory default reset priority.
Password Protect:	If "password protect" is enabled, users must enter a password to make configuration changes. This applies to the configuration webpage, the auxiliary port configuration dialog, and utility program setup page. Telnet sessions to the unit are always password protected regardless of this setting.
Password:	8 characters max. Default password is 'eyesmart'. If a new password is entered, it must be re-typed for confirmation before it will be accepted.
Diagnostic Start Delay:	The time in tenths of seconds where there can be no transitions of the photo-eyes before an attempt to generate a diagnostic message will be made.
Diagnostic Finish Delay:	The time in tenths of seconds where there must be photo-eyes transitions or the diagnostic attempt will be aborted.
Diagnostic Restart Delay:	The time in tenths of seconds that must elapse after a diagnostic message has been created before another attempt will be made. Zero disables this feature.
Network Monitor:	When network monitoring is enabled, any connection left in an improper state is automatically terminated. The network monitor frees the connection so that it may be utilized again. Normally the network monitor is disabled however on a badly behaved network it may be utilized until the network issues can be resolved.
History Logging	A value of 1 will stop E99 errors from being written to the history file. A

of E99:	value of 2 will allow E99 errors to be written to the history file.
Tenths:	Message timestamp is in tenths of seconds, otherwise in seconds 0-99.
Restart command	In poll mode the ‘R’ command is required. Network port only.
Keep-Alive Interval:	A non-zero value activates the keep-alive function. The keep-alive interval (in seconds) is the allowed time of inactivity before a TCP/IP keep-alive message is sent to the host computer.
Keep-Alive Retries:	Set this value to the number of TCP/IP keep-alive message to be sent without a response before the port is reset. The retry range is 1-255.

Smarteye Netx Control Unit Configuration Parameters - Network Control Port

Parameter	Description
Active	Select if your host will utilize the network control port over Ethernet. See: Communication page 51. Choose no or unselect to disable this port.
Type:	The unit can be a server or a client. In client mode, the server’s IP address must be specified.
Server IP:	If the unit is a client, supply server IP address.
Port:	Port is the number agreed upon between the server and client to identify the network service. Port numbers in the range 0 to 1023 are reserved for well-known TCP/IP services. Port numbers 1024 to 49151 are registered with the Internet Assigned Numbers Authority (IANA). On most systems, registered ports can be used by ordinary user processes. Port numbers in the range 49152 to 65535 are for dynamic and/or private ports.
Comm Mode:	Polled (solicited) or handshake (unsolicited)
Comm Protocol:	Set the message protocol – ASCII or Classic.
Reader Address:	0000-9999 ASCII protocol or any single ASCII character in classic protocol.
Diagnostics:	If diagnostics is ON, then diagnostic messages will be sent to the host, if OFF, then diagnostic information will be saved to the history file but not sent to the host.
Retransmit Count	Retransmit count is the number of times a message is sent to the host control system without being acknowledged before the connection is terminated. If the retransmit count is zero then the Netx control unit sends the message indefinitely. The retransmit range is 0-255.
Pad:	Pads all control unit network messages with the ‘*’ character. All message lengths are fixed at 42 characters.

Error Messages:	If error messages are ON, then error messages will be sent to the host, if OFF, then error messages will not be sent to the host
-----------------	--

9.3.2 Smarteye Netx Control Unit Configuration Parameters - Serial Control Port

Parameter	Description
Active	Select if your host will utilize the serial control port. See: Communication page 36
Com Mode:	Polled (solicited) or handshake (unsolicited)
Com Protocol:	Set the message protocol – ASCII, Classic, or Device Net (optional)
Reader Address:	0000-9999 ASCII protocol or any single ASCII character in classic protocol.
Baud Rate	Set the baud for the serial control port
Parity:	None or Odd parity for the serial control port
Diagnostics:	If diagnostics is ON, then diagnostic messages will be sent to the host, if OFF, then diagnostic information will be saved to the history file but not sent to the host.
Error Messages:	If error messages are ON, then error messages will be sent to the host, if OFF, then error messages will not be sent to the host

9.3.3 Smarteye Netx Control Unit Configuration Parameters - Auxiliary Port

Parameter	Description
Baud Rate	Set the baud for the serial Auxiliary port
Parity:	None or Odd parity for the serial Auxiliary port


10.0 Monitoring

All Smarteye Netx Control Units has a built in monitoring tool that can be used to:

1. Monitor communication with a host computer
2. Show the last Label read, last Error generated, or last Diagnostic message
3. Show in real time each Label, Error, or Diagnostic message that is generated
4. Show the current state of the three photo eyes (A, B, & C) for the connected reader(s)
5. Show the version number and build date of the firmware
6. Show the run time of the unit in days, hours and minutes since the last reboot.

The monitoring tools are accessed either through the serial Auxiliary port or over the network using telnet. The Auxiliary port requires a cable to connect the Netx control unit to a terminal or PC. The wiring details for this cable are illustrated in the appendix. Telnet requires the Smarteye Netx Control Unit to be connected to the same network as the PC.


Telnet can be started on the PC through a command window. Startup a command window and enter the command “telnet” followed by the IP address of the control unit as shown below.

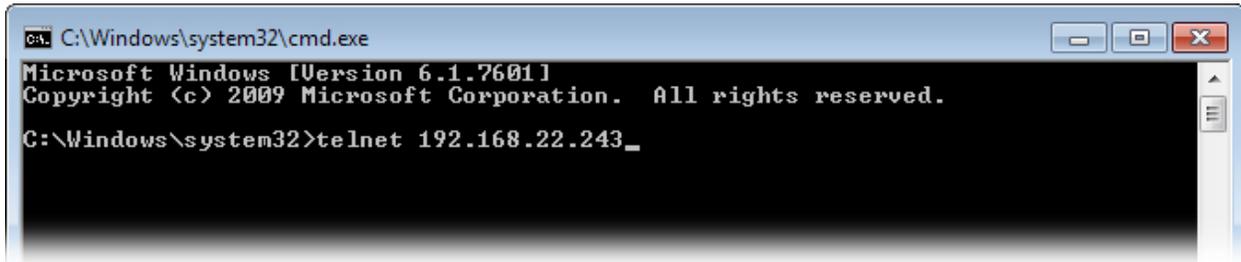

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>telnet 192.168.22.243_
```

You will then be prompted for a password.. The default password is ‘seye’. To terminate the telnet connection, type ‘exit’.

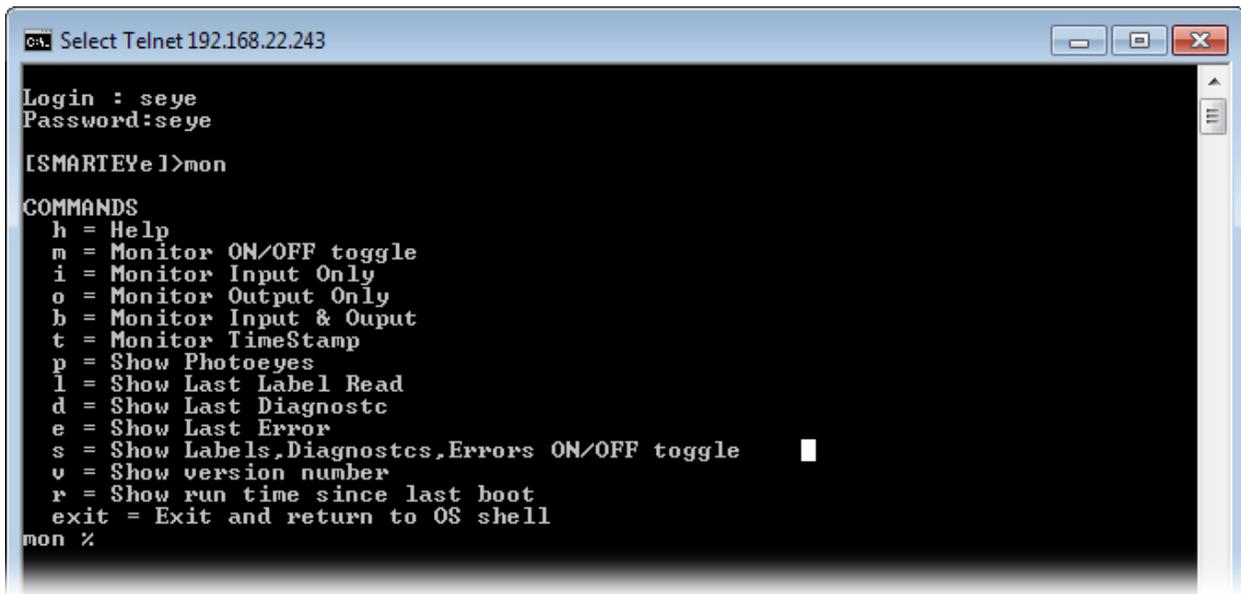

```
C:\> Select Telnet 192.168.22.243

Login : seye
Password:seye

[SMARTEYe ]>mon

COMMANDS
h = Help
m = Monitor ON/OFF toggle
i = Monitor Input Only
o = Monitor Output Only
b = Monitor Input & Ouput
t = Monitor TimeStamp
p = Show Photoeyes
l = Show Last Label Read
d = Show Last Diagnostc
e = Show Last Error
s = Show Labels,Diagnostcs,Errors ON/OFF toggle
v = Show version number
r = Show run time since last boot
exit = Exit and return to OS shell
mon %
```

The ‘mon’ command puts your session in monitor mode. The auxiliary port or telnet session is used to monitor the control port and for system inquiries. The factory default settings for the auxiliary port are RS232 protocol, 57600 baud, 8 bits, 1 stop bit and no parity.

10.1 Monitor Commands:

The ‘mon’ mode is programmed to respond to single character commands followed by a carriage return (enter key) with the exception of the ‘exit’ command. The single character commands are:

- h Help - displays a list of valid commands
- m Monitor - toggles the monitor function on and off
- i Input - selects input only for the monitor function
- o Output - selects output only for the monitor function

- b Both, selects input and output for the monitor function
- t Monitor Timestamp
- p Photo-eyes – show the state of the three photo-eyes
- l Label - show the last label read
- d Diagnostic – show the last diagnostic values
- e Error – show the last error
- s Show – show label, diagnostic, and error messages (ON/OFF toggle)
- v Version - show the software version number and build date
- r Show run time since last boot

10.1.1 HELP – ‘h<cr>’

The help command displays a list of valid command characters along with a brief description for each.

```
[SMARTEYET]>aux mon (or just mon on newer software)
mon % h
COMMANDS
h = Help
m = Monitor ON/OFF toggle
i = Monitor Input Only
o = Monitor Output Only
b = Monitor Input & Ouput
t = Monitor Timestamp
p = Show Photoeyes
l = Show Last Label Read
d = Show Last Diagnostc
e = Show Last Error
s = Show Labels,Diagnostcs,Errors ON/OFF toggle
v = Show version number
r = Run time since last boot
exit = Exit Monitor and return to OS shell
mon %
```

10.1.2 MONITOR – ‘m<cr>’

The monitor command toggles the monitoring function on and off for the auxiliary port. Default mode is ‘b’, all messages being sent and received by the Smarteye Netx Control Unit will be logged to the auxiliary port. These messages can be viewed by a terminal or computer wired to the auxiliary port or through a telnet connection to the control unit.

```
mon % m
1. serial control port
2. network connection 192.168.22.243
choose monitor port number 2
```

```

mon %
Tx> <0A>0C A+00 B+00 C+00 X+00 Y+00 T00S9Zhh<0D> ****
Rx< <0A>0AZcb<0D>
Tx> <0A>0L05515 T00S0Zap<0D> *****
Rx< <0A>0AZcb<0D>
Tx> <0A>0C A+00 B+00 C+00 X+00 Y+00 T00S1Zhp<0D> ****
Rx< <0A>0AZcb<0D>
Tx> <0A>0L02602 T00S2Zap<0D> *****
Rx< <0A>0AZcb<0D>
Tx> <0A>0C A+00 B+00 C+00 X+00 Y+00 T00S3Zhn<0D> ****
Rx< <0A>0AZcb<0D>
mon % i
Rx< <0A>0AZcb<0D>
Rx< <0A>0AZcb<0D>
Rx< <0A>0AZcb<0D>
Rx< <0A>0AZcb<0D>
Rx< <0A>0AZcb<0D>
mon % o
Tx> <0A>0L00906 T00S0Zae<0D> *****
Tx> <0A>0C A+00 B+00 C+00 X+00 Y+00 T00S1Zhp<0D> ****
Tx> <0A>0L04280 T00S2Zah<0D> *****
Tx> <0A>0C A+00 B+00 C+00 X+00 Y+00 T00S3Zhn<0D> ****
Tx> <0A>0L07653 T00S4Zai<0D> *****
mon % m

```

10.1.3 INPUT – ‘i<cr>’

The input command monitors only the messages being received by the Smarteye Netx Control Unit. This command works in conjunction with the monitor command.

```
mon % i
```

10.1.4 OUTPUT – ‘o<cr>’

The output command monitors only the messages being sent by the Smarteye Netx Control Unit. This command works in conjunction with the monitor command.

```
mon % o
```

10.1.5 BOTH – ‘b<cr>’

The both command monitors messages being sent and received by the Smarteye Netx Control Unit. This command works in conjunction with the monitor command and is the default mode when the monitor is first enabled.

```
mon % b
```

10.1.6 TIMESTAMP – ‘t<cr>’

The timestamp command adds a timestamp to the front of the in coming and out going monitored messages. The timestamp is formatted in minutes and seconds as shown below. The timestamp will start over after an hour. This command works in conjunction with the monitor command.

mon % t

58:53 Tx> <0A>0L15655 T00S4Zan<0D>

58:53 Rx< <0A>0AZcb<0D>

59:07 Tx> <0A>0L15656 T00S5Zap<0D>

59:07 Rx< <0A>0AZcb<0D>

10.1.7 PHOTOEYES – ‘p<cr>’

The photoeyes command displays the current state of the reader input port.

- If photoeye ‘A’ is on (blocked), a ‘1’ will be displayed in the ‘A’ slot.
- If photoeye ‘B’ is on (blocked), a ‘1’ will be displayed in the ‘B’ slot.
- If photoeye ‘C’ is on (blocked), a ‘1’ will be displayed in the ‘C’ slot.

The following example shows photoeyes ‘A’ and ‘B’ on (blocked) while ‘C’ is off.

mon % p

Rdr 0 ABC 110

10.1.8 LABEL – ‘l<cr>’

The label command displays the last label read by the Smarteye Netx Control Unit. The output from the ‘l’ command looks like this:

mon % l

Rdr 0 21-JAN-2009 13:09:40 1376

10.1.9 ERROR – ‘e<cr>’

The error command displays the last error read by the Smarteye Netx Control Unit. The output from the ‘e’ command looks like this:

mon % e

Rdr 0 21-JAN-2009 13:06:14 99 Diagnostic attempt aborted

10.1.10DIAGNOSTIC – ‘d<cr>’

The diagnostic command displays the last diagnostic message. The output from the ‘d’ command looks like this:

mon % d

Rdr 0 21-JAN-2009 13:10:16 A:0 B:0 C:0 X:0 Y:0

10.1.11SHOW – ‘s<cr>’

The show command will show the label, diagnostics, and errors as they occur during Smarteye Netx Control Unit communication. This is a toggle command, so typing it again will turn it off. The output from the ‘s’ command looks like this:

mon % s

Rdr 0 04-FEB-2008 19:31:47 Label: 3043

Rdr 0 04-FEB-2008 19:31:54 Diagn: A:0 B:0 C:0 X:0 Y:0

Rdr 0 04-FEB-2008 19:31:58 Label: 2607

Rdr 0 04-FEB-2008 19:32:04 Diagn: A:0 B:0 C:0 X:0 Y:0

Rdr 0 04-FEB-2008 19:32:09 Label: 6616

Rdr 0 04-FEB-2008 19:32:09 Error: 99 Diagnostic attempt aborted

10.1.12VERSION – ‘v<cr>’

The version command displays the current software revision along with the build date. The output from the ‘v’ command looks like this:

mon % v

SMARTEYE Version 2.5.4 Build Date 24-NOV-2010

BootLoader 1.53

10.1.13RUNTIME – ‘r<cr>’

The runtime command displays the length of time the Netx unit has been running since the last boot.

mon % r

RunTime DDD:HH:MM:SS - 000:22:33:35

10.1.14EXIT – ‘exit<cr>’


The exit command shuts down the monitoring process (if active) and places the aux port back into OS console mode.

mon % exit

[SMARTEYE]>

11.0 Smarteye Netx Control Unit Web Pages

Once the Smarteye Netx Control Unit has been connected to the plant's network, reader information can be viewed from a computer connected to the same network using a standard web browser. Enter the IP address of the unit to be viewed in the address bar of the browser as shown below.

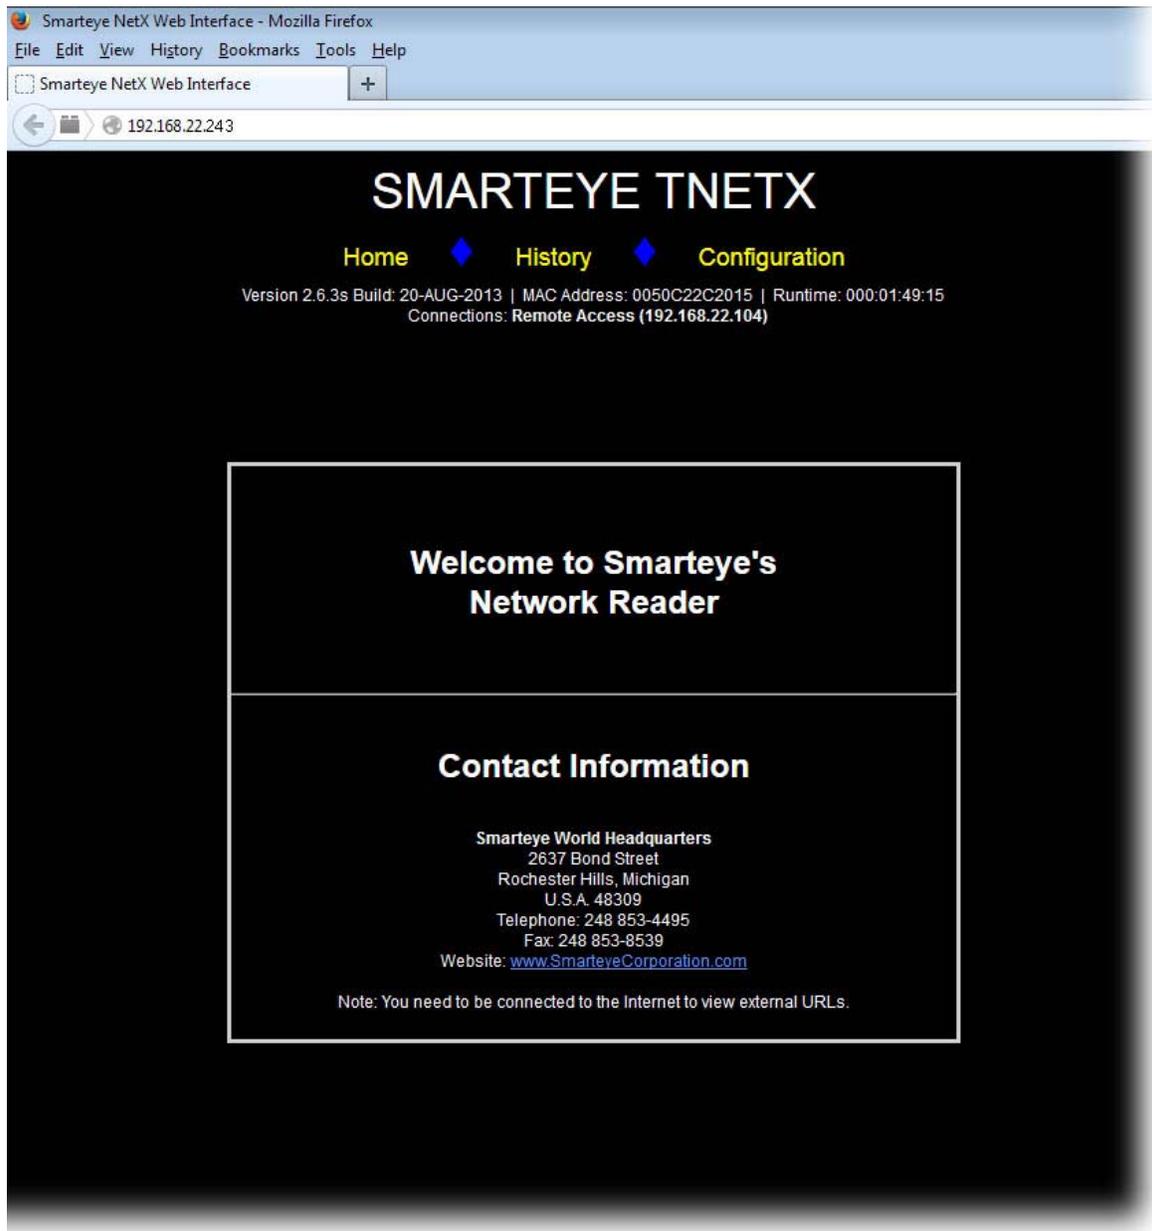


The Smarteye Netx Control Unit home page has general Smarteye Corporation contact information. From this webpage, there are links to the Reader history page and the Reader configuration page. Clicking on either of the links will bring up the selected webpage.

11.1.1 Configuration webpage

The Smarteye Netx Control Unit configuration page consists of a header and five primary configuration panes:

1. Header Information.
2. General Configuration
3. Network Control Port Configuration
4. Serial Control Port Configuration
5. Auxiliary Port Configuration
6. Time Configuration.

The Smarteye Netx Control Unit configuration page has links to the home and history pages. There are also three buttons one for restoring the factory default configuration, one to apply changes and one to refresh the page.

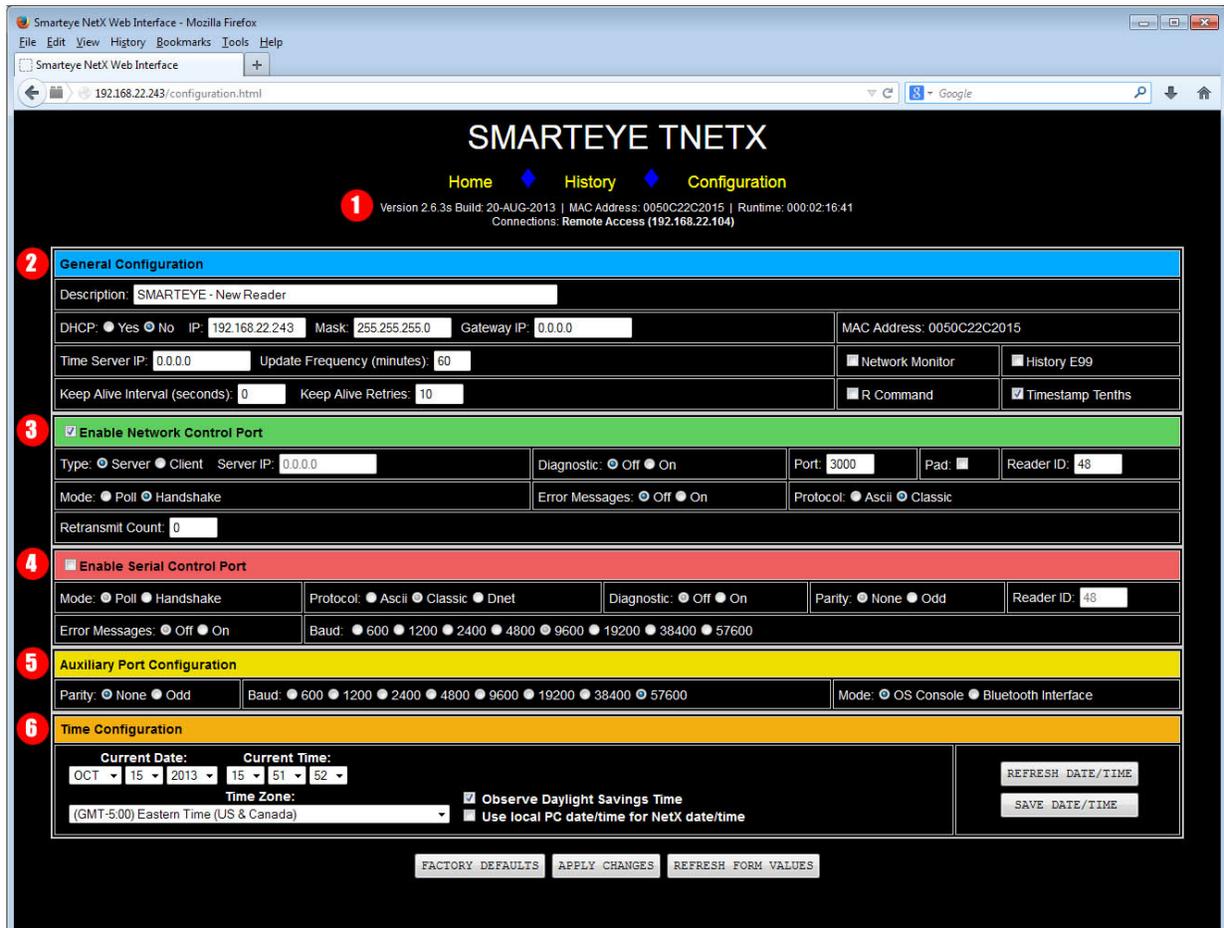

1. The header information is located at the top of the page and shows the model, software version, MAC address, run time and any established network connections.

2. The General configuration pane shows parameters that pertain to the unit as a whole.
3. The Network Port configuration pane shows parameters specific to the network port connection.
4. The Serial Port configuration pane shows parameters specific to the serial port connection.
5. The Auxiliary Port configuration pane shows parameters specific to the auxiliary port connection.
6. The Time configuration pane shows parameters specific to the real time clock.


For a description of each setup parameter show above, refer to page [24](#) of this manual.

The Smarteye Netx Control Unit date and time pane is used to manually set the local date and time. The control unit's date and time only needs to be manually set if a network timeserver is not available. If a network timeserver is available, then setting the date and time manually will have no effect.

The default date for the control unit is the software's build date. The time is set to 12:00 am. Prior to connecting to a network timeserver or manually setting the control unit's date and time, the default date and time will be used. The control unit's date and time is used to mark read events for the history page. After setting the date and time, clicking the 'Save Date/Time' button will set the control unit's internal clock to the specified date and time. The internal clock will only retain the correct data and time for maximum of 4 hours after power has been removed from the unit. To insure that the correct data and time is maintained through extended power outages a network timeserver should be utilized.

Read History webpage

View the read history via the example screen below.

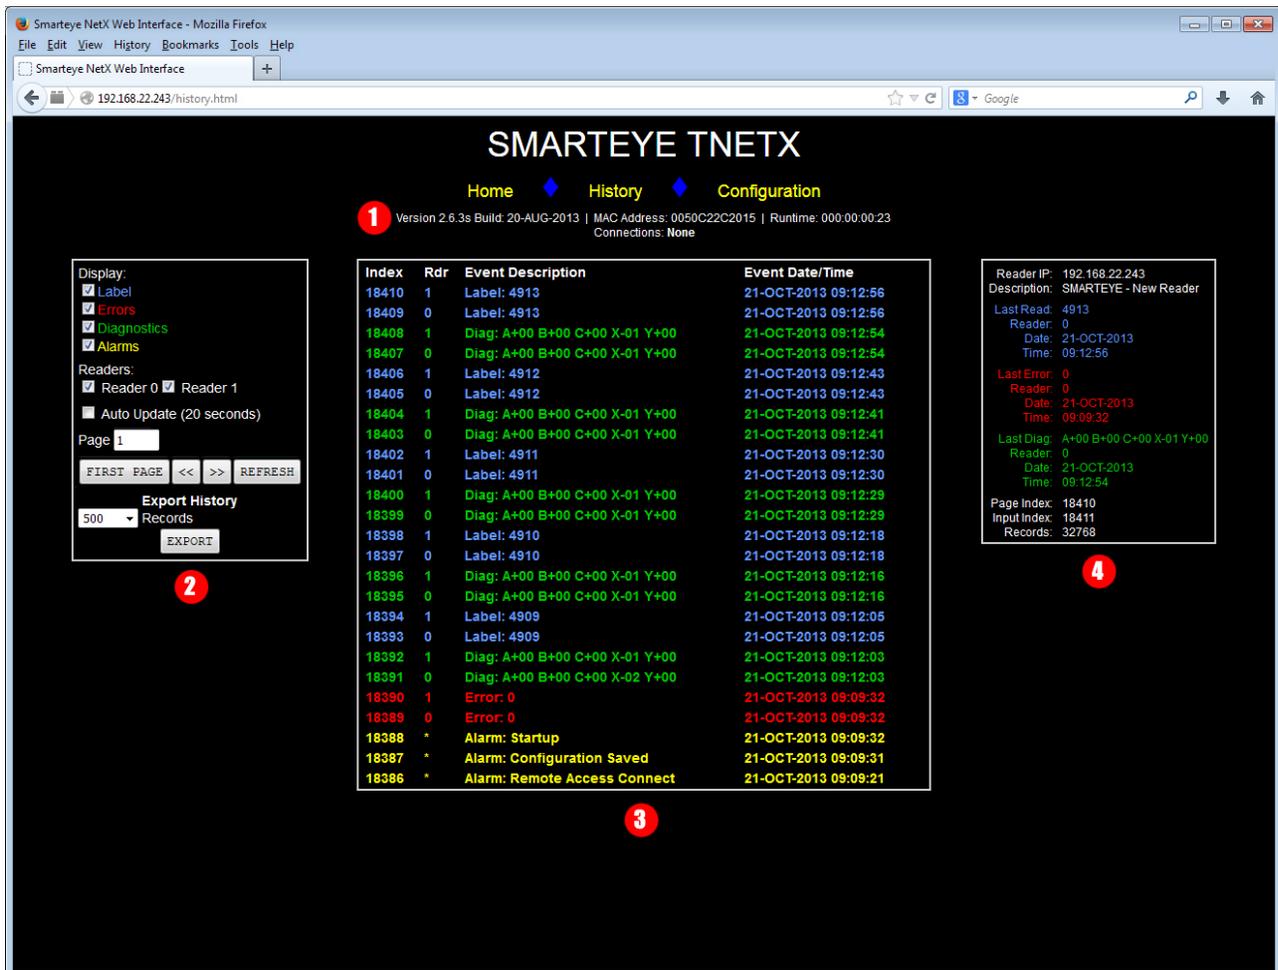

The history webpage consist of four main groups.

1. The Header group. The header information is located at the top of the page and shows the model, software version, MAC address, run time and any established network connections.

2. Navigation and type selection. The Navigation pane is located on the top left side and allows the user to filter which events, labels, errors and/or diagnostics, to display in the history pane. For T-netx and Multi-netx units the user can also choose which reader(s) to display. Checking the 'Auto-Update' box will automatically refresh the screen every 20 seconds. Clicking the next '>>' or previous '<<' page buttons will jump the history pane to the next or previous page. A page is 25 records in length. To jump quickly into the history use the page input box to specify a specific page number then click the 'Refresh' button. The 'First Page' button returns the history immediately back to page 1 (most current events). The maximum page number for a unit with a completely full history file is 1310. The upper page varies anywhere between 983 and 1310 depending upon the model and how full the history is. The history message queue is circular and goes from record 1 to 32,768. The history queue will wrap back to record 1 when full. You can also save the history records to a file by selecting the number of records desired then clicking the 'Export' button.
3. History group. The History pane is located in the middle of the page and displays history records matching the criteria specified in the Navigation pane. The displayed history is in chronological order with the most recent entry at the top of the page. Page 1 always shows the last (most recent) 25 messages posted to the history file. The displayed records are color keyed to make it easier to determine the message type. Blue is for labels, green is for diagnostics and red is for errors.
4. Last Events group. The Last Event pane is located on the right side of the page and displays the reader's IP address, reader description and the last label, error, and diagnostic message for the unit. Also displayed at the bottom of this pane is the page and input index. The input index displays the current location of the input pointer. This is the next location in memory that a history event message will be written to. In the example shown above this value is 16612. The page index shows the record number of the top message for the current page. In the example above, the page record range is from 16611 at the top, down to 16587 at the bottom.

12.0 Power-Up

After the Smarteye Netx Control Unit has been mounted and the DC power is terminated, an initial checkout can be completed.

When power is applied, the Smarteye Netx Control Unit reads the setup configuration and initializes its internal data. If the communication mode is handshake, then the reader is brought on-line and the control unit will immediately begin communicating to the control system. If poll mode is selected, then the reader is off-line at power-up and is not put on-line until an initialization message ('I' or 'R') is received from the control system.

The Smarteye Netx Control Unit always creates an 'error 0' message for each reader at power-up.

13.0 Communication

The Smarteye Netx Control Unit has three communication ports: the Ethernet control port, the serial control port and the auxiliary port. The Ethernet control port and the serial control port connect to a programmable controller or computer and provide the host system with label inputs from Smarteye readers. The auxiliary port connects to a user display terminal or laptop computer and is used for troubleshooting. With the Smarteye Bluetooth option, the auxiliary port can be set up to function as a Bluetooth interface. In this mode, a Bluetooth enabled device in conjunction with Smarteye's Bluetooth interface software, can be used to acquire real-time reader activity and historical data wirelessly.

Message flow is usually in only one direction at a time. However, full duplex communication is implemented and during error recovery or when device commands are being received, it is possible that messages may flow in both directions simultaneously. Therefore, the control system communicating with the Smarteye Netx Control Unit should be implemented for full duplex.

The Smarteye Netx Control Unit's communication is governed by the protocol described in this manual. All references to messages received and transmitted are from the point of view of the Smarteye Netx Control Unit.

13.1 Ethernet Control Port Operation

The Smarteye Netx Control Unit communicates over the Ethernet network to the control system. The control unit can be either a client or server on the network and may be set to communicate in one of two modes: Poll or Handshake. These two modes are described in this manual. For the Ethernet port interconnection diagram (cable pin out configuration), refer to the Ethernet connection Wiring Details in 'Appendix B or C'.

13.2 Auxiliary Port Operation

The auxiliary port is used to monitor the control port and for system inquiries. The auxiliary port is factory configured to communicate in the RS232 standard. The baud rate and parity used for the auxiliary port are user selectable. The factory default settings for the auxiliary port are RS232, 57600 baud, 8 bits, 1 stop bit and no parity. For the auxiliary port interconnection diagram, refer to the Auxiliary Port Wiring Details in the appendix. If the Bluetooth interface option is purchased, the auxiliary port is configured for Bluetooth data mode.

13.3 Message Protocols Classic (Original) & Full ASCII

There are two ASCII message protocols supported by the Smarteye Netx Control Unit. The first is the original Smarteye ASCII protocol that will be referred to as the **Classic** protocol and the second as the **Full ASCII** protocol. The **Classic** protocol is identical to the protocol used on the earlier Smarteye SEA-8 and Twin units. The **Full ASCII** protocol is only available on the new Smarteye Netx products.

The only difference in the two protocols is the reader ID character(s). In the **Classic** protocol, the reader ID is one byte represented by <id> which is a binary number. In the **Full ASCII** protocol, the reader ID is four bytes represented by 'rrrr' which is a string of four ASCII digits.

13.4 Message Conventions for Classic Protocol

A communication message consists of a string of bytes beginning with a line-feed and terminated with a carriage-return. To represent the bytes in a message string, the following conventions are observed:

A byte value that falls within the non-printable range of the ASCII character set will be shown as a character string enclosed in brackets < >. Since in classic mode the reader ID character can be either printable or non-printable it will sometime be show with the < > brackets and other times be shown as a single ASCII character.

<lf> = line-feed (decimal 10)

<cr> = carriage-return (decimal 13)

<id> = binary number representing reader ID (classic mode 0-255, ASCII mode 0-9999)

e.g., <48> = ASCII character '0';


nn... represents a string of ASCII digits. The digits are decimal unless otherwise noted.

s is a sign character preceding an nn... string. Its values are '-', '+', or ' ' (space).

Other bytes are ASCII capital letters, usually indicating the type of numeric field, which follows. A letter is also used in a received message to represent a device command.

Zzz is the checksum field where zz is two ASCII lower case letters representing the checksum byte. The checksum byte is obtained as the exclusive-or of all the bytes in the message string up to and including the checksum field indicator, 'Z'. The two checksum characters are obtained for the checksum byte by adding each hexadecimal digit of the byte (hex values 0 to F) to ASCII 'a', resulting in two lower case letters, each with a value between 'a' and 'p'. See the example calculation below. On received messages, this field is optional; i.e., if the Z field is not present, then no message integrity check is done and the message is assumed to be valid and processed.

Checksum Calculation Example

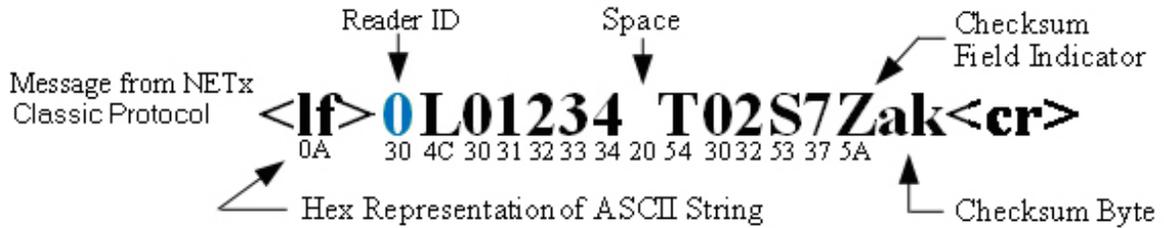

Checksum calculation - the exclusive-OR of all Hex bytes above = 0A HEX

$$\begin{array}{r}
 0 \\
 + 61 \\
 \hline
 61
 \end{array}
 \quad
 \begin{array}{r}
 A \\
 + 61 \\
 \hline
 6B
 \end{array}$$

61 is the Hex representation for an ASCII "a"

The ASCII equivalent of the resulting Hex numbers: 61 and 6B yields the checksum byte "ak"

13.4.1 Received Poll

<lf><id><cr> Polli (poll w/o checksum)
<lf><id>Zzz<cr> Pollz (poll with checksum)

13.4.2 Received Commands

<lf><id>c<cr> (command w/o checksum)
<lf><id>cZzz<cr> (command with checksum)

Where c is replaced by one of the following command characters:

- I - Initialize the reader online
- R - Restart, initialize the reader online and clear photoeye buffers
- B - Box poll, request pending message for any active reader in the box
- A - Ack the previous device transmission
- N - Nak the previous device transmission
- S - Status inquiry regarding reader
- F - Take reader offline
- L - Last read, request last read for specified reader
- E - Last error, request last error for specified reader
- C - Last diagnostic, request last diagnostic for specified reader

Note: The Nak command is used when the host detects a line error. Upon receiving a Nak, the Smarteye Netx Control Unit will retransmit the original message.

13.4.3 Messages Transmitted By The Smarteye Netx Control Unit

Communication characters include **one start bit, eight data bits, an optional parity bit, and one stop bit.**

The fields in transmitted messages include:

Lnnnnn, label field, where nnnnn is the number of the label which has just passed reader <id>. The number of digits in the label field is five (filled with leading '0's, if necessary).

Tnn, time field, indicating the age of the message in tenths of seconds; e.g., T45 indicates a message 4.5 seconds old.

Sn, sequence number, where n ranges from 0 to 9, incremented circularly (modulo 10) for each new message transmitted by the Smarteye Netx Control Unit.

Enn, error field. A description of the error for each value of nn may be found in 'Error Messages.'

Asnn, Bsnn, Csnn, Xsnn, and Ysnn diagnostic readings:

Asnn, Bsnn, and Csnn are the trigger point numbers for photoeyes A, B and C.

Xsnn is the alignment offset between photoeyes A and B.

Ysnn is the alignment offset between photoeyes B and C.

Zzz, checksum, is described in 'Message Conventions.'

A summary of transmitted messages follows. Each message is tagged with a lower case letter. In the following sections which deal with the various communication modes, a message transmitted as a response to a message received is represented by its lower case tag letter.

13.4.3.1 Online Idle Message

<lf><id><cr>	i - poll mode
<lf><id>Zzz<cr>	z - poll mode, with checksum
<lf><id>AZzz<cr>	a - non-poll mode

13.4.3.2 Offline Message

<lf><id>NZzz<cr>	n - offline
------------------	-------------

Online/offline notes:

1. All transmitted messages will include a checksum except an online idle message in poll mode which is a response to a poll which did not include a checksum.
2. In poll mode, the offline response occurs only when an online reader is taken offline with the 'F' command. Once a reader is offline, there are no responses to any messages except the command ' I ' or 'R'. Each of these commands will first place the reader online, so that the resultant response is the online idle for poll mode.

3. Online idle and offline messages do not include an 'R' (retransmit) field, nor a 'T' (age) field, nor an 'S' (sequence number) field.

Other messages transmitted by a Smarteye Netx Control Unit do include these fields.

13.4.3.3 Label Message

<lf><id>Lnnnnn TnnSnZzz<cr> l - label
 <lf><id>LnnnnnRTnnSnZzz<cr> r - retransmit

13.4.3.4 Error Message

<lf><id>Enn TnnSnZzz<cr> e - error
 <lf><id>EnnRTnnSnZzz<cr> r - retransmit

13.4.3.5 Diagnostic Message

<lf><id>C Asnn Bsnn Csnn Xsnn Ysnn TnnSnZzz<cr> c - diagnostic
 <lf><id>C Asnn Bsnn Csnn Xsnn Ysnn RTnnSnZzz<cr> r - retransmit

13.4.4 Poll Mode

Polled operation requires a host system to poll (solicit) the Smarteye Netx Control Unit for information. Messages are sent by a Smarteye Netx Control Unit only in response to a message received. Two types of poll commands are supported: a 'reader poll' solicits a response from a specific reader, while a 'box poll' requests read data for any reader connected to a Smarteye control unit (SEA8, Twin, or Netx product). In either case, if there is no data to be sent, an online idle response is transmitted.

The box poll <id> for a Netx reader must be the address of the Netx control unit.

Acknowledgement is expected for any message transmitted other than online idle or offline. If a transmitted message is not acknowledged, then the next message received for the same reader will produce retransmission.

At power up in poll mode, the reader is set offline and remains so until an initialize device command 'I' is received for the reader or a restart command 'R' is received.

13.4.4.1 Summary Of Responses - Poll Mode

<u>Received by Netx</u>	<u>Netx Response</u>	
	(status when message received)	
	<u>(online)</u>	<u>(offline)</u>
- Polli	r,l,e,c,i	@
- Pollz	r,l,e,c,z	@
I - Initialize	z	z
A - Ack	@	@
B - Box poll	r,l,e,c,z	@
N - Nak	r,l,e,c,z	@
S - Status inquiry	r,l,e,c,z	@
R - Restart	z	z
F - Take reader offline	n	@
L - Last read	l,z	@
E - Last error	e	@
C - Last calibration/diagnostic	c,z	@
	@ - no response	
	r - retransmission of previous message	
	l - label message	
	e - error message	
	c - diagnostic message	
	i - online idle w/o checksum	
	z - online idle with checksum	
	n - offline	

13.4.5 Handshake Mode

In handshake mode, messages are transmitted as soon as data is available without having been solicited by a received message.

The host must send an acknowledgement for each data message transmitted. If a transmitted message is not acknowledged within a specified time (approximately 3 seconds), then retransmission occurs. Messages are also retransmitted when communication errors occur.

If a message is received while acknowledgement is pending and it is not the acknowledgement, then retransmission occurs immediately. Usually the response to a received message will be either an 'a' (online idle) or 'n' (offline) message which pertains to the reader of the received message.

However, when an incoming message is received and another message has been prepared for transmission pertaining to any reader, then the prepared message is transmitted. If there is no prepared message and the received message was ack, then no response is made.

In handshake mode, All reader(s) are set online at power up.


13.4.5.1 Summary of Responses - Handshake Mode

<u>Received by Netx</u>	<u>Netx Response</u> <u>(online or offline)</u>
- Poll	r,l,e,c,a,n
I - Initialize	r,l,e,c,a
A - Ack	l,e,c,@
B - Box poll (Same as "S")	r,l,e,c,a,n
N - Nak	r,l,e,c,a,n
S - Status inquiry	r,l,e,c,a,n
R - Restart	e,a
F - Take reader offline	r,l,e,c,n
L - Last read	l,a@
E - Last error	e@
C - Last diagnostic	c,a@

- @ - no response
- r - retransmission of previous message
- l - label message
- e - error message
- c - diagnostic message
- a - online idle, non-poll mode
- n - offline


13.4.5.2 Example #1 - Handshake Mode - Normal Operation

Previous transaction complete, line is quiescent.

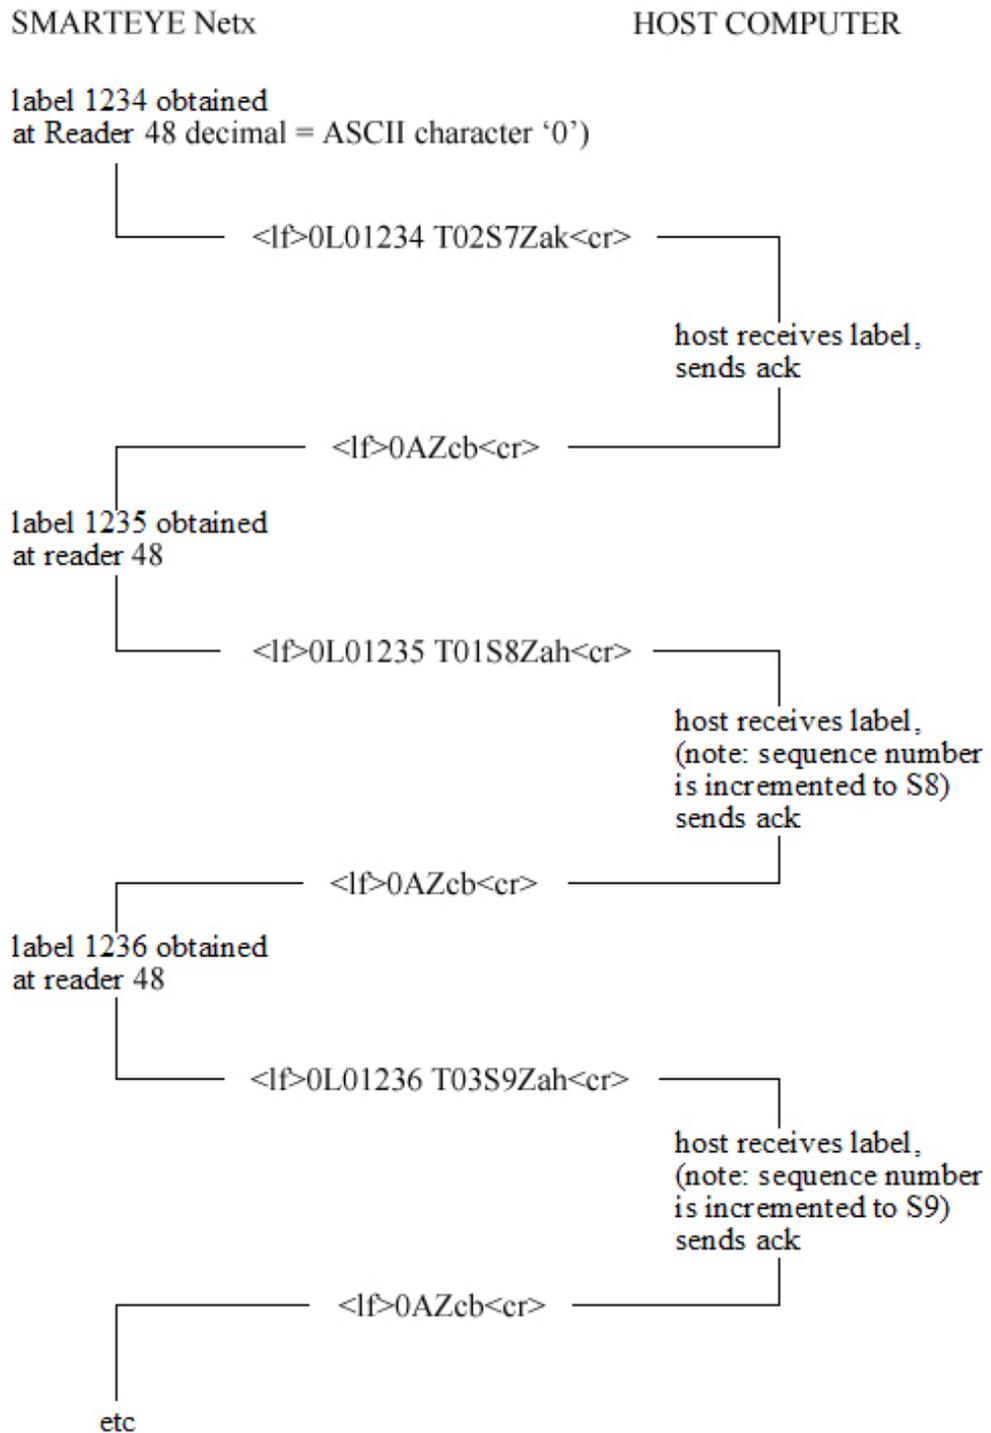

13.4.5.3 Example #2 - Handshake Mode - Abnormal Operation

Previous transaction complete, line is quiescent.

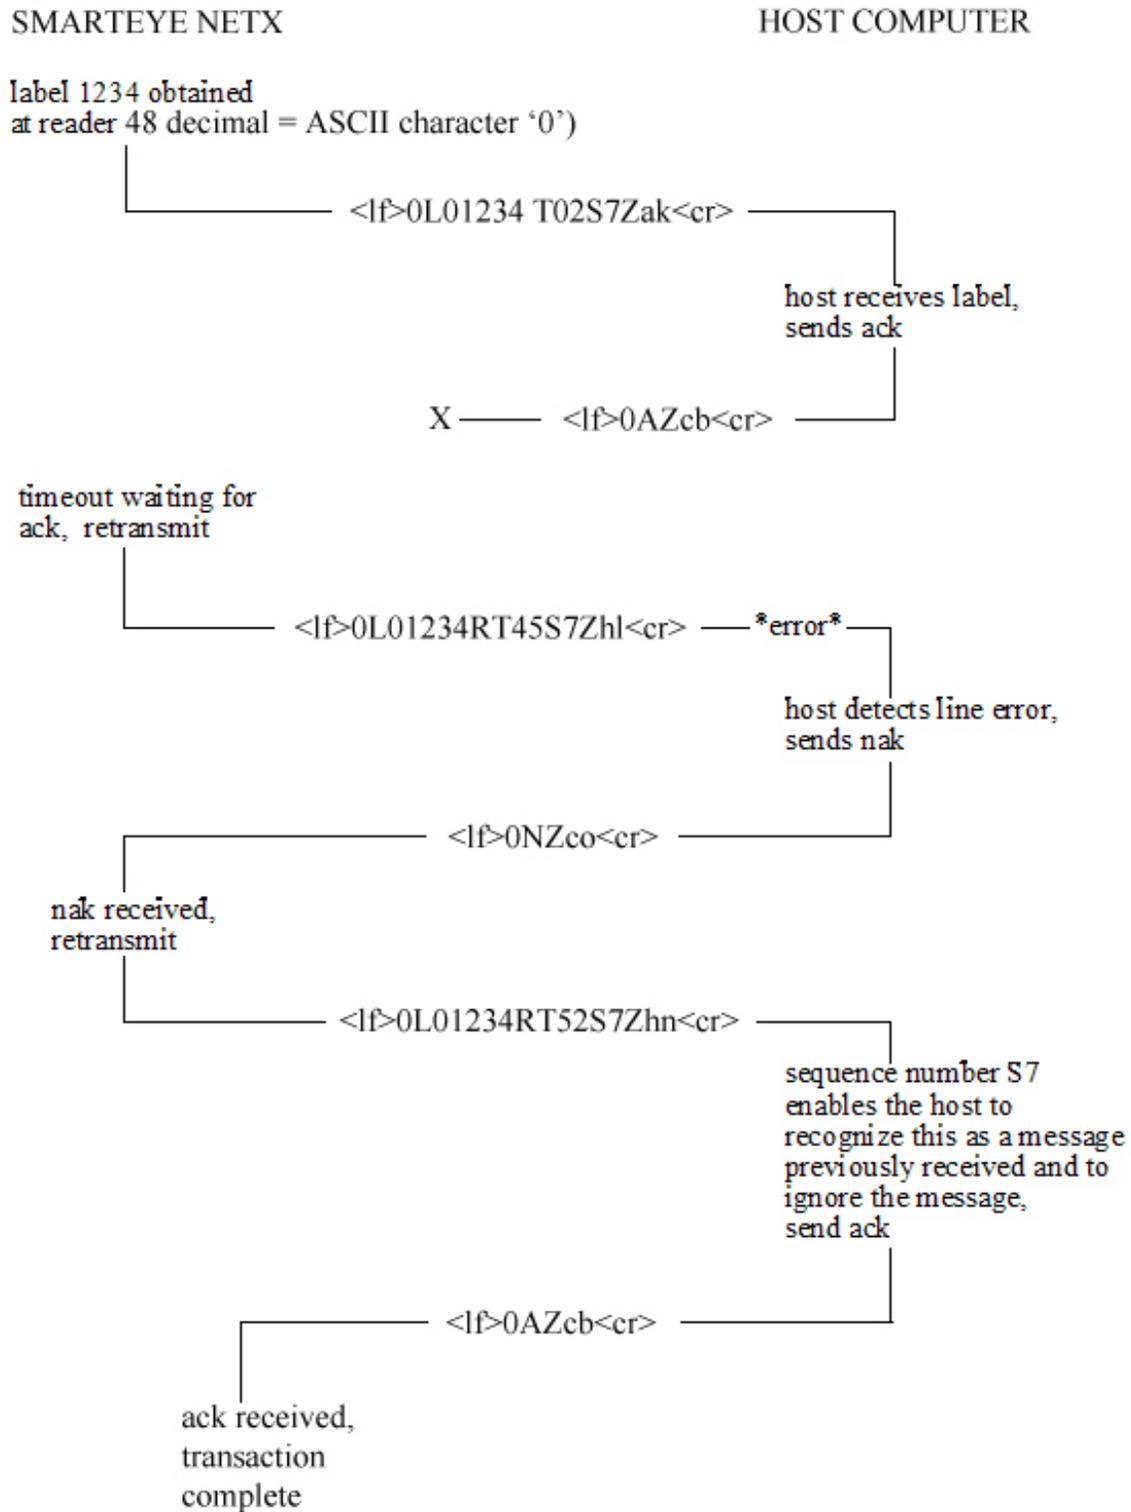

13.5 Message Conventions for Full ASCII

A communication message consists of a string of bytes terminated with an ASCII carriage-return. To represent the bytes in a message string, the following conventions are observed:

A byte with a value that is non-printable ASCII is shown as a character string enclosed in brackets <>.

<lf> = line-feed

<cr> = carriage-return

rrrr = decimal number representing Reader ID

e.g., 0048 when Netx address is set to 48.

rrrr represents a string of four ASCII digits. The digits are filled with leading '0's, if necessary.


nn... represents a string of ASCII digits. The digits are decimal unless otherwise noted.

s is a sign character preceding an nn... string. Its values are '-', '+', or ' ' (space).

Other bytes are ASCII capital letters, usually indicating the type of numeric field which follows. A letter is also used in a received message to represent a device command.

Zzz is the checksum field where zz is two ASCII lower case letters representing the checksum byte. The checksum byte is obtained as the exclusive-or of all the bytes in the message string up to and including the checksum field indicator, 'Z'. The two checksum characters are obtained for the checksum byte by adding each hexadecimal digit of the byte (values 0 to F) to ASCII 'a', resulting in two lower case letters, each with a value between 'a' and 'p'. See the example calculation below. On received messages, this field is optional; i.e., if the Z field is not found, then the checksum is not calculated.

13.5.1 Checksum Calculation Example

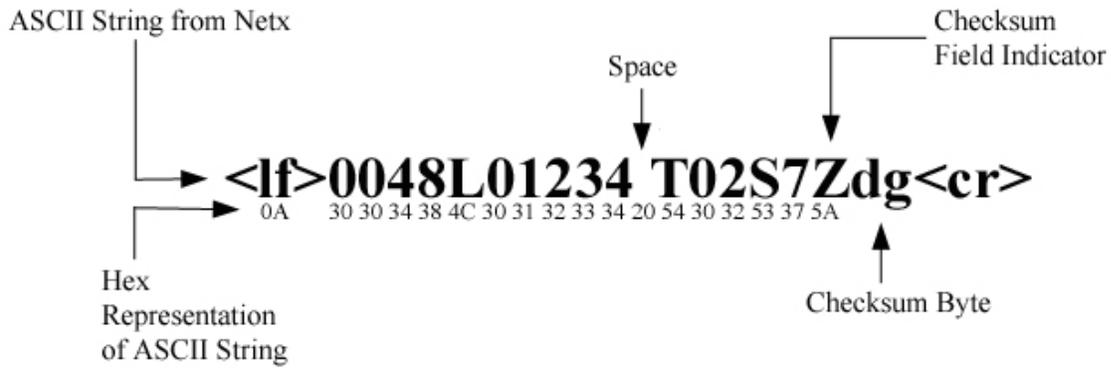

The exclusive-OR of all Hex bytes above = 36 Hex

$$\begin{array}{r} 3 \\ + 61 \\ \hline 64 \end{array} \quad \begin{array}{r} 6 \\ + 61 \\ \hline 67 \end{array} \leftarrow \begin{array}{l} 61 \text{ is the} \\ \text{hex representation} \\ \text{for an ASCII "a"} \end{array}$$

The ASCII equivalent of the resulting Hex numbers: 64 and 67 yields the checksum byte "dg"

13.5.2 Received Poll

<lf>rrrr<cr> Polli (poll w/o checksum)
<lf>rrrrZzz<cr> Pollz (poll with checksum)

13.5.3 Received Commands

<lf>rrrrc<cr> (command w/o checksum)
<lf>rrrrcZzz<cr> (command with checksum)

Where c is replaced by one of the following command characters:

- I - Initialize the reader online
- R - Restart, initialize the reader online and clear photoeye buffers
- B - Box poll, request pending message from reader(s)
- A - Ack the previous device transmission
- N - Nak the previous device transmission
- S - Status inquiry regarding reader
- F - Take reader offline
- L - Last read, request last label for specified reader
- E - Last error, request last error for specified reader
- C - Last diagnostic, request last diagnostic for specified reader

Note: The Nak command is used when the host detects a line error. Upon receiving a Nak, the Smarteye Netx Control Unit will retransmit the original message.

13.5.4 Messages Transmitted By The Smarteye Netx Control Unit

Communication characters include **one start bit, eight data bits, an optional parity bit, and one stop bit.**

The fields in transmitted messages include:

Lnnnnn, label field, where nnnnn is the number of the label which has just passed reader rrrr. The number of digits in the label field is five (filled with leading '0's, if necessary).

Tnn, time field, indicating the age of the message in tenths of seconds; e.g., T45 indicates a message 4.5 seconds old.

Sn, sequence number, where n ranges from 0 to 9, incremented circularly (modulo 10) for each new message transmitted by the Smarteye Netx Control Unit.

Enn, error field. A description of the error for each value of nn may be found in 'Error Messages.'

Asnn, Bsnn, Csnn, Xsnn, and Ysnn diagnostic readings:

Asnn, Bsnn, and Csnn are the trigger point numbers for photoeyes A, B, and C.

Xsnn is the alignment offset between photoeyes A and B.

Ysnn is the alignment offset between photoeyes B and C.

Zzz, checksum, is described in 'Message Conventions.'

A summary of transmitted messages follows. Each message is tagged with a lower case letter. In the following sections which deal with the various communication modes, a message transmitted as a response to a message received is represented by its lower case tag letter.

13.5.4.1 Online Idle Message

<lf>rrrr<cr>	i - poll mode
<lf>rrrrZzz<cr>	z - poll mode, with checksum
<lf>rrrrAZzz<cr>	a - non-poll mode

13.5.4.2 Offline Message

<lf>rrrrNZzz<cr>	n - offline
------------------	-------------

Online/offline notes:

1. All transmitted messages will include a checksum except an online idle message in poll mode which is a response to a poll which did not include a checksum.
2. In poll mode, the offline response occurs only when an online reader is taken offline with the 'F' command. Once a reader is offline, there are no responses to any messages except the command ' I ' or 'R'. Each of these commands will first place the reader online, so that the resultant response is the online idle for poll mode.

3. Online idle and offline messages do not include an 'R' (retransmit) field, nor a 'T' (age) field, nor an 'S' (sequence number) field.

Other messages transmitted by a Smarteye Netx Control Unit do include these fields.

13.5.4.3 Label Message

<lf>rrrrLnnnnn TnnSnZzz<cr> l - label
 <lf>rrrrLnnnnnRTnnSnZzz<cr> r - retransmit

13.5.4.4 Error Message

<lf>rrrrEnn TnnSnZzz<cr> e - error
 <lf>rrrrEnnRTnnSnZzz<cr> r - retransmit

13.5.4.5 Diagnostic Message

<lf>rrrrC Asnn Bsnn Csnn Xsnn Ysnn TnnSnZzz<cr> c - diagnostic
 <lf>rrrrC Asnn Bsnn Csnn Xsnn Ysnn RTnnSnZzz<cr> r - retransmit

13.5.5 Poll Mode

Polled operation requires a host system to poll or solicit the Smarteye Netx Control Unit for information. Messages are sent by a Smarteye Netx Control Unit only in response to a message received. Two types of poll commands are supported: a 'reader poll' solicits a response for a specific reader, while a 'box poll' requests read data for any reader connected to a Smarteye control unit (SEA8, Twin, or Netx product). In either case, if there is no data to be sent, an online idle response is transmitted.

The box poll rrrr for a Netx reader must be the address of the Netx control unit.

Acknowledgement is expected for any message transmitted other than online idle or offline. If a transmitted message is not acknowledged, then the next message received for the same reader will produce retransmission.

At power up in poll mode, the reader is set offline and remains so until an initialize device command, ' I ', is received for the reader or a restart command, 'R', is received.

13.5.5.1 Summary Of Responses - Poll Mode

<u>Received by Netx</u>	<u>Netx Response</u>	
	(status when message received)	
	<u>(online)</u>	<u>(offline)</u>
- Polli	r,l,e,c,i	@
- Pollz	r,l,e,c,z	@
I - Initialize	z	z
A - Ack	@	@
B - Box poll	r,l,e,c,z	@
N - Nak	r,l,e,c,z	@
S - Status inquiry	r,l,e,c,z	@
R - Restart	z	z
F - Take reader offline	n	@
L - Last label	l,z	@
E - Last error	e	@
C - Last diagnostic	c,z	@

@	- no response
r	- retransmission of previous message
l	- label message
e	- error message
c	- diagnostic message
i	- online idle w/o checksum
z	- online idle with checksum
n	- offline

13.5.6 Handshake Mode

In handshake mode, each Smarteye Netx Control Unit is connected to the host via the network. Messages are transmitted as soon as data is available without having been solicited by a received message.

The host must send an acknowledgement for each data message transmitted. If a transmitted message is not acknowledged within a specified time (approximately 3 seconds), then retransmission occurs. Messages are also retransmitted when communication errors occur.

If a message is received while acknowledgement is pending, and it is not the acknowledgement, then retransmission occurs immediately. Usually the response to a received message will be either an 'a' (online idle) or 'n' (offline) message which pertains to the reader of the received message.

However, when an incoming message is received and another message has been prepared for transmission pertaining to any reader, then the prepared message is transmitted. If there is no prepared message and the received message was ack, then no response is made.

In handshake mode, all reader(s) are set online at power up.

13.5.6.1 Summary Of Responses - Handshake Mode

<u>Received by Netx</u>	<u>Netx Response</u> <u>(online or offline)</u>
- Poll	r,l,e,c,a,n
I - Initialize	r,l,e,c,a
A - Ack	l,e,c,@
B - Box poll (Same as "S")	r,l,e,c,a,n
N - Nak	r,l,e,c,a,n
S - Status inquiry	r,l,e,c,a,n
R - Restart	e,a
F - Take reader offline	r,l,e,c,n
L - Last read	l,a@
E - Last error	e@
C - Last diagnostic	c,a@


- @ - no response
- r - retransmission of previous message
- l - label message
- e - error message
- c - diagnostic message
- a - online idle, non-poll mode
- n - offline

13.5.6.2 Example #1 - Handshake Mode - Normal Operation

Previous transaction complete, line is quiescent.

SMARTEYE Netx

HOST COMPUTER

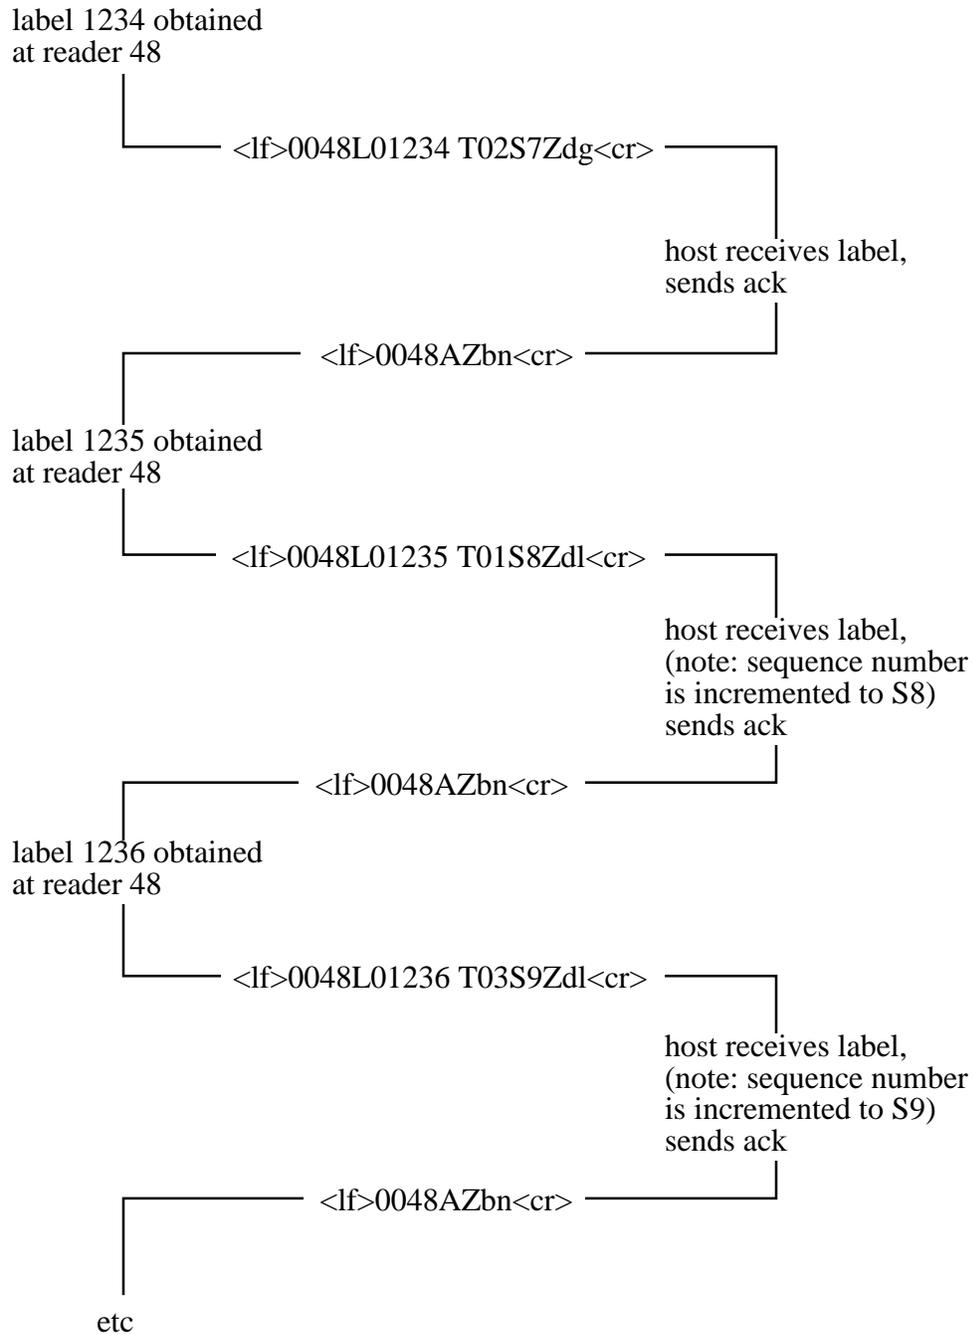


13.5.6.3 Example #2 - Handshake Mode - Abnormal Operation

Previous transaction complete, line is quiescent.

SMARTEYE Netx

HOST COMPUTER

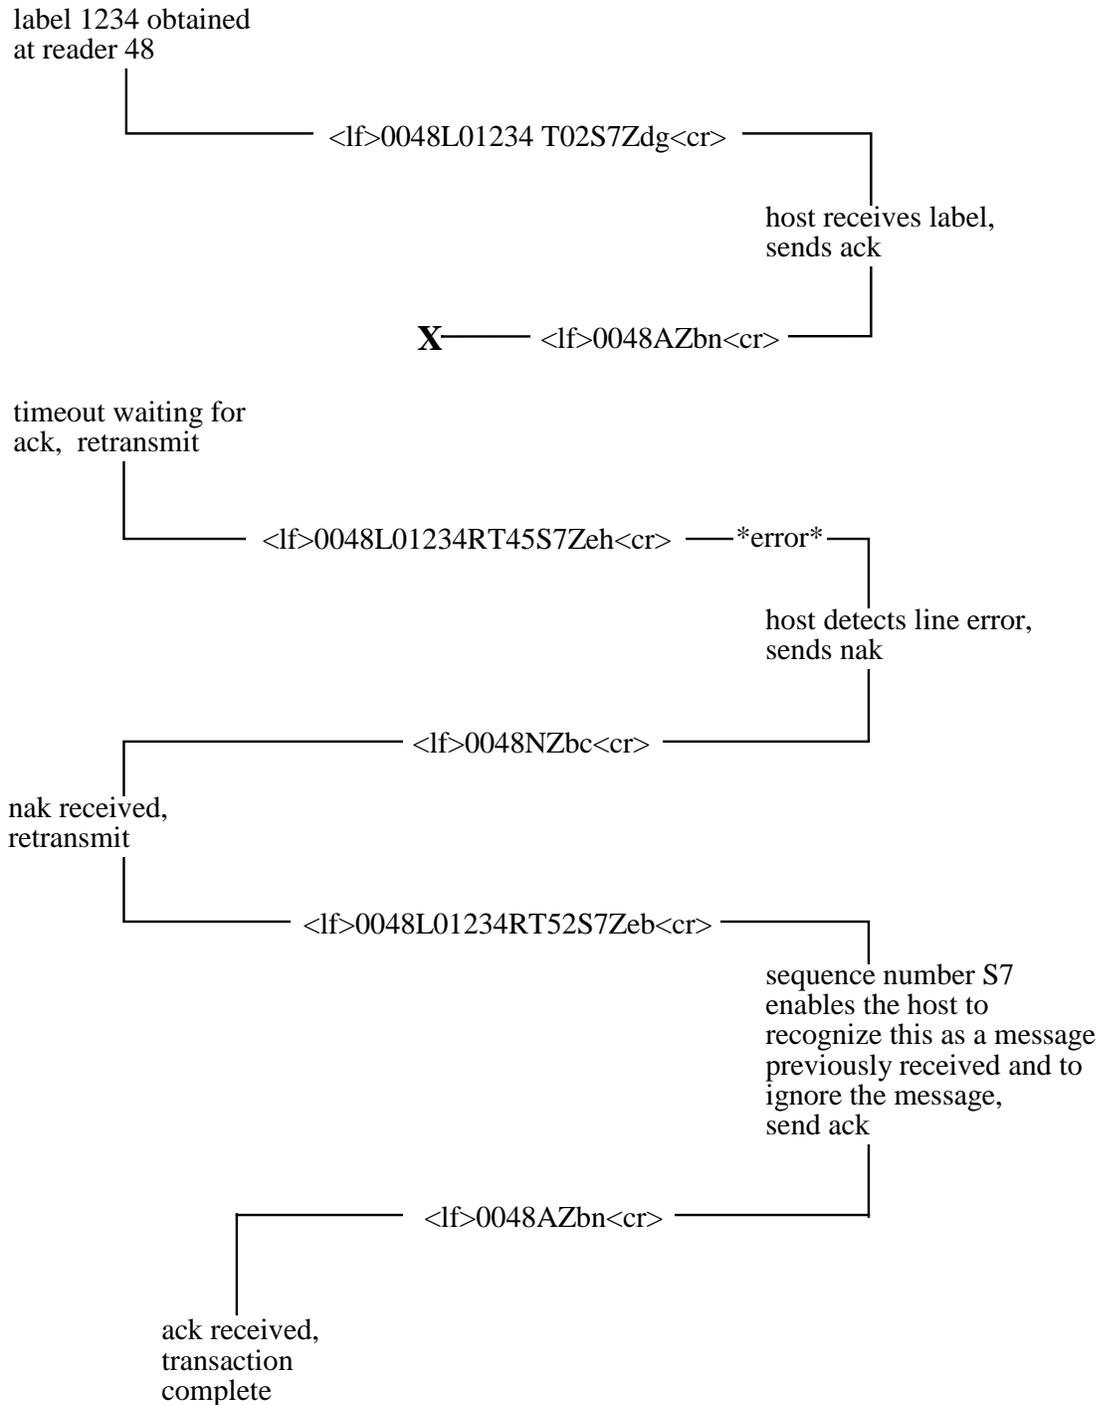

14.0 Diagnostic Enable

A diagnostic message contains five numbers which indicate whether the reader needs maintenance. An ideal diagnostic reading is:

A	B	C	X	Y
+5	+5	+5	0	0

Diagnostic numbers are acceptable if they are within ± 5 of the perfect reading shown above. If an acceptable reading is unobtainable, check the Smarteye Reader User Manual for alignment information.

The Smarteye Netx Control Unit calculates a diagnostic message each time a label passes by one of its readers. The diagnostic message is transmitted to the host if “Send Diagnostics” in the configuration file is checked. If “Send Diagnostics” is checked then the Control Unit will send a diagnostic message to the host each time a label passes a reader. The diagnostic message comes in addition to any messages (label message, error message, etc.), which would appear if the reader did not have diagnostic messages enabled.

15.0 Error Messages

<u>Error Code</u>	<u>Meaning</u>
00	Control Unit just powered up
01	Unrecognizable label, too much data obtained.
04	Unrecognizable label, front and back bits = 0.
05	Unrecognizable label, front and back bits = 1.
Note: Errors 01, 04, and 05 can be the result of parts of a carrier breaking the photoeye beams.	
06	Unrecognizable label, incorrect parity. Check label for obstructions.
10	Unrecognizable host message received.
15	Unrecognizable label, incorrect Hamming code. Check label for obstructions.
16	Unrecognizable label, more than 5 leading zeros.
17	Host message received w/o <cr> terminator.
19	Overload of input data from readers.
20	Checksum error in host message received.
30-39	Unrecognizable label, incorrect number of data bits. LSD (least significant digit) of error is the LSD of the number of data bits in the label read.

Errors 91 through 99 are detected during diagnostic:

- 91 Photoeye A, insufficient number of transitions in time allowed.
- 92 Photoeye B, insufficient number of transitions in time allowed.
- 93 Photoeyes A and B, insufficient number of transitions in time allowed.
- 94 Photoeye C, insufficient number of transitions in time allowed.
- 95 Photoeyes A and C, insufficient number of transitions in time allowed.
- 96 Photoeyes B and C, insufficient number of transitions in time allowed.

Note: Errors 91, 92, and 94 indicate that a photoeye is not transitioning while the other two photoeyes are. Check reader height, photoeye operation, and reader wiring.

- 99 Diagnostic attempt aborted, acceptable hole pattern not found, probably due to label speed variation. E99 is sent to the control system if diagnostic messages are enabled in the setup file.

Appendix A S-netx SP4002 Drawings

Sender/Receiver Cable Details for Local Mounting Applications – SP1054/01-417

This drawing shows the wiring details for a locally mounted reader.

Sender/Receiver Cable Details for Remote Mount Applications –SP1054/01-418

This drawing shows the wiring details for a remotely mounted reader using a customer supplied junction box.

S-netx Installation Details No-Power over Ethernet– SP4002/01-420

This drawing shows the mounting dimensions of the S-netx.

S-netx Connection Wiring Details No-Power over Ethernet– SP4002/01-410

This drawing shows the location and wiring details for the Ethernet and power connections.

S-netx Installation Details Power over Ethernet – SP4002/02-420

This drawing shows the mounting dimensions of the S-netx.


S-netx Connection Wiring Details Power over Ethernet – SP4002/02-410

This drawing shows the location and wiring details for the Ethernet connection.


S-netx Auxiliary and Communication Port Wiring Details – SP4002/01-411

This drawing shows the wiring details for the auxiliary and communication port for all S-netx models.


REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	01/16/09	MDB

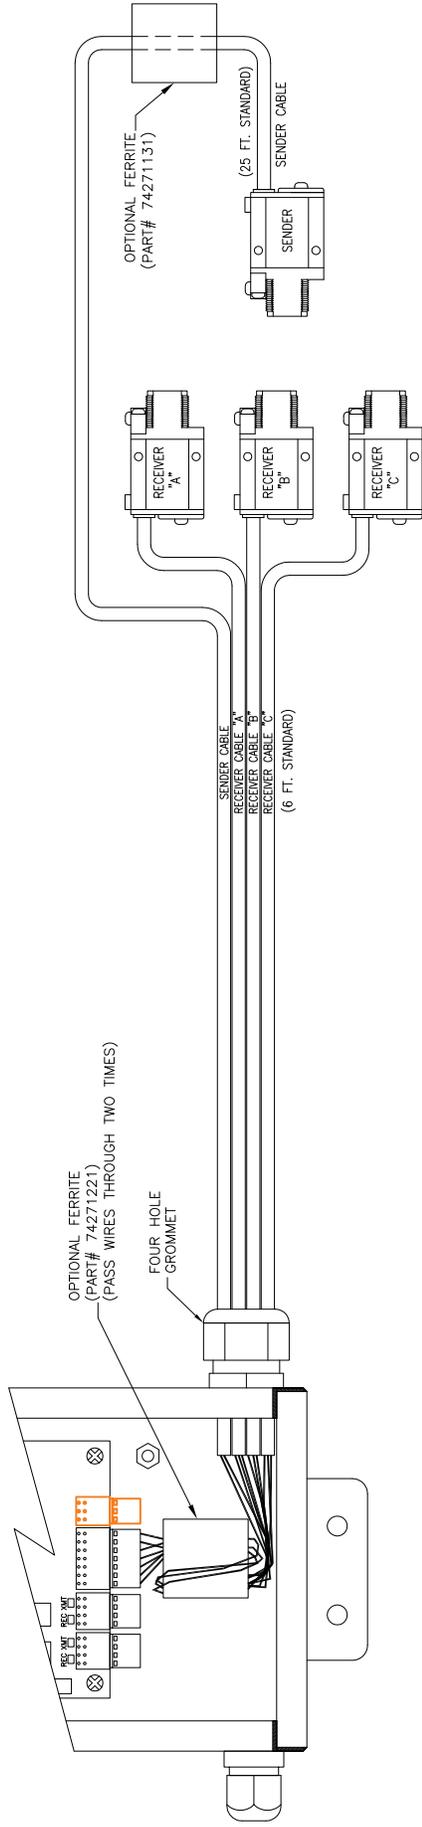

CABLE DETAILS

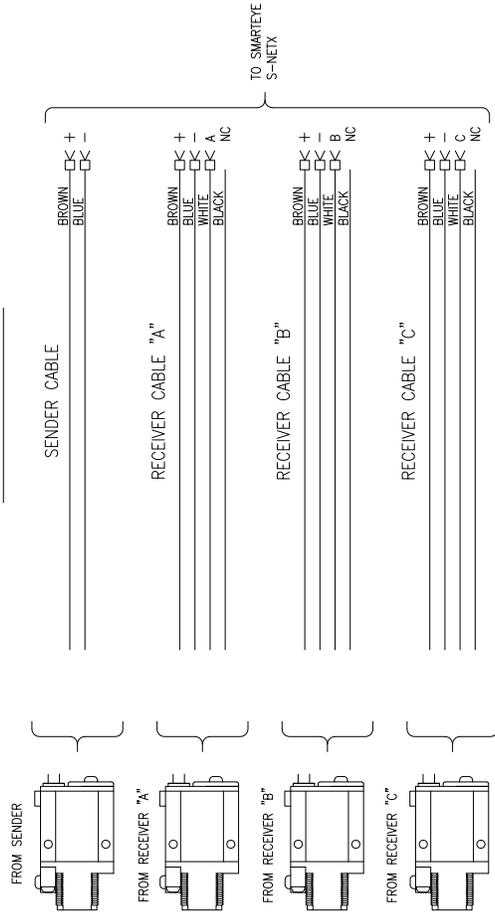

S-NETX CONNECTION DETAILS

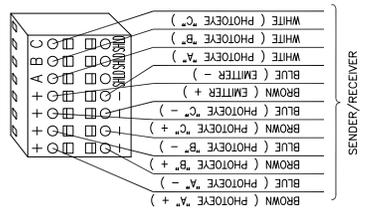


LEGEND

CK - PLUG-IN CAGE CLAMP TERMINATION
 NC - NO CONNECTION

2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
 PHONE (248) 853-4468 FAX (248) 853-8539

DRAWN BY: RSA TITLE: MDB SMARTEYE SENDER / RECEIVER
 CHECKED BY: MDB SMARTEYE SENDER / RECEIVER
 ENGINEER: MDB CABLE DETAILS FOR S-NETX
 DATE: 09/22/08 LOCAL INSTALLATION
 SHEET 1 OF 1
 SCALE: NTS DRAWING NO. SP1054/01-417
 SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	01/16/09	MDB

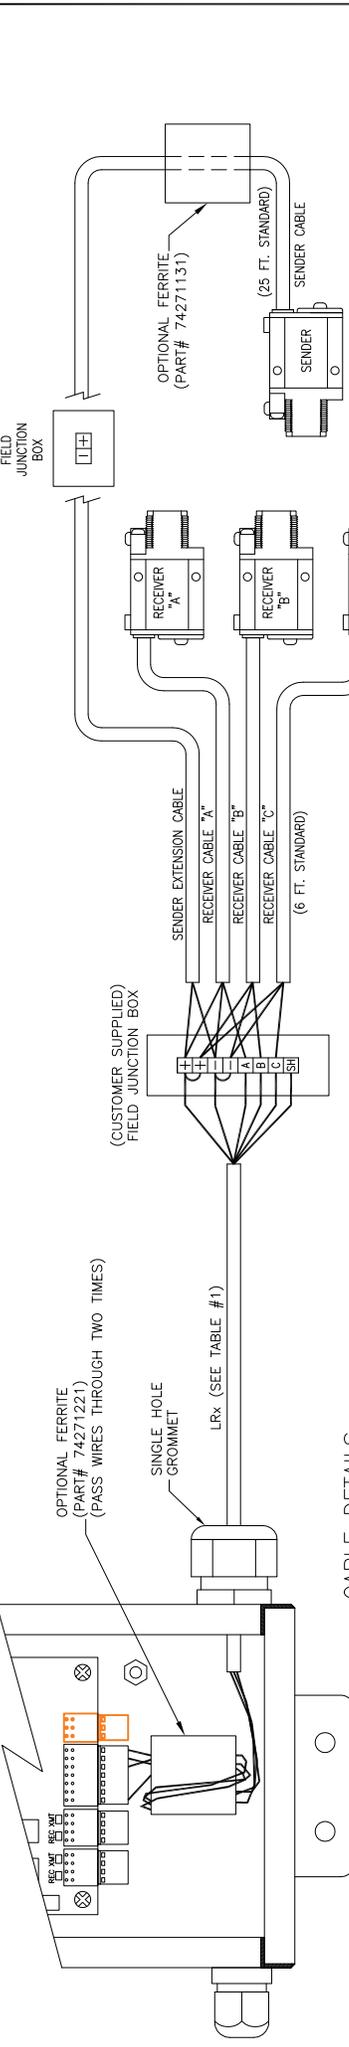


NOTES:


- 1) BELDEN 9773 CABLE PAIRED AS FOLLOWS:
BLACK 1 IS PAIRED WITH RED
BLACK 2 IS PAIRED WITH WHITE
BLACK 3 IS PAIRED WITH GREEN
- 2) GREEN IS NOT USED (SEE CABLE DETAIL LRx)
- 3) THE SHIELD OF CABLE LRx MUST BE CONNECTED AT ONE END ONLY. THE SH TERMINAL IN THE REMOTE JUNCTION BOX IS FOR LANDING THE SHIELD WIRE ONLY. IT IS NOT CONNECTED TO GROUND.

THE SHIELD OF CABLE LRx NORMALLY CONNECTED TO 24V GROUND AT THE S-NETx CIRCUIT BOARD VIA JUMPER JT-8. IN A NOISY ELECTRICAL ENVIRONMENT, IT MAY BE NECESSARY TO CONNECT THE SHIELD AT THE REMOTE JUNCTION BOX. REFER TO THE 'REMOTE READER MOUNTING' SECTION OF THE USER MANUAL FOR DETAILS.


JUNCTION BOX DETAILS

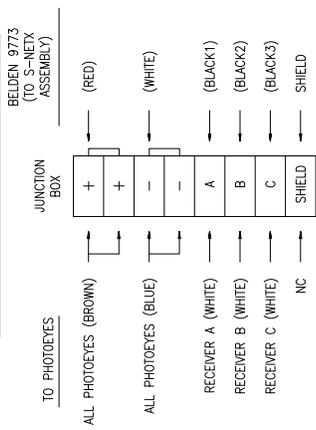

S-NETx CONNECTION DETAILS

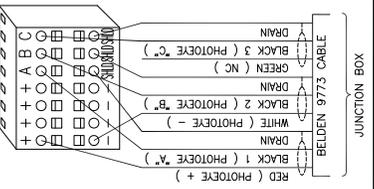


CABLE DETAILS

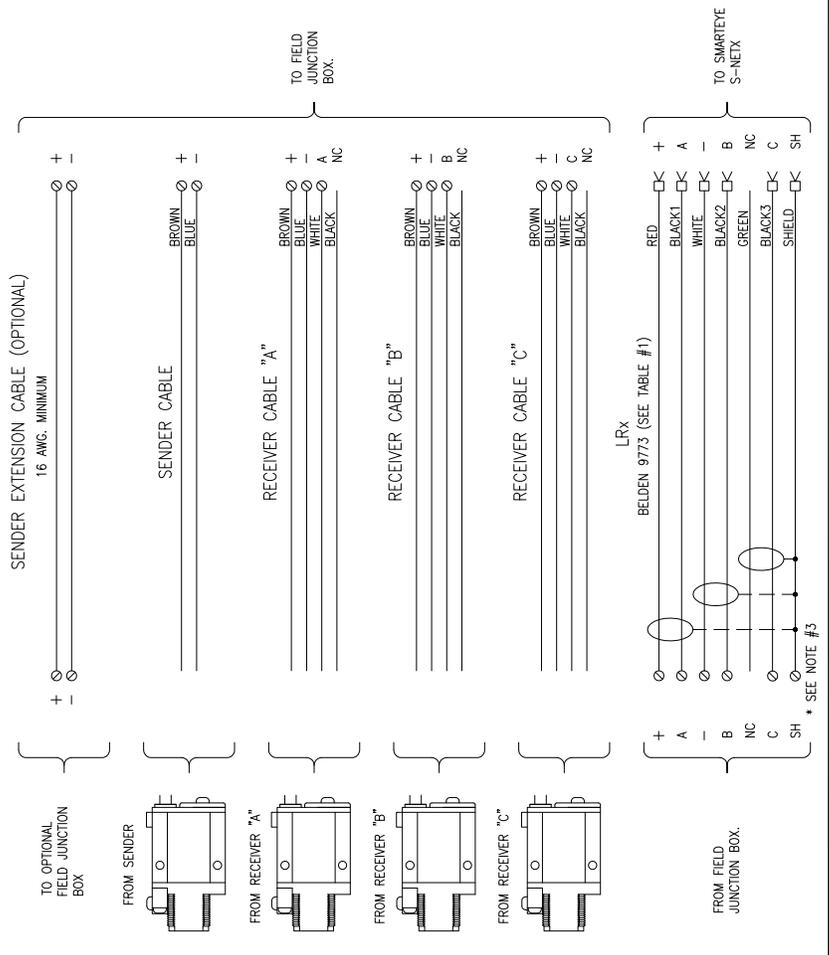

2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4468 FAX (248) 853-8539

DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE SENDER / RECEIVER
ENGINEER: MDB CABLE DETAILS FOR S-NETx
DATE: 09/22/08 REMOTE INSTALLATION
SHEET 1 OF 1
SCALE: NTS DRAWING NO. SP1054/01-418
SIZE: D


REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	09/22/08	MDB

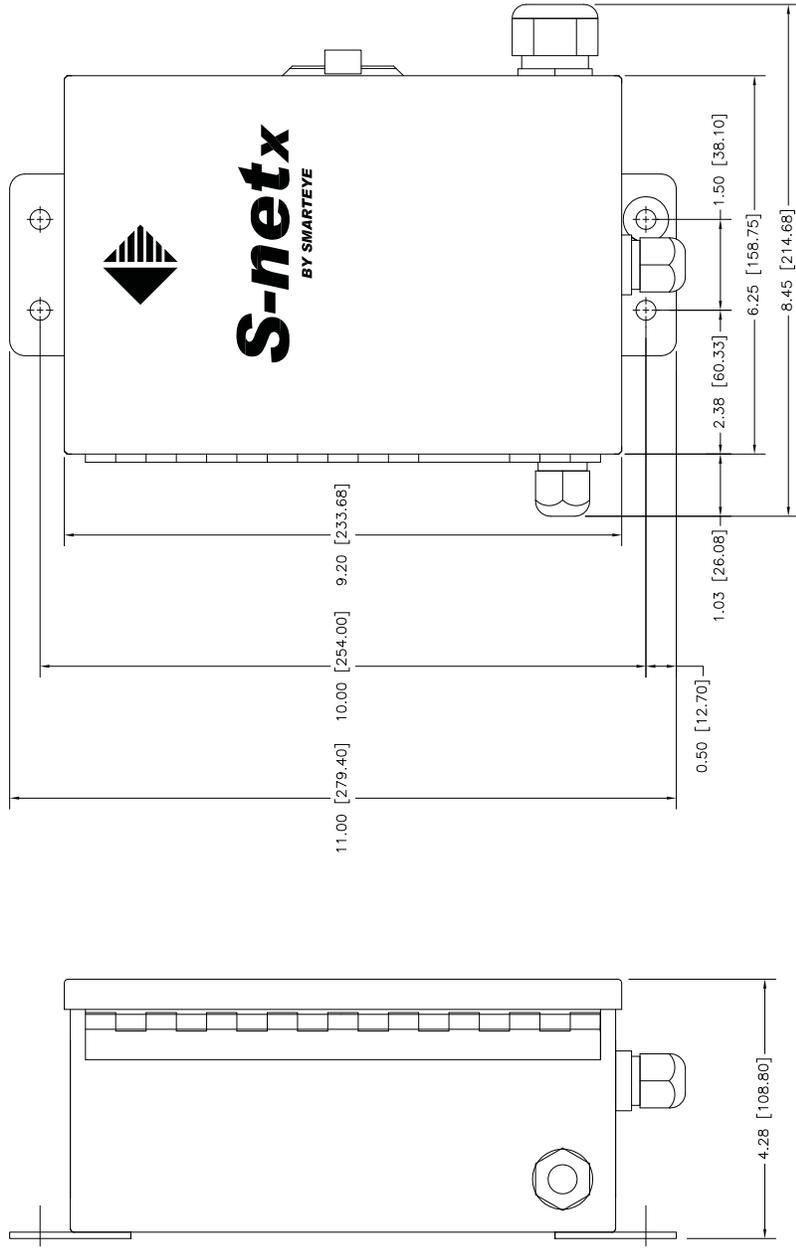

SMARTEYE
CORPORATION
2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4495 FAX (248) 853-8539

DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE S-NETX
ENGINEER: MDB W/ ETHERNET (NO P.O.E.)
DATE: 09/18/08
SHEET 1 OF 1 - INSTALLATION DETAILS
SCALE: 1" = 1" DRAWING NO. SP4002/01-420
SIZE: 0

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	10/27/08	MDB

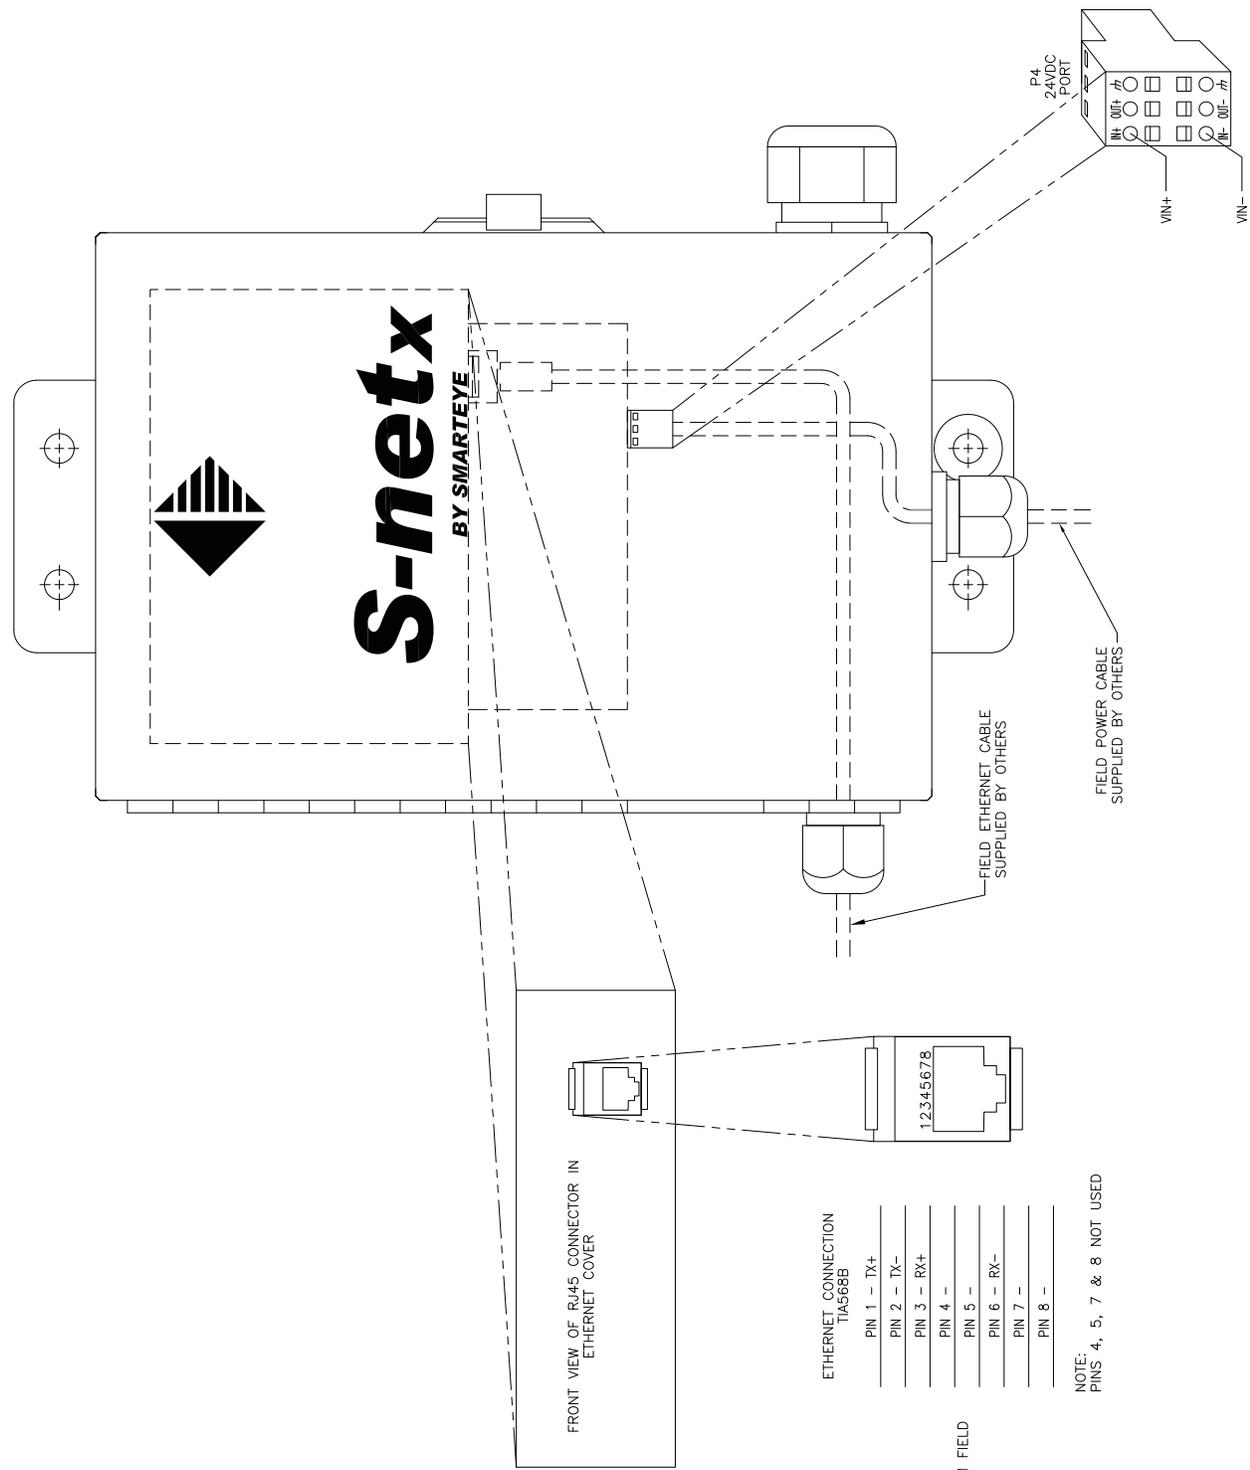

SMARTEYE
CORPORATION
2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4468 FAX (248) 853-8539


DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE S-NETX
ENGINEER: MDB WITH ETHERNET
DATE: 10/27/08 NOT POWERED OVER ETHERNET
SHEET 1 OF 1 - FIELD CONNECTION DETAILS
SCALE: 1" = 1" DRAWING NO. SP4002/01-410
SIZE: 0




2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
 PHONE (248) 853-4488 FAX (248) 853-8539

DRAWN BY:	RSA	TITLE:	
CHECKED BY:	MDB	SMARTEYE S-NETx	
ENGINEER:	MDB	W/ ETHERNET (802.3af P.O.E.)	
DATE:	09/18/08		
SHEET:	1 OF 1		
SCALE:	1" = 1"		
SIZE:	D	DRAWING NO.	SP4002/02-420

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	09/19/08	MDB

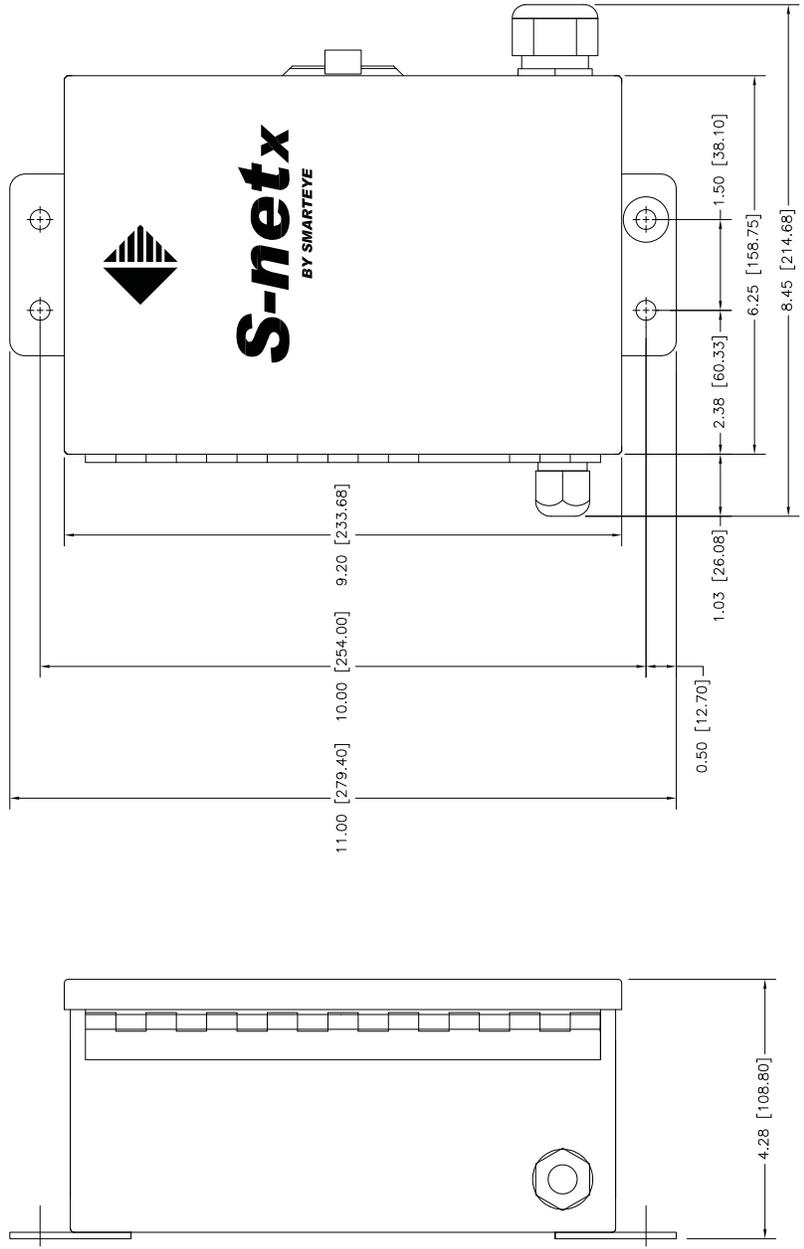

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	09/19/08	MDB

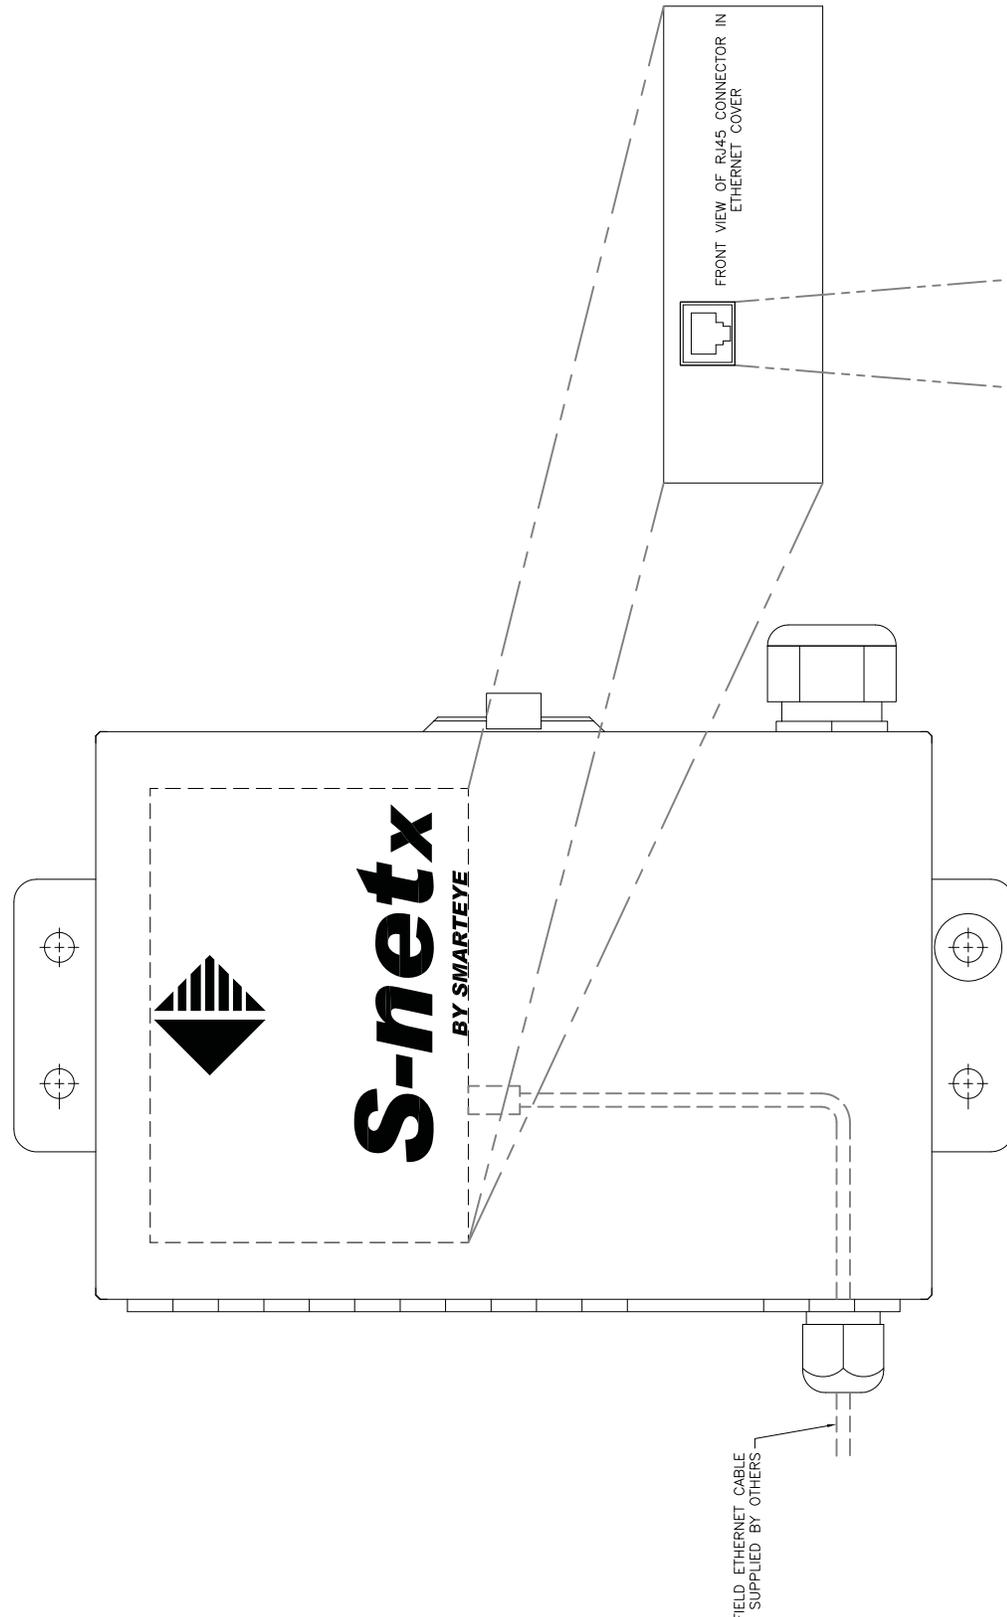

ETHERNET CONNECTION
TIA568B

PIN 1	- TX+
PIN 2	- TX-
PIN 3	- RX+
PIN 4	-
PIN 5	-
PIN 6	- RX-
PIN 7	-
PIN 8	-

FROM FIELD

NOTE:
POWER SUPPLIED PER IEEE 802.3af SPECIFICATION (48VDC NOMINAL)




SMARTEYE
CORPORATION
2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4488 FAX (248) 853-8539


DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE S-NETx
ENGINEER: MDB W/ ETHERNET (802.3af P.O.E.)
DATE: 09/18/08
SHEET 1 OF 1 - FIELD CONNECTION DETAILS
SCALE: 1" = 1" DRAWING NO. SP4002/02-410
SIZE: 0

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	09/22/08	MDB
1	REVISED CONNECTOR DETAIL AT S-NETX	01/06/09	MDB
2	REVISED TO SHOW MULTIPLE COMMUNICATION CONFIGURATIONS	01/27/11	MDB
3	REVISED DETAIL (3) PINOUT	07/21/11	MDB


(RS-232) CONFIGURATION

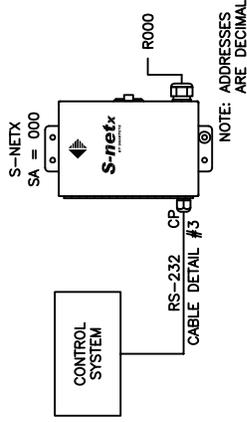


AUXILIARY PORT CONFIGURATION

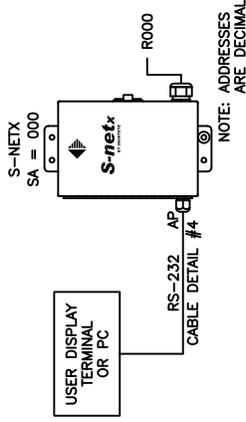

(RS-485) CONFIGURATION #1

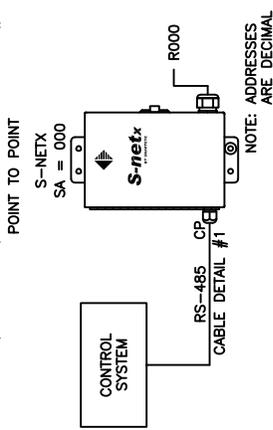

(RS-485) CONFIGURATION #2

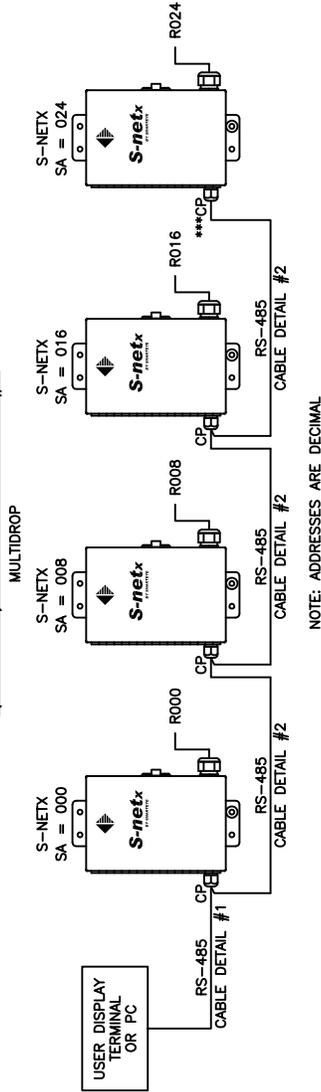

LEGEND


- IK = SPRING LOCK TERMINATION
- *** = INDICATES LINE TERMINATION INSTALLED
- NC = NO CONNECTION
- SA = STARTING ADDRESS OF S-NETX
- CP = CONTROL PORT
- AP = AUXILIARY PORT

NOTES:


1. MAXIMUM LENGTH OF RS-485 IS 4000'
2. MAXIMUM LENGTH OF RS-232 IS 50'
3. THE LAST S-NETX ON THE MULTIDROP LINE MUST HAVE LINE TERMINATION
4. IN THE MULTIDROP CONFIGURATION EACH S-NETX MUST HAVE A UNIQUE STARTING ADDRESS
5. SEE THE NETX USER MANUAL FOR ADDRESSING DETAILS

CABLE DETAILS


DETAIL (1)
RS-485
BELDEN 9730

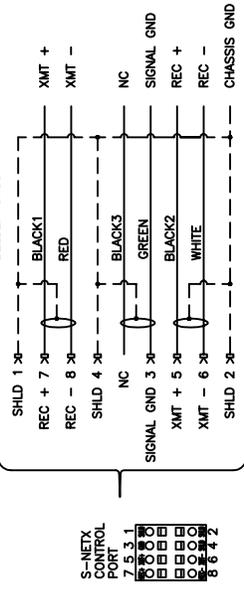


DETAIL (2)
RS-485
BELDEN 9730

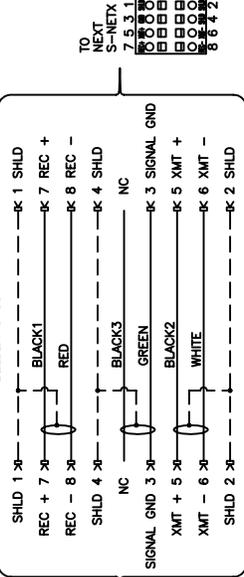

DETAIL (3)
RS-232
BELDEN 8723

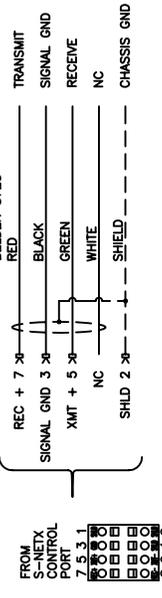

DETAIL (4)
RS-232
BELDEN 8723

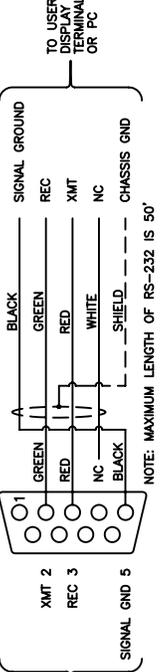

2837 BOND STREET ROCHESTER, N.Y. 14626
PHONE (716) 853-4468 FAX (716) 853-8539

DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE S-NETX
ENGINEER: MDB AUXILIARY COMMUNICATION PORT AND CONTROL COMMUNICATION PORT
DATE: 01/27/11
SHEET 1 OF 1 WIRING DETAILS
SCALE: NTS DRAWING NO. SP-4002/01-411
SIZE: D

Appendix B T-netx SP4050 Series Drawings

Sender/Receiver Cable Details – SP1054/01-419

This drawing shows the wiring details for a reader using a customer supplied junction box.

T-netx Installation Details – SP4050/01-420

This drawing shows the mounting dimensions of the T-netx.

T-netx Connection Wiring Details No-Power over Ethernet– SP4050/01-410

This drawing shows the location and wiring details for the Ethernet and power connections for T-netx models SP4050/01 and SP4051/01.

T-netx Connection Wiring Details Power over Ethernet – SP4050/02-410

This drawing shows the location and wiring details for the Ethernet connection for T-netx models SP4050/02/01 and SP4051/02.

T-netx NEMA-12 Installation Details – SP4051/01-420

This drawing shows the mounting dimensions of the T-netx.

T-netx NEMA-12 Connection Wiring Details 110/220 VAC Power – SP4051/04-410

This drawing shows the location and wiring details for the Ethernet and power connections.

T-netx Auxiliary and Communication Port Wiring Details – SP4050/01-411

This drawing shows the wiring details for the auxiliary and communication port for all T-netx models.

.

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	11/21/08	JLD
1	ADDED OPTIONAL FERRITE ON SENDER CABLE	01/16/09	MDB
2	ADDED CONNECTOR DETAIL		


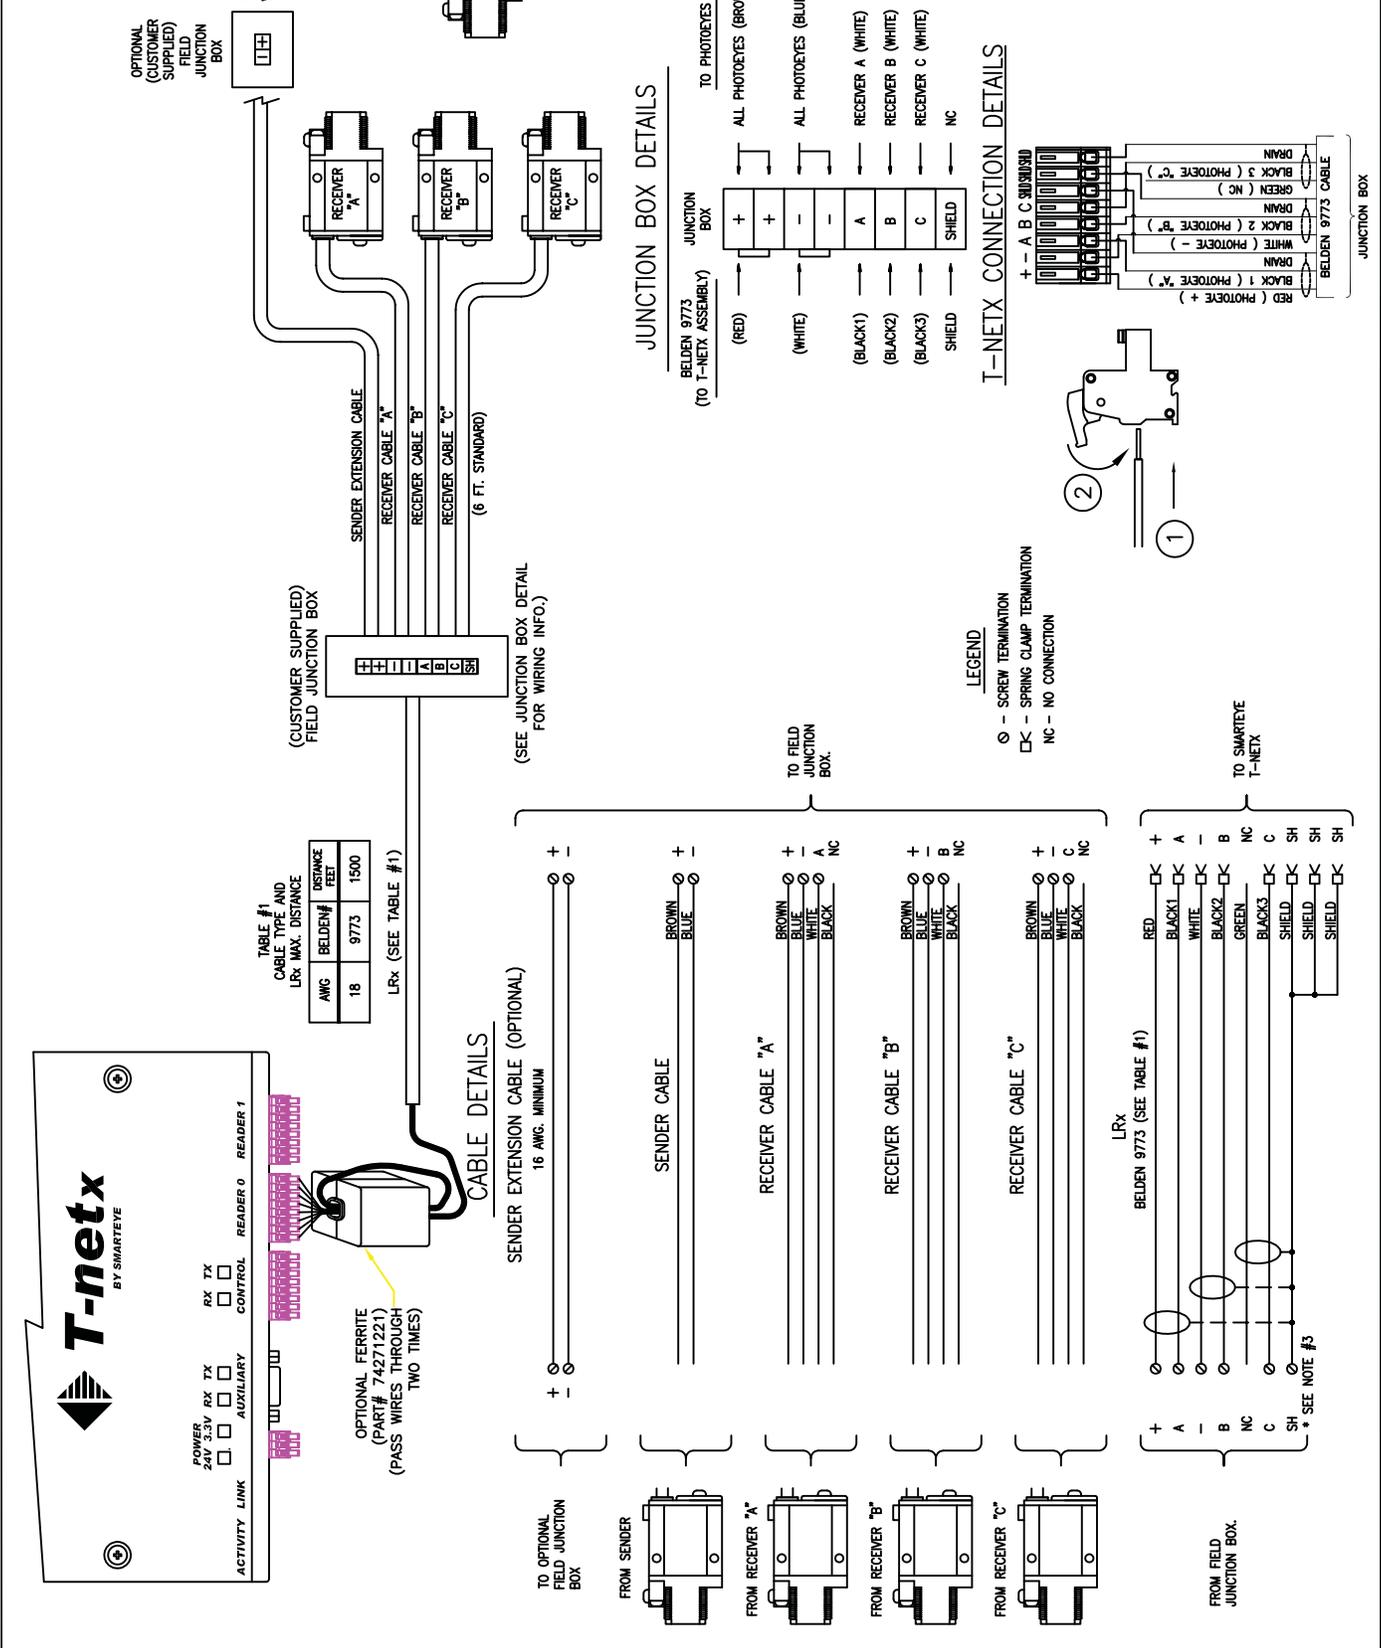


TABLE #1 AND CABLE TYPE AND LRx MAX. DISTANCE


AWG	BELDEN#	DISTANCE FEET
18	9773	1500

Lrx (SEE TABLE #1)


CABLE DETAILS

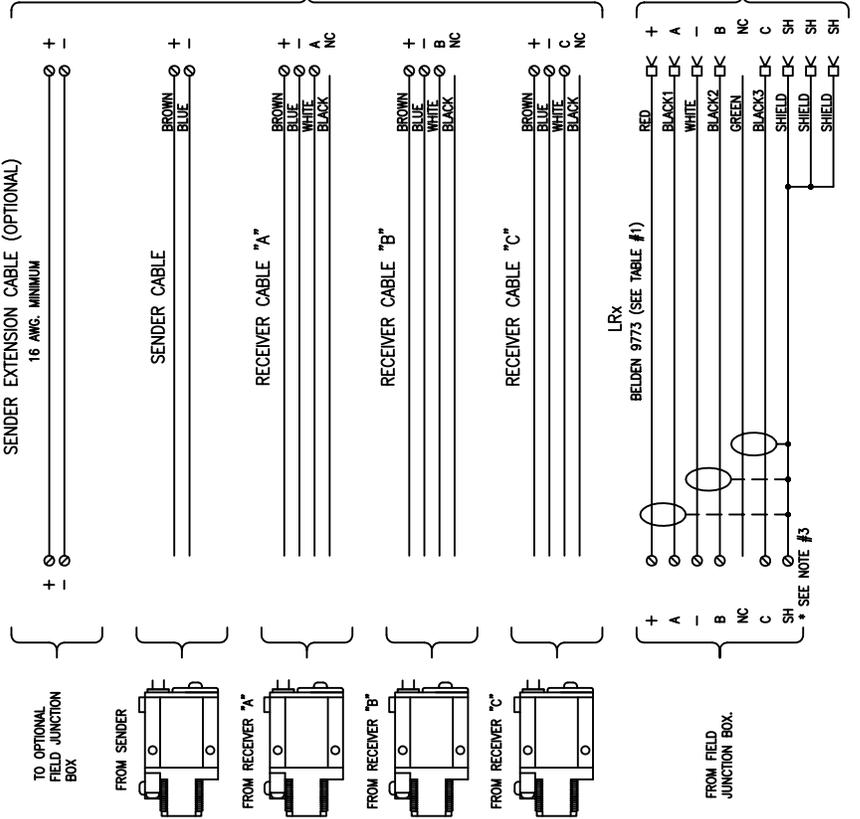

JUNCTION BOX DETAILS

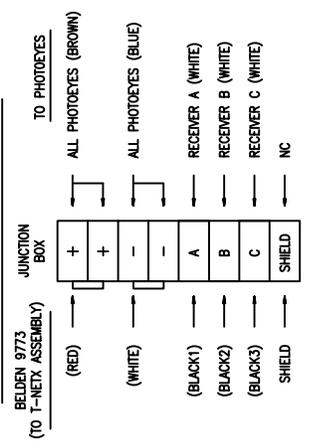

T-NETX CONNECTION DETAILS

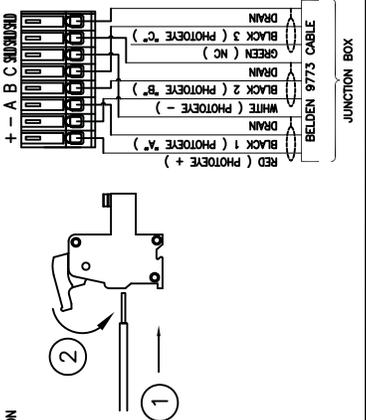

- NOTES:
- 1) BELDEN 9773 CABLE PAIRED AS FOLLOWS:
BLACK 1 IS PAIRED WITH RED
BLACK 2 IS PAIRED WITH WHITE
BLACK 3 IS PAIRED WITH GREEN
 - 2) GREEN IS NOT USED (SEE CABLE DETAIL LRx)
 - 3) THE SHIELD OF CABLE LRx MUST BE CONNECTED AT ONE END ONLY. THE SH TERMINAL IN THE REMOTE JUNCTION BOX IS FOR LANDING THE SHIELD WIRE ONLY. IT IS NOT CONNECTED TO GROUND.


THE SHIELD OF CABLE LRx NORMALLY CONNECTED TO 24V GROUND AT THE T-NETX CIRCUIT BOARD VIA JUMPER JT-8. IN A NOISY ELECTRICAL ENVIRONMENT, IT MAY BE NECESSARY TO GROUND THE SHIELD AT THE REMOTE JUNCTION BOX. REFER TO THE 'READER MOUNTING' SECTION OF THE USER MANUAL FOR DETAILS.

2637 BOND STREET ROQUETTE HILLS, MICHIGAN 48309
PHONE (248) 853-4488 FAX (248) 853-8539



DRAWN BY: RSA TITLE:
CHECKED BY: MDB SMARTEYE SENDER / RECEIVER
ENGINEER: MDB CABLE DETAILS FOR T-NETX
DATE: 11/13/08
SHEET 1 OF 1
SCALE: NTS DRAWING NO. SP-1054/01-419
SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	07/17/08	MOB
1	ADDED "X" TO SH-SCREEN	01/16/09	MOB
2	ADDED T-NETX MOUNTING AND REMOVAL INSTRUCTIONS	05/19/10	MOB
3	REVISED DIN RAIL MTC CLIP	01/11/17	<i>[Signature]</i>

MOUNTING T-NETX ONTO DIN RAIL

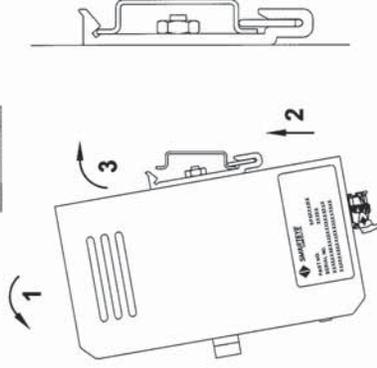

REMOVING T-NETX FROM DIN RAIL

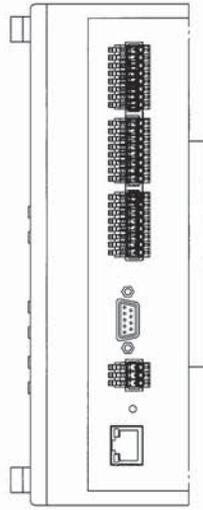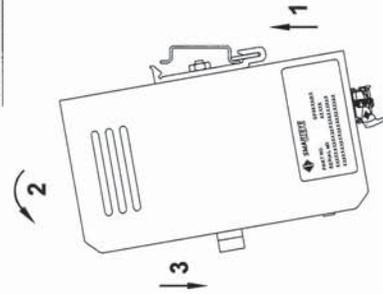

2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
 PHONE (248) 653-4495 FAX (248) 653-6539



DRAWN BY: RSA
 CHECKED BY: MOB
 ENGINEER: MOB
 DATE: 06/19/08
 SHEET: 1 OF 1
 SCALE: 1" = 1" D

TITLE: SMARTEYE T-NETX - DIN RAIL MOUNT (NO P.O.E. - 24V)
 INSTALLATION DETAILS

DRAWING NO. SP4050/01-420

MATERIAL:
FINISH:
 UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES UNLESS OTHERWISE SPECIFIED:
 1-PLACES +/- .010
 2-PLACES +/- .005
 3-PLACES +/- .005
 ANGLES +/- 2 DEGREES
 REMOVE ALL BURRS
 ALL BENDS ARE RADIUS

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	01/16/09	MDB
1	ADDED CONNECTOR DETAIL	04/30/09	MDB
2	REVISED 24V CONNECTOR SYMBOLS	01/29/14	MDB
3	REVISED DIN RAIL MTC CLIP	01/11/17	MDB

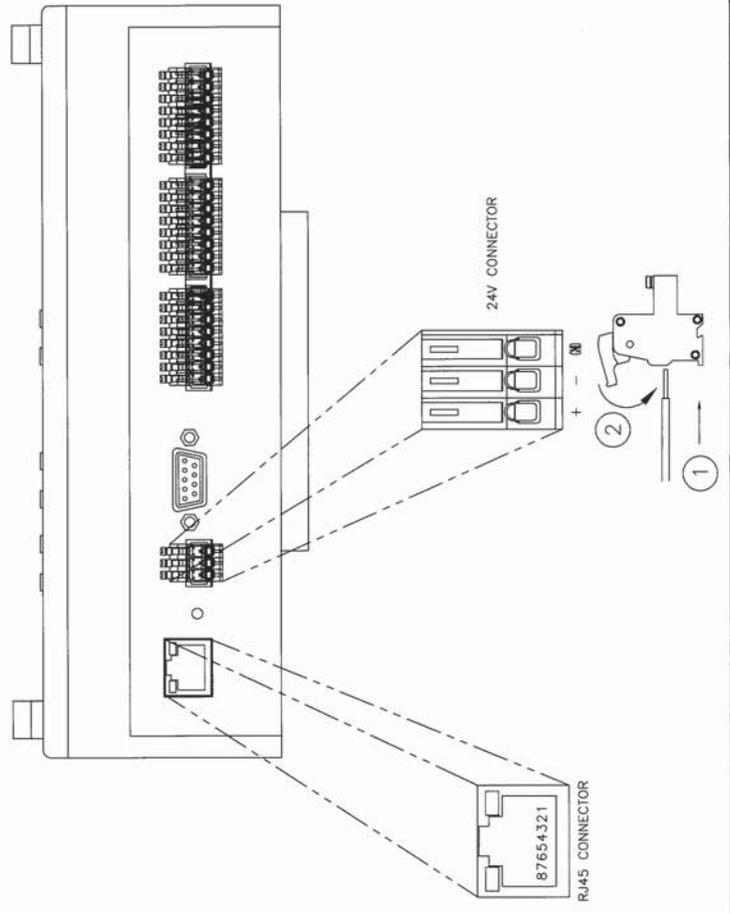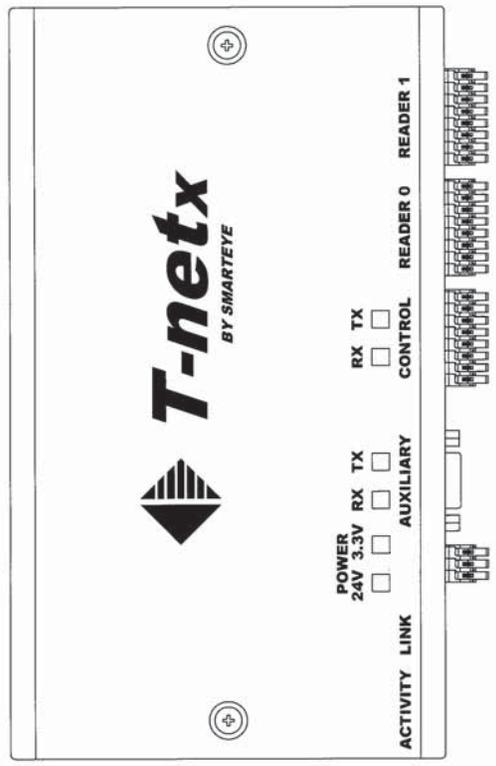

ETHERNET CONNECTION
1A56BB

PN 1 - TX+
PN 2 - TX-
PN 3 - RX+
PN 4 -
PN 5 -
PN 6 - RX-
PN 7 -
PN 8 -



FROM FIELD

NOTE:
PINS 4, 5, 7 & 8 NOT USED

2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4495 FAX (248) 853-8539

DRAWN BY: RSA TITLE: SMARTEYE T-NETX - DIN RAIL MOUNT
CHECKED BY: MDB
ENGINEER: MDB (NO P.O.E. - 24V)
DATE: 01/13/09
SHEET 1 OF 1 - FIELD CONNECTION DETAILS
SCALE: 1" = 1" DRAWING NO. SP4050/01-410
SIZE: D


REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	04/30/09	MOB
1	REVISED DIN RAIL MTC CLIP	01/11/17	<i>[Signature]</i>

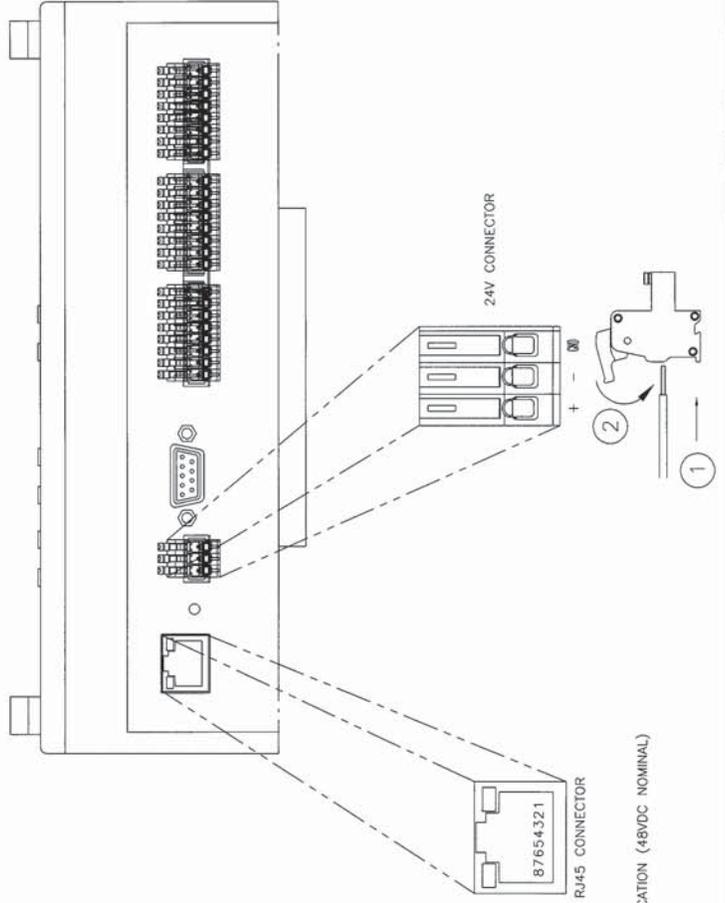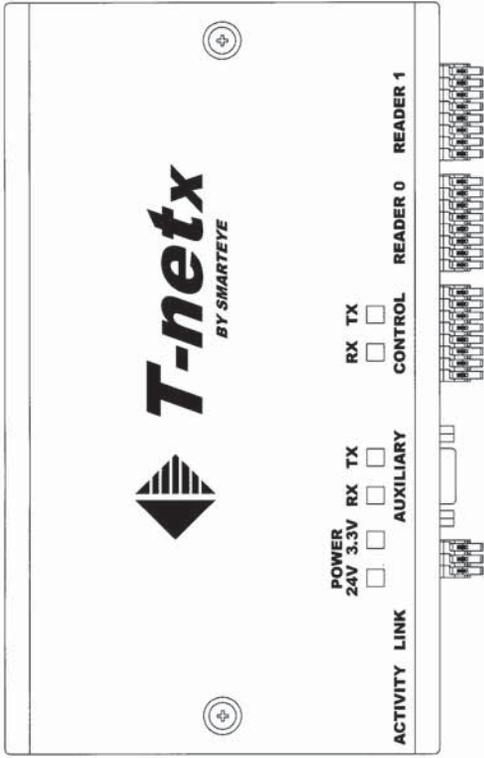

NOTE:
POWER SUPPLIED PER IEE 802.3af SPECIFICATION (48VDC NOMINAL)

DRAWN BY: RSA TITLE: SMARTEYE T-NETX - DIN RAIL MOUNT
 CHECKED BY: MOB
 ENGINEER: MOB (P.O.E. 802.3af - 48V)
 DATE: 04/28/09
 SHEET: 1 OF 1 - FIELD CONNECTION DETAILS
 SCALE: 1" = 1" DRAWING NO. SP4050/02-410
 SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	01/16/09	MOB
1	REVISED DIN RAIL MFG CLIP	01/13/09	MOB

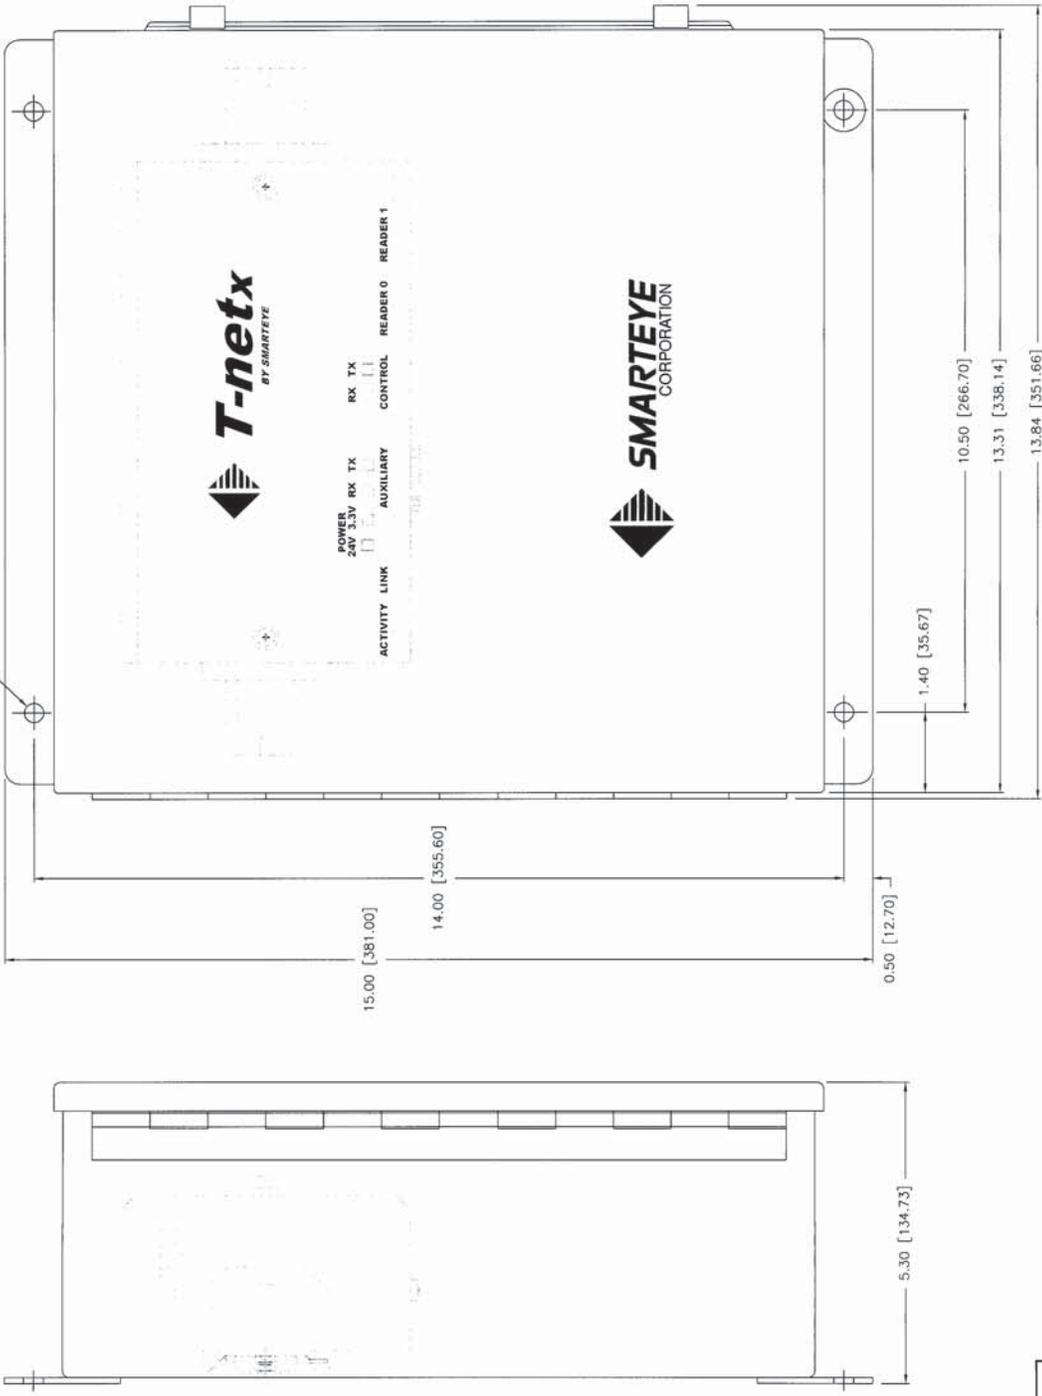


SMARTEYE CORPORATION
 2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48069
 PHONE (248) 853-4465 FAX (248) 853-8639

DRAWN BY:	RSA	TITLE:	SMARTEYE T-NETx - NEMA-12
CHECKED BY:	MOB	(AC P.O.E. - 24V)	
ENGINEER:	MOB	INSTALLATION DETAILS	
DATE:	01/13/09		
SHEET:	1 OF 1		
SCALE:	1" = 1"	DRAWING NO.	SP4051/01-420
SIZE:	D		


MATERIAL:
 FINISH:
 UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES ON DIMENSIONS
 2-DIMENSIONS ±.010
 3-DIMENSIONS ±.010
 ANGLES ±.2 DEGREES
 REMOVE ALL BURRS
 ALL RENDS ARE MINIMUM RADIUS

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	07/17/14	MOB

(RS-485) CONFIGURATION #1
POINT TO POINT

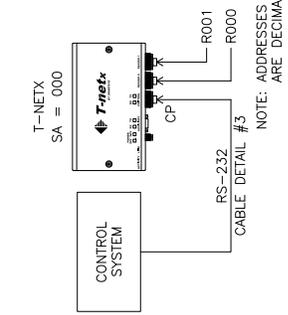


(RS-485) CONFIGURATION #2
MULTIDROP

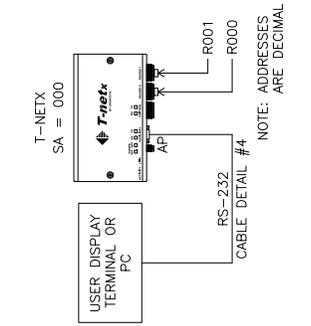

(RS-232) CONFIGURATION



AUXILIARY PORT CONFIGURATION

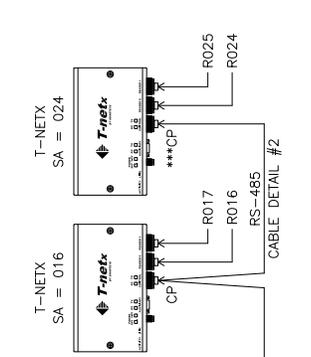

LEGEND


- ⊗ = PLUG-IN LEVER LOCK TERMINATION
- *** = INDICATES LINE TERMINATION INSTALLED
- NC = NO CONNECTION
- SA = STARTING ADDRESS OF MULTI-NETX OR T-NETX
- CP = CONTROL PORT
- AP = AUXILIARY PORT

NOTES:


1. MAXIMUM LENGTH OF RS-485 IS 4000'
2. MAXIMUM LENGTH OF RS-232 IS 50'
3. THE LAST T-NETX OR MULTI-NETX ON THE MULTIDROP LINE MUST HAVE LINE TERMINATION
4. IN THE MULTIDROP CONFIGURATION EACH T-NETX OR MULTI-NETX MUST HAVE A UNIQUE STARTING ADDRESS
5. SEE THE NETX USER MANUAL FOR ADDRESSING DETAILS

CABLE DETAILS


DETAIL (1)

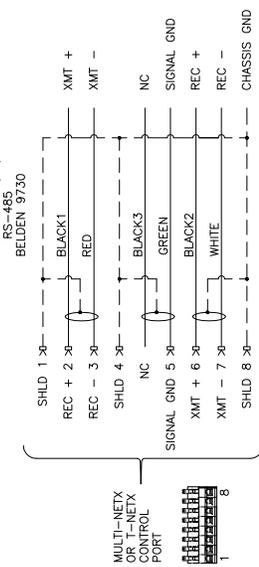


DETAIL (2)

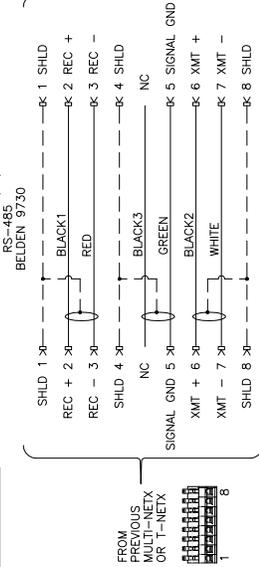

DETAIL (3)

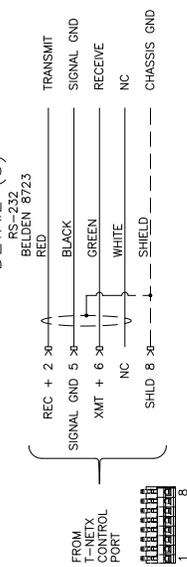

DETAIL (4)

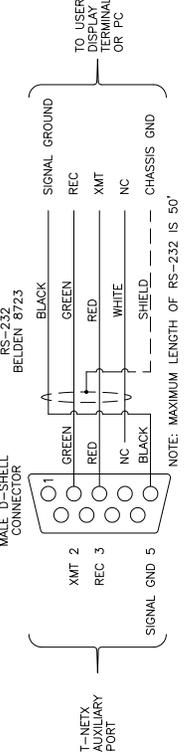

2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4495 FAX (248) 853-8539

DRAWN BY:	MOB	SMARTEYE T-NETX
CHECKED BY:	MOB	AUXILIARY COMMUNICATION PORT AND
ENGINEER:	07/17/14	COMMUNICATION PORT
SHEET	1 OF 1	WIRING DETAILS
SCALE:		NTS DRAWING NO.
SIZE:		SP-4150/01-411

Appendix C Multi-netx SP4060 Series Drawings

Sender/Receiver Cable Details – SP1054/01-424

This drawing shows the wiring details for a reader using a customer supplied junction box.

Multi-netx Installation Details – SP4060/01-420

This drawing shows the mounting dimensions of the Multi-netx.

Multi-netx Connection Wiring Details 24VDC– SP4060/01-410

This drawing shows the location and wiring details for the Ethernet and power connections.

Multi-netx NEMA-12 Installation Details 24VDC– SP4061/01-420

This drawing shows the mounting dimensions of the Multi-netx.

Multi-netx NEMA-12 Connection Wiring Details 24VDC– SP4061/01-410

This drawing shows the location and wiring details for the Ethernet and power connections.

Multi-netx NEMA-12 Installation Details 110/220VAC – SP4061/04-420

This drawing shows the mounting dimensions of the Multi-netx.

Multi-netx NEMA-12 Connection Wiring Details 110/220VAC – SP4061/04-410

This drawing shows the location and wiring details for the Ethernet and power connections.

Multi-netx Auxiliary and Communication Port Wiring Details – SP4060/01-411

This drawing shows the wiring details for the auxiliary and communication port for all Multi-netx models.

Multi-netx Upgrade Kit Installation Details – SP4062/02-201

This drawing shows the installation details for the Multi-netx upgrade kit.

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	01/12/10	RSA


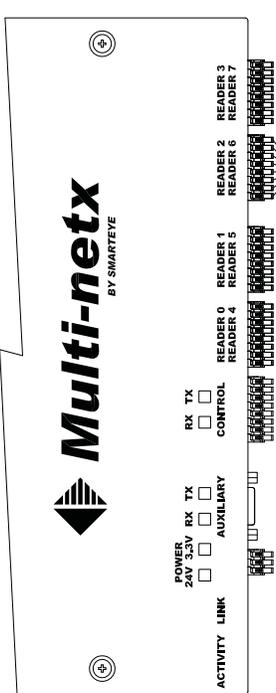



TABLE #1
CABLE TYPE AND Lrx MAX. DISTANCE

AWG	BELDEN#	DISTANCE FEET
18	9773	1500


Lrx (SEE TABLE #1)

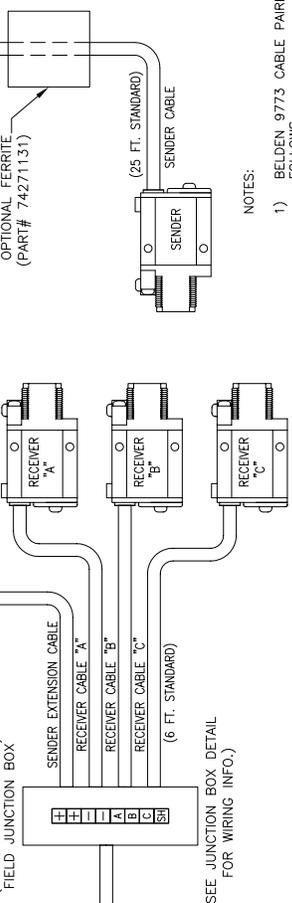


CABLE DETAILS

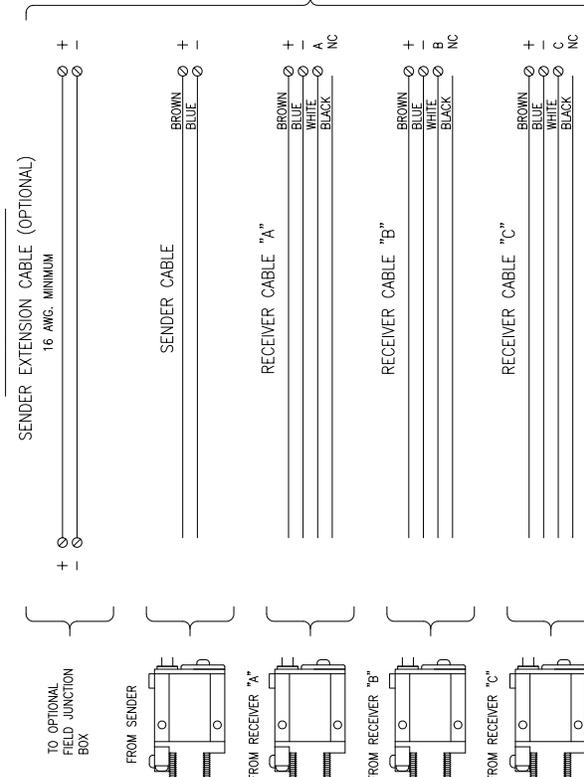

JUNCTION BOX DETAILS

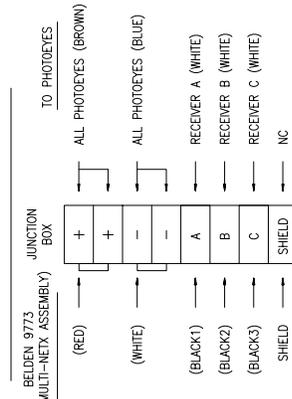


MULTI-NETX CONNECTION DETAILS

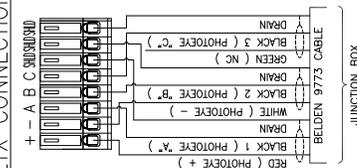

- LEGEND**
- ⊗ - SCREW TERMINATION
 - ⊐ - SPRING CLAMP TERMINATION
 - NC - NO CONNECTION

CABLE DETAILS

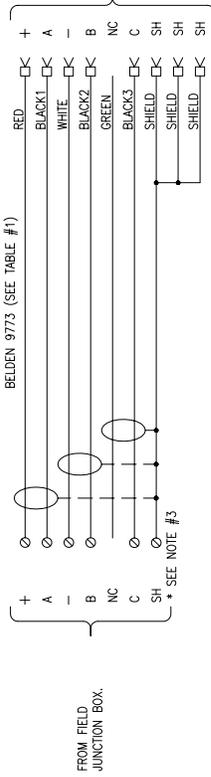


- NOTES:**
- 1) BELDEN 9773 CABLE PAIRED AS FOLLOWS:
BLACK 1 IS PAIRED WITH RED
BLACK 2 IS PAIRED WITH WHITE
BLACK 3 IS PAIRED WITH GREEN
 - 2) GREEN IS NOT USED (SEE CABLE DETAIL Lrx)
 - 3) THE SHIELD OF CABLE Lrx MUST BE CONNECTED AT ONE END ONLY. THE SH TERMINAL IN THE REMOTE JUNCTION BOX IS FOR LANDING THE SHIELD WIRE ONLY. IT IS NOT CONNECTED TO GROUND.
THE SHIELD OF CABLE Lrx NORMALLY CONNECTED TO 24V GROUND AT THE MULTI-NETX CIRCUIT BOARD VIA JUMPER J1-8. IN A NOISY ELECTRICAL ENVIRONMENT, IT MAY BE NECESSARY TO GROUND THE SHIELD AT THE REMOTE JUNCTION BOX. REFER TO THE "READER MOUNTING" SECTION OF THE USER MANUAL FOR DETAILS.

SMARTEYE CORPORATION
2637 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4495 FAX (248) 853-8539



DRAWN BY: RSA TITLE:
CHECKED BY: RSA SMARTEYE SENDER / RECEIVER
ENGINEER: MOB CABLE DETAILS FOR MULTI-NETX
DATE: 01/12/10 INSTALLATION
SHEET 1 OF 1
SCALE:
NTS DRAWING NO. SP1054/01-424
SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	06/02/09	MDB
1	ADDED MULTI-NETX MOUNTING AND REMOVAL INSTRUCTIONS	12/06/10	RSA
2	REVISED DIN RAIL CLIPS	02/12/12	MDB
3	REVISED DIN RAIL MTG CLIPS	01/17/17	<i>[Signature]</i>

MOUNTING MULTI-NETX ONTO DIN RAIL

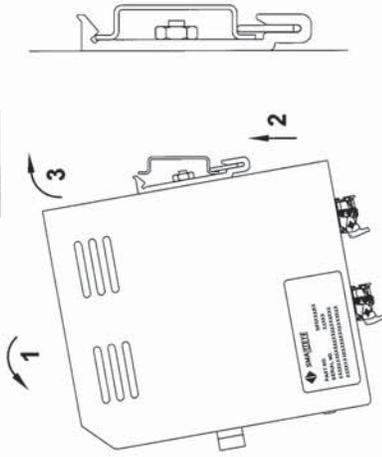

REMOVING MULTI-NETX FROM DIN RAIL

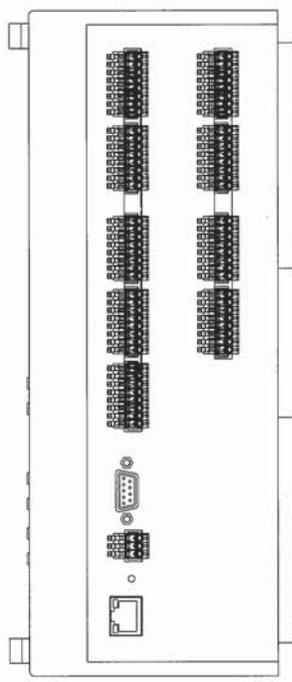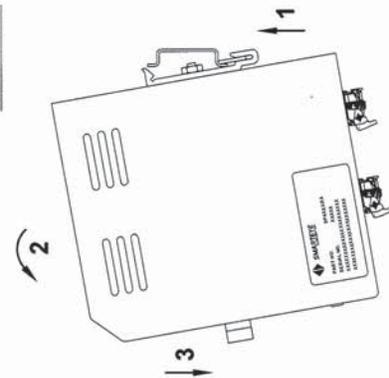


DRAWN BY:	RSA	TITLE:	SMARTEYE MULTI-NETX
CHECKED BY:	MDB	ENGINEER:	DIN RAIL MOUNT (24V)
DATE:	05/26/09	SHEET:	1 OF 1
		SCALE:	1" = 1"
		INSTALLATION DETAILS:	
		DRAWING NO.:	SP4060/01-420
		SIZE:	D

MATERIAL:
FINISH:
 UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES ON DIMENSIONS
 2-PLACES +/- .010
 3-PLACES +/- .005
 ANGLES +/- .7 DEGREES
 REMOVE ALL BURRS
 ALL BENDS ARE MINIMUM RADIUS

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	06/02/09	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/17/12	

Multi-netx

BY SMARTEYE

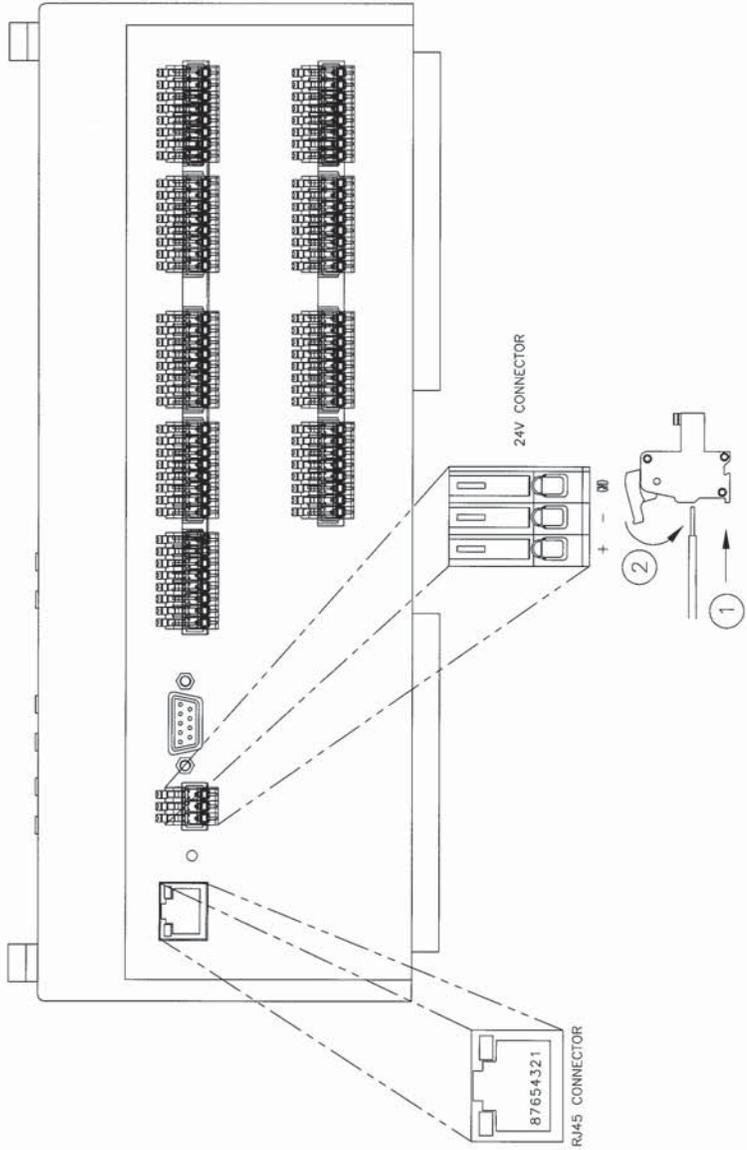

ETHERNET CONNECTION
 TIA568B
 PIN 1 - TX+
 PIN 2 - TX-
 PIN 3 - RX+
 PIN 4 -
 PIN 5 -
 PIN 6 - RX-
 PIN 7 -
 PIN 8 -


FROM FIELD

NOTE:
 PINS 4, 5, 7 & 8 NOT USED



DRAWN BY: RSA TITLE:
 CHECKED BY: MOB SMARTEYE MULTI-NETX
 ENGINEER: MOB DIN RAIL MOUNT (24V)
 DATE: 05/26/09
 SHEET 1 OF 1 - FIELD CONNECTION DETAILS
 SCALE: 1" = 1" DRAWING NO. SP4060/01-410
 SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	05/02/09	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/18/12	MOB


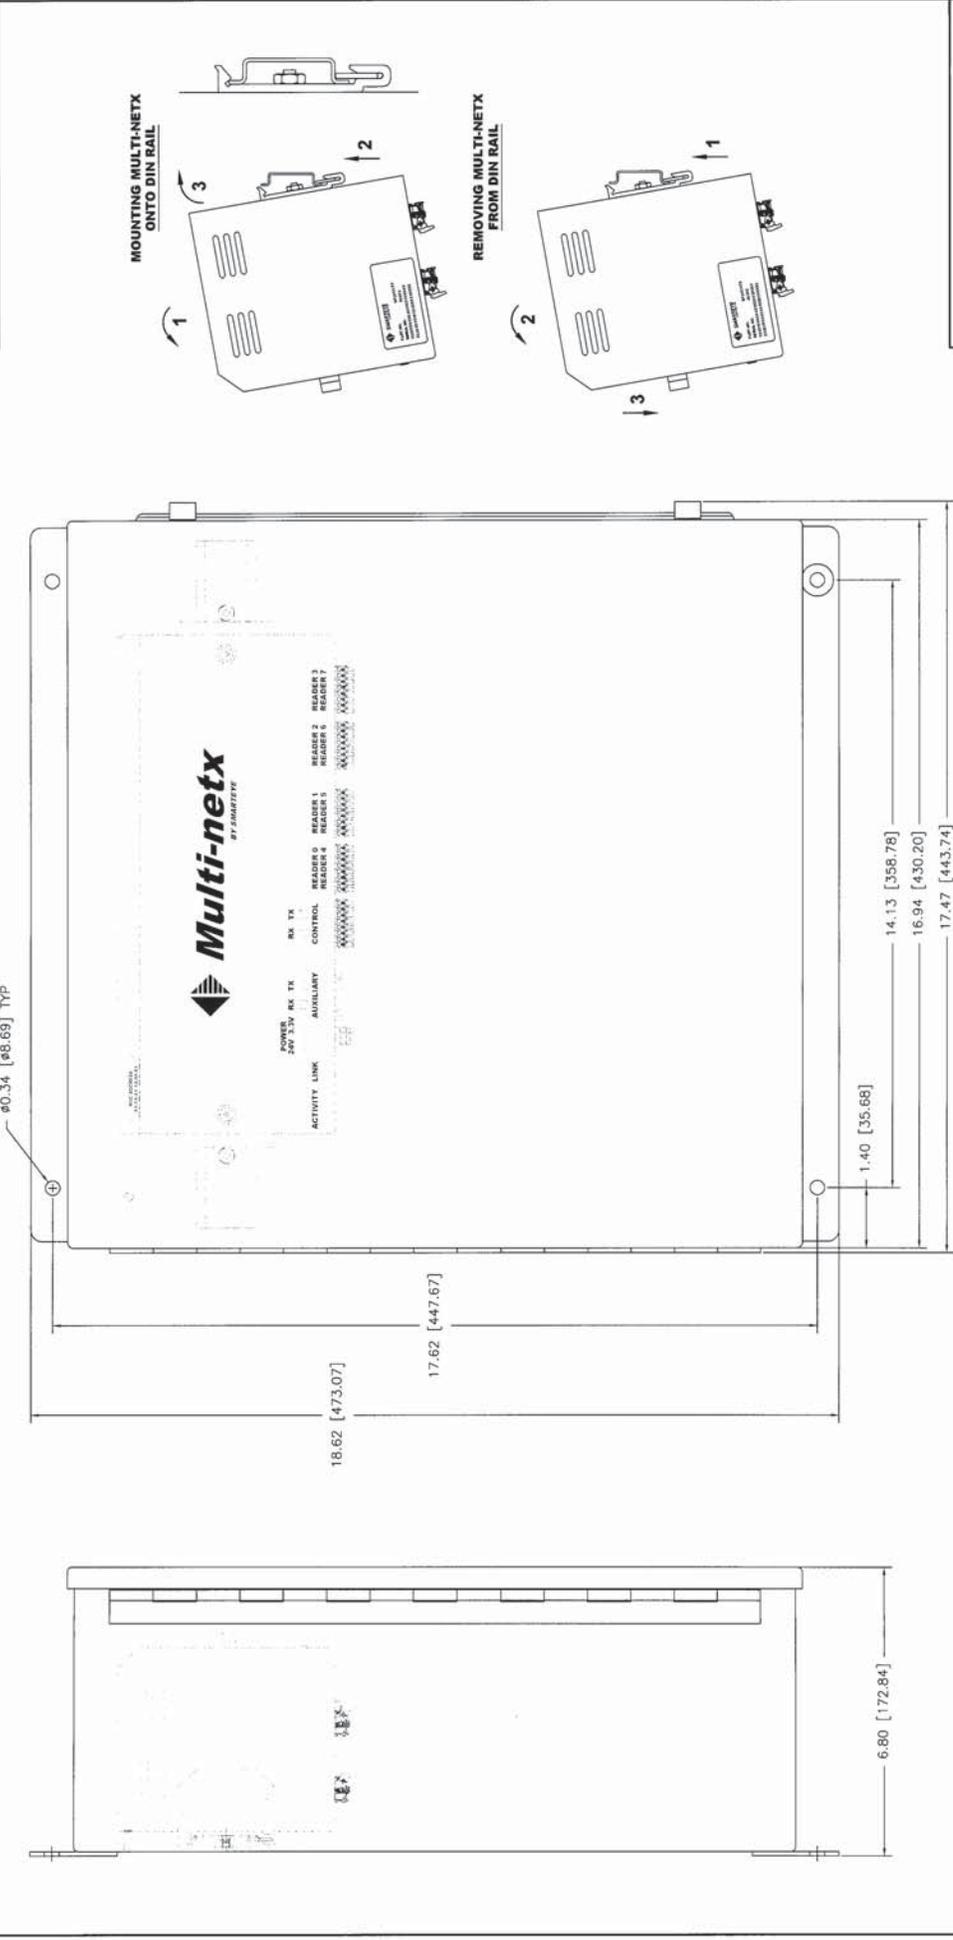


SMARTEYE CORPORATION
 2637 BOND STREET ROCHESTER, N.Y. 14626
 PHONE (716) 853-4485 FAX (716) 853-8539

DRAWN BY: MOB TITLE: MULTI-NETX
 CHECKED BY: MOB NEMA-12 (24V)
 ENGINEER: MOB
 DATE: 05/26/09
 SHEET 1 OF 1 - INSTALLATION DETAILS
 SCALE: 3/4" = 1" DRAWING NO. SF4061/01-420
 SIZE: D

MATERIAL:
FINISH:
 UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES ON DIMENSIONS
 2-PLACES $\pm .010$
 3-PLACES $\pm .005$
 ANGLES $\pm .2$ DEGREES
 REMOVE ALL BURRS
 ALL BENDS ARE MINIMUM RADIUS

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	06/02/09	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/18/17	MOB

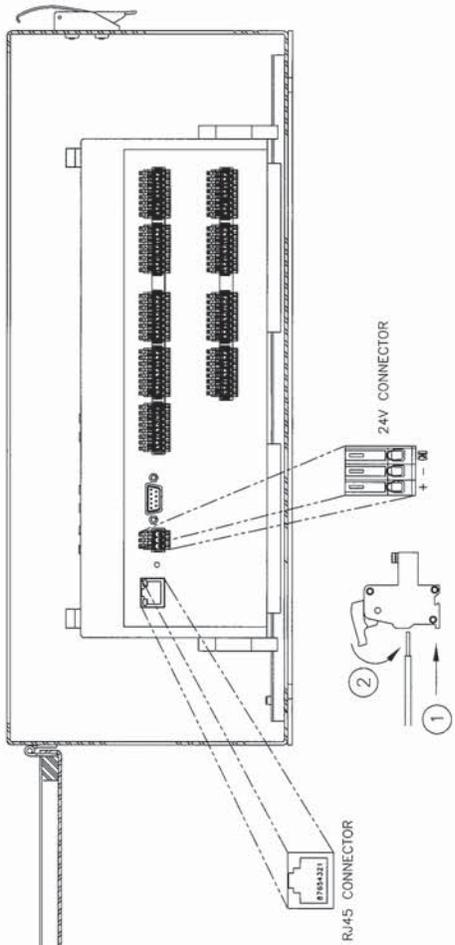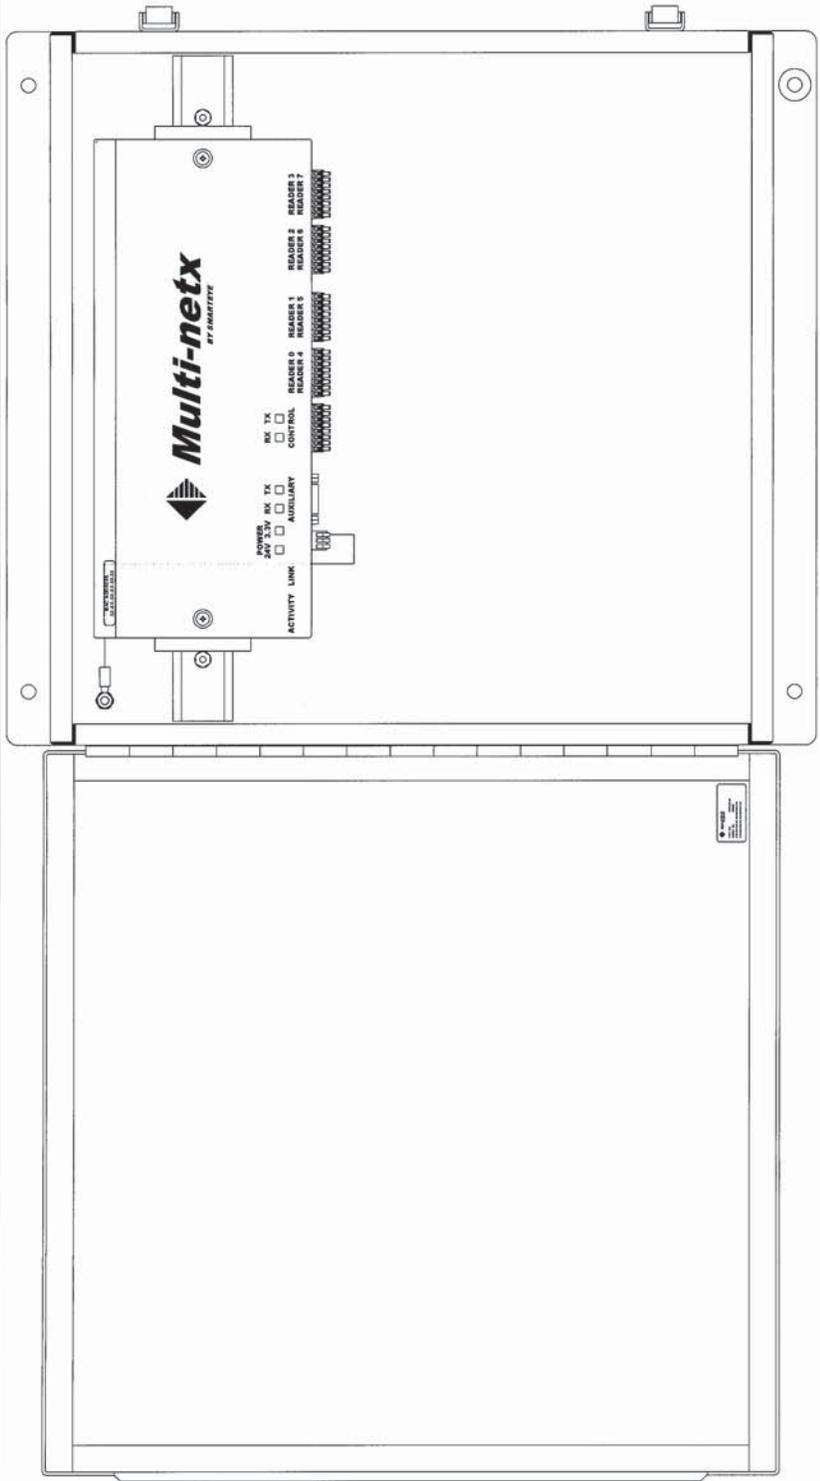

ETHERNET CONNECTION
TIA568B

PIN 1	- TX+
PIN 2	- TX-
PIN 3	- RX+
PIN 4	-
PIN 5	-
PIN 6	- RX-
PIN 7	-
PIN 8	-

FROM FIELD

NOTE:
PINS 4, 5, 7 & 8 NOT USED




MATERIAL:
FINISH:
UNLESS OTHERWISE SPECIFIED
ALL DIMENSIONS ARE IN INCHES
TOLERANCES ON DIMENSIONS
1-PLACES ±.005
2-PLACES ±.010
ANGLES 1/2 - 2 DEGREES
REMOVE ALL BURRS
ALL BENDS ARE MINIMUM RADIUS



2837 BOND STREET ROCHESTER N.Y. 14626-1400
PHONE: (716) 853-4485 FAX: (716) 853-8539

DRAWN BY: RSA TITLE: SMARTEYE MULTI-NETX
CHECKED BY: MOB
ENGINEER: MOB NEMA-12 (2AV)
DATE: 05/26/09
SHEET 1 OF 1 - FIELD CONNECTION DETAILS
SCALE: NTS DRAWING NO. SP-4061/01-410
SIZE: D

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	11/21/11	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/20/12	MOB

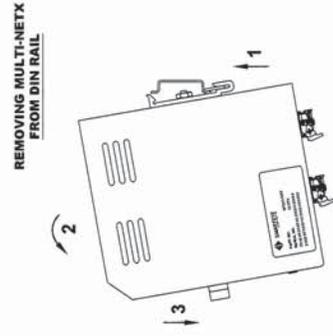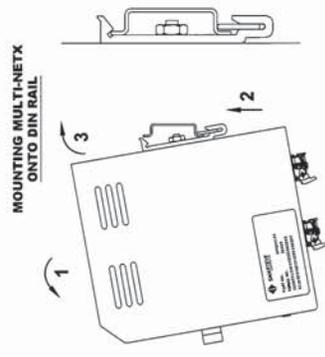
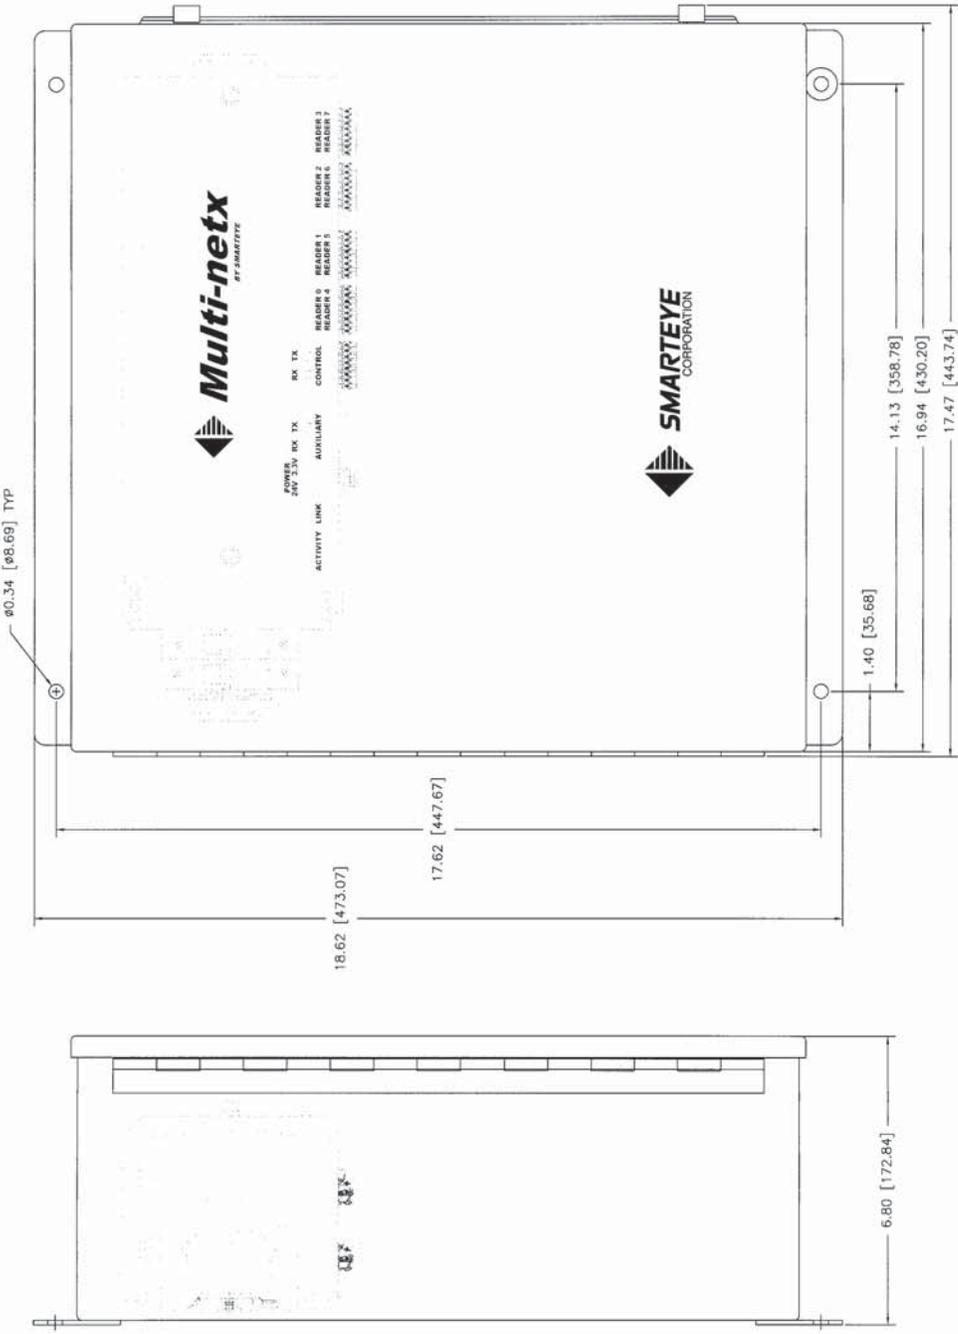


SMARTEYE CORPORATION
 2637 BOND STREET, ROCHESTER HILLS, MICHIGAN 48309
 PHONE (248) 853-1495 FAX (248) 853-8639

SMARTEYE CORPORATION
 TITLE: RSA
 DRAWN BY: MOB
 CHECKED BY: MOB
 ENGINEER: MOB
 DATE: 11/15/11
 SHEET: 1 OF 1
 SCALE: 3/4" = 1"
 DRAWING NO.: SP4-061/04-420

MATERIAL:
FINISH:
 UNLESS OTHERWISE SPECIFIED
 ALL DIMENSIONS ARE IN INCHES
 TOLERANCES ON DIMENSIONS
 UNLESS OTHERWISE SPECIFIED
 3-DIGIT ±.010
 2-DIGIT ±.020
 ANGLES 1/2 - 2 DEGREES
 REMOVE ALL BURRS
 ALL ROUNDS ARE MINIMUM RADII

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	11/21/11	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/20/17	MOB

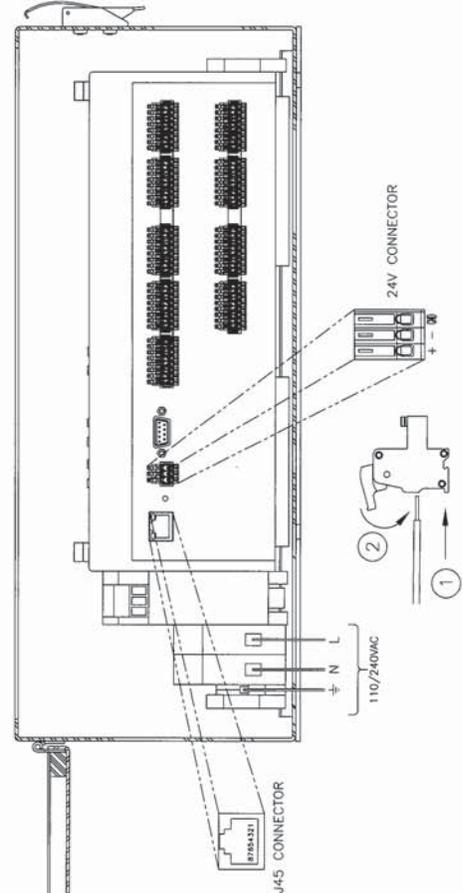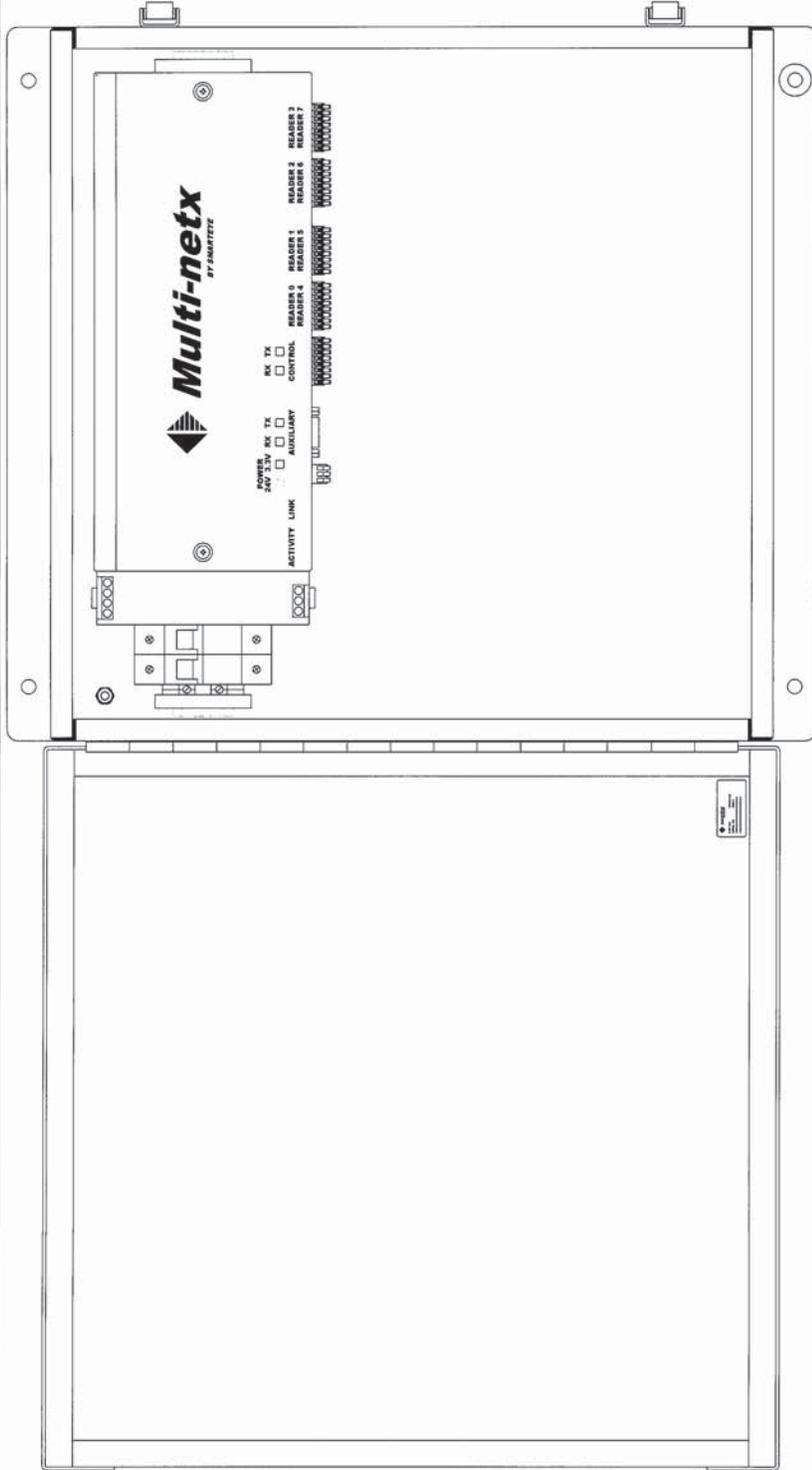

- ETHERNET CONNECTION
TIA568B
- PIN 1 - TX+
 - PIN 2 - TX-
 - PIN 3 - RX+
 - PIN 4 -
 - PIN 5 -
 - PIN 6 - RX-
 - PIN 7 -
 - PIN 8 -

FROM FIELD

NOTE:
PINS: 4, 5, 7 & 8 NOT USED

MATERIAL:
FINISH:
UNLESS OTHERWISE SPECIFIED
ALL DIMENSIONS ARE IN INCHES
TOLERANCES ON DIMENSIONS
DIMENSIONS IN PARENTHESES
3-PLACES +/- .005
ANGLES +/- 2 DEGREES
REMOVE ALL BURRS
ALL BENDS ARE MINIMUM RADIUS




SMARTEYE CORPORATION
2837 60th STREET ROCHESTER, N.Y. 14626
PHONE (248) 853-4488 FAX (248) 853-8539


DRAWN BY:	RSA	TITLE:	SMARTEYE MULTI-NETX
CHECKED BY:	MOB	ENGINEER:	NEMA-12 WERNER
DATE:	11/15/11	DATE:	11/15/11
SCALE:	1 OF 1	SHEET:	1 OF 1
SIZE:	D	DRAWING NO.:	SP4061/04-410

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	06/02/09	MOB
1	REVISED TO SHOW MULTIPLE COMMUNICATION CONFIGURATIONS	01/12/11	MOB
2	REVISED DETAIL (3) PINOUT	07/21/11	MOB


(RS-232) CONFIGURATION

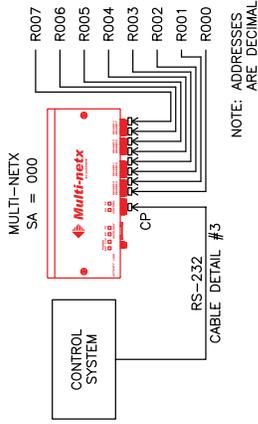


AUXILIARY PORT CONFIGURATION

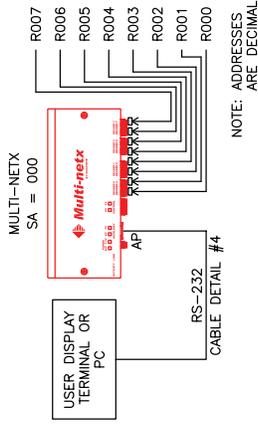

(RS-485) CONFIGURATION #1

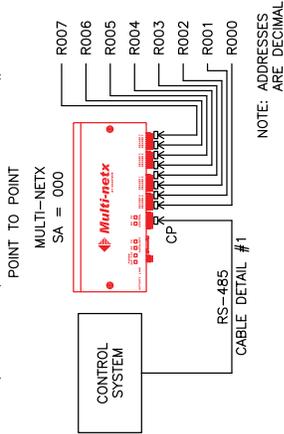

(RS-485) CONFIGURATION #2

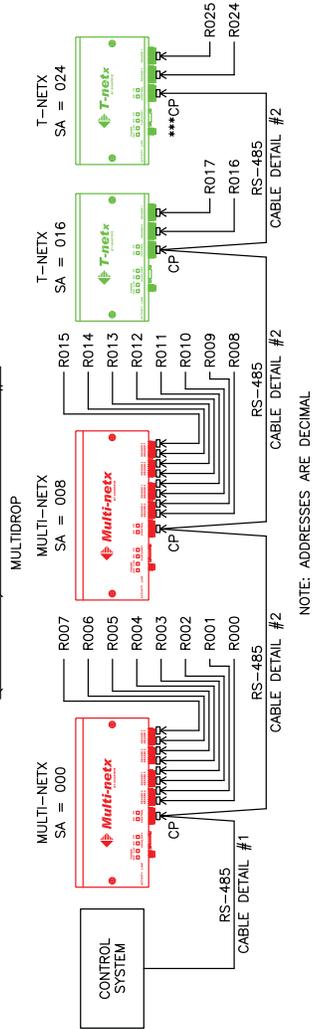

NOTE: ADDRESSES ARE DECIMAL

NOTES:

1. MAXIMUM LENGTH OF RS-485 IS 4000'
2. MAXIMUM LENGTH OF RS-232 IS 50'
3. THE LAST T-NETX OR MULTI-NETX ON THE MULTIDROP LINE MUST HAVE LINE TERMINATION
4. IN THE MULTIDROP CONFIGURATION EACH T-NETX OR MULTI-NETX MUST HAVE A UNIQUE STARTING ADDRESS
5. SEE THE NETX USER MANUAL FOR ADDRESSING DETAILS




2837 BOND STREET ROCHESTER HILLS, MICHIGAN 48309
PHONE (248) 853-4485 FAX (248) 853-8539


DRAWN BY:	MOB	SMARTEYE MULTI-NETX
CHECKED BY:	MOB	AUXILIARY COMMUNICATION PORT AND
ENGINEER:	MOB	COMMUNICATION PORT AND
DATE:	05/28/09	1 OF 1 WIRING DETAILS
SHEET:	1	NTS DRAWING NO. SP4060/01-411
SCALE:		SIZE: D

CABLE DETAILS


DETAIL (1)

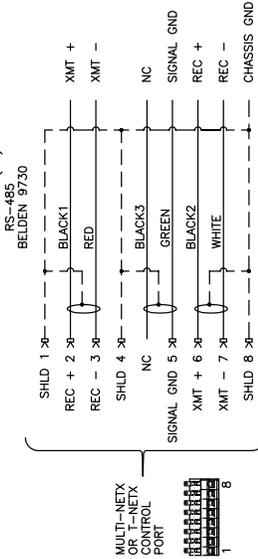


DETAIL (2)

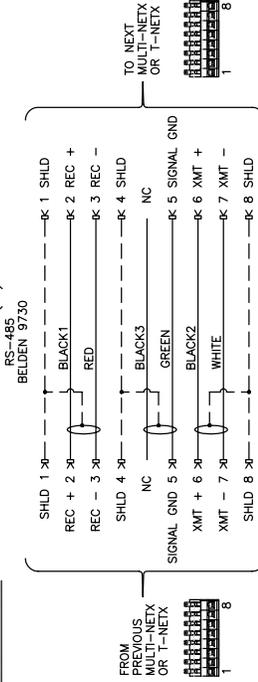

DETAIL (3)

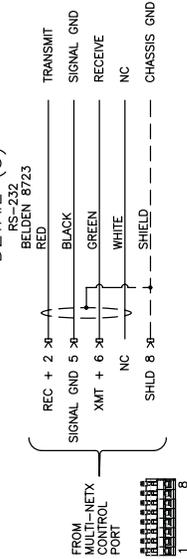


DETAIL (4)

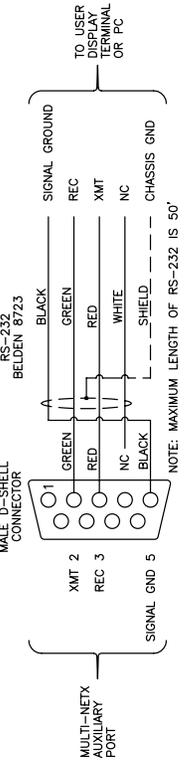

NOTE: MAXIMUM LENGTH OF RS-232 IS 50'

REV	DESCRIPTION	DATE	APPR. BY
0	INITIAL RELEASE	11/21/11	MOB
1	REVISED DIN RAIL CLIPS	02/21/12	MOB
2	REVISED DIN RAIL MTC CLIPS	01/20/12	

SMARTEYE MULTI-NETX
CONVERSION KIT
SP4062/01-200

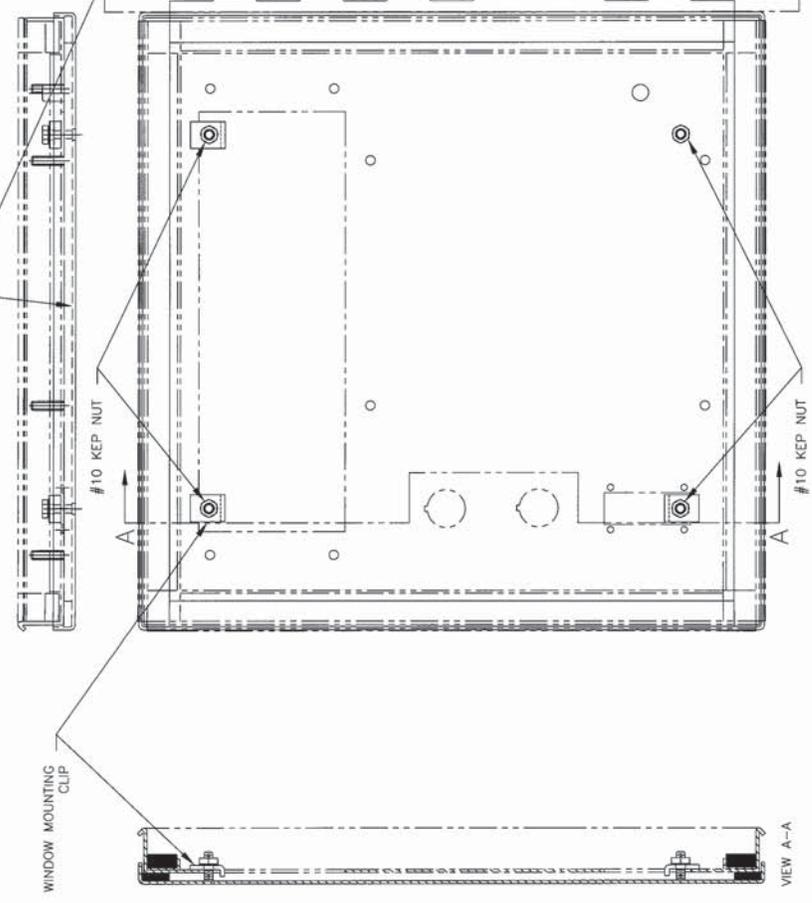


Multi-netx
BY SMARTEYE

- BK TX
- CONTROL
- READER 1
- READER 2
- READER 3
- AUXILIARY
- BK TX
- ACTIVITY LINK

ETHERNET CONNECTION
10/100/1000

PN 1 - TX+
PN 2 - TX-
PN 3 - RX+
PN 4 - RX-
PN 5 -
PN 6 -
PN 7 -
PN 8 -

NOTE:
PNS 4, 5, 7 & 8 NOT USED

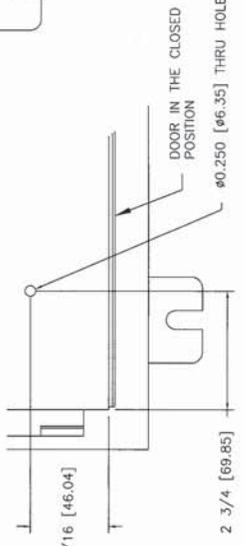

DETAIL#1


CONVERSION KIT INSTALLATION INSTRUCTIONS:

1. DISCONNECT AC POWER FROM EXISTING SEA UNIT.
2. DISCONNECT CONTROL PORT/READER WIRING FROM EXISTING SEA UNIT.
3. REMOVE ALL COMPONENTS FROM DOOR. SAVE WINDOW CLIPS!
4. REMOVE EXISTING SUBPLATE AND COMPONENTS. SAVE 3/8-16 KEP NUTS!
5. DRILL A 0.250 DIA HOLE IN DOOR AS NOTED IN DETAIL#1.
6. INSTALL CONVERSION KIT COVER AS SHOWN REUSING (3) ORIGINAL WINDOW MOUNTING CLIPS AND SUPPLIED (4) #10 KEP NUTS.
7. INSTALL CONVERSION KIT SUBPLATE, LOWERING LEFT SIDE FIRST.
8. RE-TERMINATE CONTROL PORT/READER WIRING TO NEW CONNECTORS AND RECONNECT CONTROL PORT/READER WIRING.
9. RECONNECT AC POWER.



2637 BOMB STREET BOCKFELTERS HILLS, WICHITA, KS 67209
PHONE (781) 853-4465 FAX (781) 853-8539

DRAWN BY:	RSA	TITLE:	SMARTEYE MULTI-NETX
CHECKED BY:	MOB	PROJECT:	UPGRADE KIT
ENGINEER:	MOB	INSTALLATION INSTRUCTIONS	
DATE:	11/15/11		
SHEET:	1 OF 1		
SCALE:	3/4" = 1"	DRAWING NO.:	SP-4062/02-201
SIZE:	D		

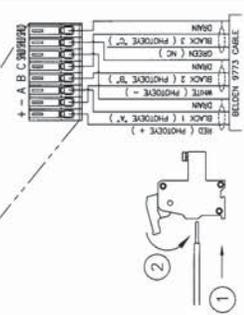



SMARTEYE
CORPORATION

www.smarteyecorporation.com
